



# SNACK TRACK

Schnellstartanleitung



# SNACK TRACK

2 Benutzerauswahl

1 In/ Out

3 LEDs

4 Scanner



## Liebe Kundin, lieber Kunde,

die Gebrauchsanweisung sorgfältig vor der Benutzung des Geräts durchlesen und für den weiteren Gebrauch aufbewahren. Das Gerät darf nur von Personen verwendet werden, die mit den Sicherheitsanweisungen vertraut sind.

## Sicherheitshinweise

- Um Gefährdungen zu vermeiden und um Sicherheitsbestimmungen einzuhalten, dürfen Reparaturen am Gerät und an der Anschlussleitung nicht selbstständig durchgeführt werden
- Vor jeder Reinigung muss der Netzstecker gezogen werden
- Das Gerät darf aus Gründen der elektrischen Sicherheit nicht mit Flüssigkeit behandelt werden oder darin eingetaucht werden
- Das Gerät ist nicht dafür bestimmt, mit einer externen Zeitschaltuhr oder einem separaten Fernwirkssystem betrieben zu werden
- Kinder dürfen nicht mit dem Gerät spielen
- Geräte die mit diesem Symbol gekennzeichnet sind, müssen getrennt vom Hausmüll entsorgt werden. Diese Geräte enthalten wertvolle Rohstoffe, die wiederverwertet werden können. Eine ordnungsgemäße Entsorgung schützt die Umwelt und die Gesundheit Ihrer Mitmenschen. Ihre Gemeindeverwaltung bzw. Ihr Fachhändler gibt Auskunft über die ordnungsgemäße Entsorgung.



## Inbetriebnahme

1. Stecken Sie den Netzstecker in eine Steckdose und bringen Sie das Gerät an einer magnetischen Oberfläche an
2. Wählen Sie mit dem Schalter (1) aus, welcher Benutzer aktiv ist
3. Wählen Sie mit dem Schalter (2) aus, ob die Produkte auf Vorrat gelegt werden oder ob diese aus dem Vorrat entnommen werden
4. Scannen Sie den Produktcode ein. Die grüne LED leuchtet auf
5. Sehen Sie online in Ihr Inventar ein, um feststellen zu können, welchen Vorrat Sie zu Hause haben

## Hinweise

1. **Aufleuchten der roten LED:** Fehler bei der Übermittlung der Daten. Überprüfen Sie die Internet Verbindung des Geräts.
2. **Nach Abscannen eines Barcodes leuchtet keine LED:** Starten Sie das System neu. Sollte der Fehler bestehen bleiben, wenden Sie sich an den Kundenservice.
3. **Der Scanner leuchtet nicht:** Entfernen Sie die Abdeckung des Gehäuses. Drücken Sie auf den Button des Scanners und scannen Sie den folgenden Barcode ab:



4. **Nach Abscannen eines Barcodes leuchtet die rote LED auf:** Es wurde kein gültiger Produktcode eingegeben. Wiederholen Sie den Vorgang mit einem gültigen Produktcode.

## Dear customer,

Please read the operating instructions carefully before using the appliance and keep them for future reference. The appliance may only be used by persons who are familiar with the safety instructions.

## Safety instructions

- In order to avoid hazards and to comply with safety regulations, repairs to the appliance and the connecting cable must not be carried out independently
- The mains plug must be disconnected before cleaning  
For reasons of electrical safety, the appliance must not be treated with or immersed in liquids
- The appliance is not intended to be operated with an external timer or a separate remote control system
- Children must not play with the appliance
- Appliances marked with this symbol must be disposed of separately from household waste. These appliances contain valuable raw materials that can be recycled. Proper disposal protects the environment and the health of your fellow human beings. Your local authority or specialist dealer can provide information on proper disposal.



Translated with DeepL.com  
(free version)

## Operation

1. Insert the mains plug into a socket and attach the device to a magnetic surface
2. Use the switch (1) to select which user is active
3. Use the switch (2) to select whether the products are to be placed in stock or removed from stock
4. Scan the product. The green LED lights up
5. Check your inventory online to see what stock you have at home

## Warning

1. **If the red LED lights up:** Error during data transmission. Check the device's Internet connection.
2. **No LED lights up after scanning a barcode:** Restart the system. If the error persists, contact customer service.
3. **The scanner does not light up:** Remove the cover of the housing. Press the scanner button and scan the following barcode:



4. **After scanning a barcode, the red LED lights up:** No valid barcode has been entered. Repeat the process with a valid barcode.

©Snack Track

## **Entwicklungsprojekt**

Medieninformatik

Technische Hochschule Köln

Sebastian Fuhrmann

Angelina Maurer

**Technology**  
**Arts Sciences**  
**TH Köln**