

PERFORMER

USB



MIDI IN

MIDI OUT

CLK IN

RST IN

CLK OUT

RST OUT

CV1 IN

CV2 IN

CV3 IN

CV4 IN

GATE1

CV1

GATE2

CV2

GATE3

CV3

GATE4

CV4

GATE5

CV5

GATE6

CV6



GATE7

CV7

GATE8

CV8

 MICRO SD

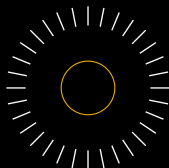

F1

F2

F3

F4

F5

PLAY
REC

TEMP
CLOCK

PATT

PERF

PREV

NEXT

SHIFT

PAGE

T1
PROJECT

T2
LAYOUT

T3
ROUTING

T4
MIDIOUT

T5
U.SCALE

T6

T7
SYSTEM

T8

S1
STEPS

S2
SEQ

S3
TRACK

S4
SONG

S5

S6

S7
MONITOR

S8

S9
FIRST

S10
LAST

S11
MODE

S12
DIVISOR

S13
RESET

S14
SCALE

S15
ROOT

S16

westlicht