



To download and install Lascar's EL-WIN-RT software take the following steps:

1. Click the 'Begin Software Download' link.
2. When prompted about whether you wish to open or save the file choose 'Save'
3. Select a location to save the zip file to and click 'Save'
4. When the download is complete, open the downloaded zip file by double-clicking.
5. Double-click 'EL-USB-RT.exe' to begin installation.
6. This will open the 'EasyLog USB – InstallShield Wizard'. Click 'Next'.
7. Please read the license agreement, to continue with the installation choose 'I accept the terms in the license agreement' and then click 'Next'.
8. Next click 'Install' to begin installation.
9. Click 'Finish' to exit the application install wizard.
10. You are now ready to begin using you Lascar EL-USB-RT!

