



# ELD Malfunction Manual

# Troubleshooting ELD Connectivity Issues: A Quick Guide"

---

## How to Fix Common ELD Malfunctions

1. Delete all other ELD applications from tablet
  2. Turn the engine off and reconnect the device
  3. The ELD indicator should be blinking
  4. If the ELD is not found, restart the tablet's Bluetooth and reconnect the ELD, then try again to connect
- 

## If your tablet screen does not lock while driving

1. Stop the Vehicle
2. Log out from the app
3. Restart your device
4. Login again to the app
4. Reconnect the ELD

**\*\* Failing to stop the vehicle and assure proper functioning of the ELD device and application will constitute a DOT violation**

# FMCSA Required: Keep this cab card in your vehicle at all times!

If you have any questions, you can call ELog AI at  
[\(833\) 888 8353](tel:(833)8888353) or send an email to  
[support@elogai.com](mailto:support@elogai.com)