

# Interface an Ultrasonic Sensor

## How HC-SR04 Works

The HC-SR04 uses ultrasonic sound waves to measure distance:

1. **Trig pin** sends a short pulse (ultrasound).
2. The sound bounces back after hitting an object.
3. **Echo pin** receives the returning sound.
4. The time taken between sending and receiving is used to calculate distance.