

CONTROL PANEL

SAFETY

DIAGRAMS

INSTALLATION


FILTERS

CARE

TROUBLESHOOTING

PURCHASE INFO

CONTROL PANEL BUTTONS

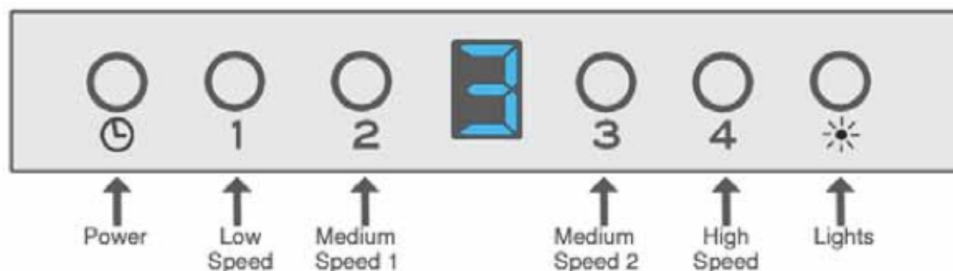

Power: Powers ON/OFF the range hood and activate power-off delay timer. To adjust the power-off timer:

- ◆ Turn on the hood at any speed
- ◆ Press the Power-Off Delay button to enter timer mode
- ◆ a “3” will flash in the display
- ◆ Power-off to begin countdown.
- ◆ When the timer reaches zero, the blower will turn off (approximately 3 minutes if “3” is flashing)

Blower Speed Buttons: Indicates current blower (motor) speed. To adjust:

- ◆ Press the button of the desired speed. The lowest level is the quietest, the highest level is the most powerful.
- ◆ Low Speed: light frying/boiling
- ◆ Medium Speed: frying, light wok cooking, heavy boiling
- ◆ High Speed: grilling, intensive frying, and wok cooking

Lights: Turns ON/OFF halogen lights. Press once to turn on, and again to turn off.