



USER MANUAL
MODEL #: BLZ-HOOD

TABLE OF CONTENTS



1	<i>Safety Notice</i>	III-V
2	<i>Diagrams</i>	1-3
	Hood Dimensions	1
	Control Panel	2
	Clearance	3
3	<i>Installation</i>	4-9
	Instructions	4
	Venting Options	5
	Hood Installation	6-7
4	<i>Care & Cleaning</i>	8-9
5	<i>Troubleshooting</i>	10
6	<i>Warranty Information</i>	11
	Warranty	11

UPON RECEIPT OF YOUR HOOD:

- 1) Inspect your hood for any damage in shipping
- 2) Plug in and test controls (lights, fan) before insalling.
- 3) Call your dealer immediately to report any damage

Please note: you must report any damage directly to your dealer immediately upon receipt to address any issues.



IMPORTANT SAFETY NOTICE

Installer: Leave this guide with the homeowner.

Consumer: Keep this guide for future reference.

The Important Safety Notice and warnings in this manual are not meant to cover all possible problems and situations that can occur. Use common sense and caution when installing, maintaining or operating this or any other appliance.

Always contact your dealer with any problems or situations that you do not understand.

SAFETY SYMBOLS AND LABELS



DANGER

To avoid the possibility of explosion or fire, do not store or use combustible, flammable or explosive vapors and liquids (such as gasoline) inside or in the vicinity of this or any other appliance. Keep items that could explode (such as aerosol cans) away from cooktop burners, ovens and range hoods. Do not store flammable or explosive materials in adjacent cabinets or surrounding areas.



WARNING

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Use this unit only in the manner intended by the manufacturer. If you have questions, contact your dealer. Before servicing or cleaning your hood, turn the power off.

GENERAL SAFETY PRECAUTIONS:

To reduce the risk of fire, electric shock, serious injury or death when using your range hood, follow basic safety precautions, including the following:



IMPORTANT SAFETY NOTICE



WARNING

- ◆ If you receive a damaged product, immediately contact your dealer. Do not install or use a damaged hood.
- ◆ Do not install, repair or replace any part of the range hood unless specifically recommended in the literature accompanying it.
- ◆ Use the range hood only for its intended purpose as outlined in this manual. DO NOT use this range hood to vent hazardous or explosive materials or vapors.
- ◆ Do not tamper with the controls.
- ◆ Never allow the filters to become blocked or clogged. Do not allow foreign objects, such as cigarettes or napkins, to be sucked into the hood.
- ◆ If the cooktop and range hood are near a window, use an appropriate window treatment. Avoid long drapes or other window coverings that could blow over the cooktop and hood, resulting in a fire hazard.
- ◆ Always run the blower(s) while the cooktop is operating.
- ◆ Do not leave children or pets alone or unattended in the area while the cooktop and range hood are in use.
- ◆ The minimum vertical distance between the cooking surface and the exterior part of the hood must be no less than 36". The vertical distance may be longer for the range or cooktop being used.

To reduce the risk of a range top grease fire:

1. Never leave surface units unattended at high settings. Boil-overs cause smoking and greasy spills that may ignite. Heat oils slowly on low or medium settings.
2. Always turn hood ON when cooking at high heat
3. Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.

To reduce the risk of injury to person in the event of a range top grease fire:

4. SMOTHER FLAMES with a close-fitting lid, cookie sheet or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT.
5. NEVER PICK UP A FLAMING PAN - you may be burned.
6. DO NOT USE WATER, including wet dish clothes or towels - a violent steam explosion may result.

SAFETY

DIAGRAMS

INSTALLATION

FILTERS

CARE

TROUBLESHOOTING

BLAZE BBQ HOOD

SAFETY

 
 
DIAGRAMS

INSTALLATION


FILTERS

CARE

TROUBLESHOOTING

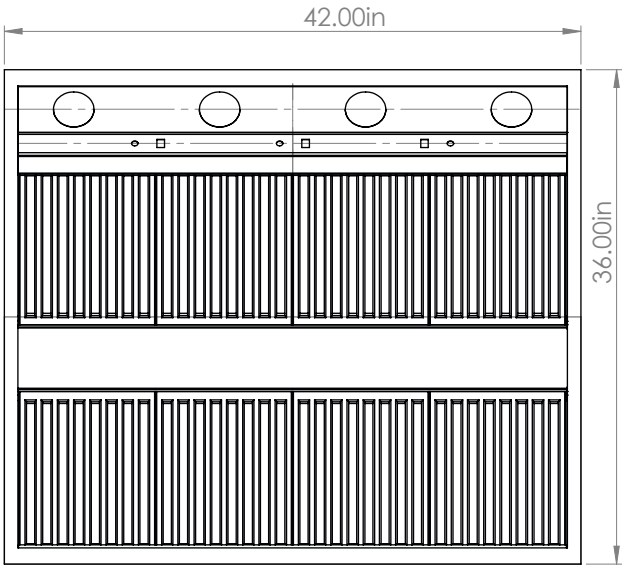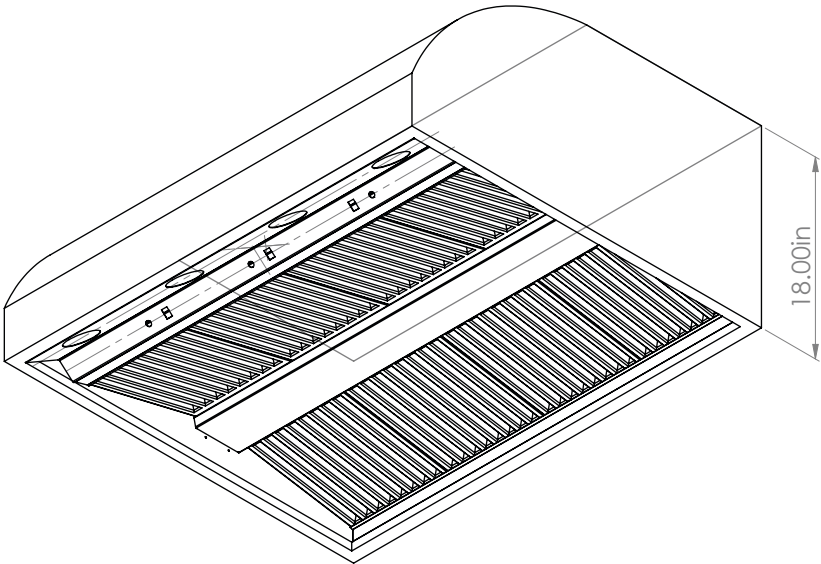

CONTROL PANEL

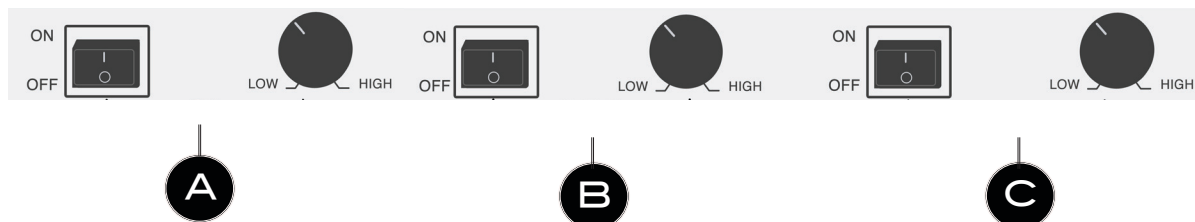 

A) LEFT FAN:

To turn on the fan, flip the switch on the left. Press up (I) to power on, and down (o) to power off.

To adjust the intensity of the fan, use the knob on the right. Turn the knob counterclockwise for the lowest fan speed and quietest output. Turn the knob clockwise for the highest, most powerful speed.

B) LIGHTS:

To turn on lights, flip the switch on the left. Press up (I) to power on, and down (o) to power off.

To adjust the brightness of the lights, use the knob on the right. Turning the knob counterclockwise will dim the lights. Turning the knob clockwise will brighten the lights.

C) RIGHT FAN:

To turn on the fan, flip the switch on the left. Press up (I) to power on, and down (o) to power off.

To adjust the intensity of the fan, use the knob on the right. Turn the knob counterclockwise for the lowest fan speed and quietest output. Turn the knob clockwise for the highest, most powerful speed.

CLEARANCE DIMENSIONS

SAFETY

 
DIAGRAMS

INSTALLATION

FILTERS

CARE

TROUBLESHOOTING

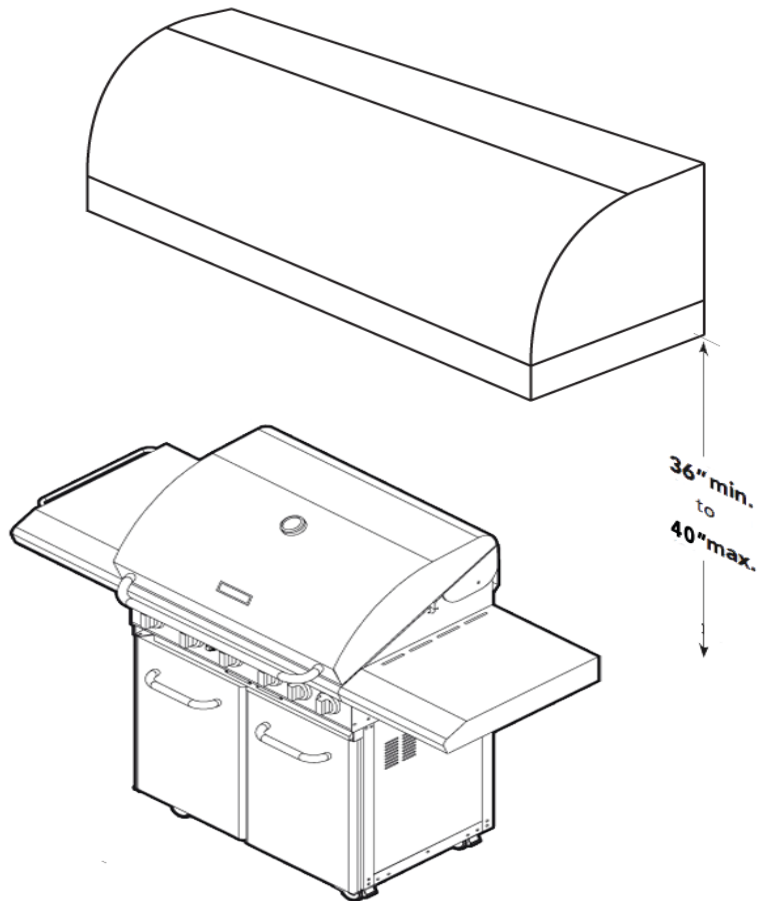

INSTRUCTIONS



WARNING

It is important to install the hood at the proper mounting height. Hoods mounted too low could result in heat damage and fire hazard. Hoods mounted too high will be hard to reach and will lose performance and efficiency.

For best operation, we recommend you:

- ♦ allow 36-40” between the top of your cooking surface and the bottom of hood
- ♦ vent vertically through the roof if possible
- ♦ vent through a side wall if you cannot vent directly above your range hood
- ♦ use as few elbows in the venting as possible, with no more than three 90° elbows.
- ♦ make sure there is at least 24” of straight vent between any elbows
- ♦ use silver or duct tape to seal all joints in the vent system
- ♦ use caulking to seal exterior openings around the cap
- ♦ always use metal or aluminum ducts for maximum airflow
- ♦ always keep the duct clean to ensure proper airflow



DO NOT:

- ♦ terminate the vent system into an attic or other enclosed area
- ♦ use 4” (10.2 cm) laundry-type wall caps
- ♦ use plastic venting

Note: This model comes with two 8” outlets. You can vent straight up with both, or you may combine them into a 10” or 12” pipe. Do not combine into one 8” outlet. We recommend you use hard pipe and vent straight up 12-18” with two 8” outlets before combining into the 10” or 12” pipe. It is also recommended to have a roof cap with a damper and screen.

VENTING OPTIONS

SAFETY

DIAGRAMS

INSTALLATION


FILTERS

CARE


TROUBLESHOOTING

HORIZONTAL WALL VENTING

 
Option 1

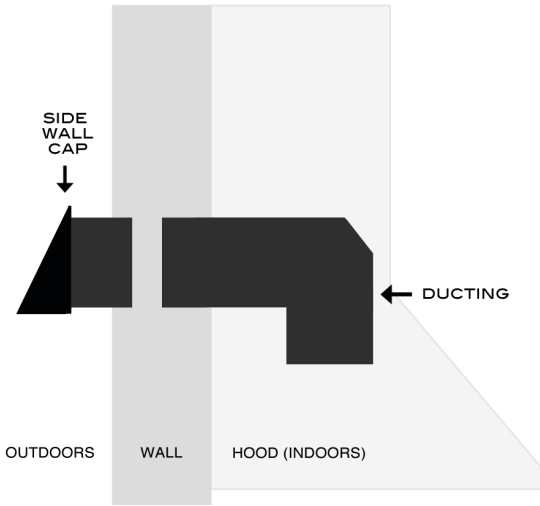

Option 2

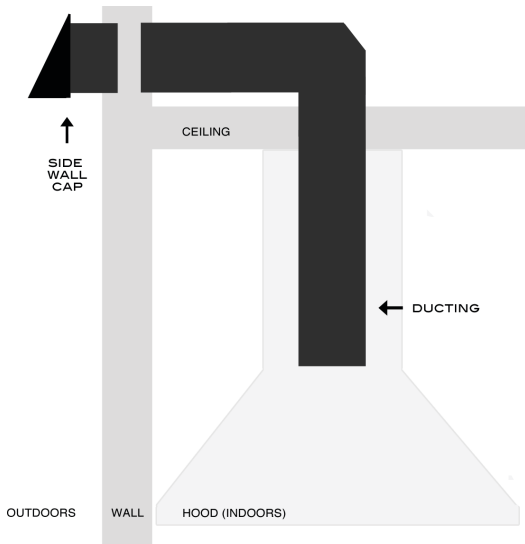 

VERTICAL ROOF VENTING

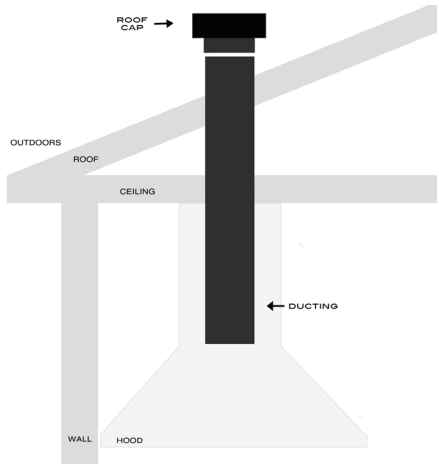 

Note: If combining the two 8” outlets into one pipe, please wait 12-18” before combining. It is also recommended to combine the two outlets into one 12” pipe for optimum performance.

WALL HOOD INSTALLATION

 
PREPARATION

Plan where the ductwork will be located. Install proper-sized duct work, and roof or wall cap, depending on where you will be venting your hood. Recommended and most common installations are shown in the venting diagrams on the previous page. Adjust your measurements to accomodate heights of ceilings, cabinets, or rangetops.

STEP 1

Secure hood to wall stud using screws. If necessary, use additional mounting screws and wall anchors. If your stud does not line up with the provided screw holes, you may drill into the stainless steel.

Note: These are suggested mounting points only. Find the stud closest to these mounting points, and create new holes in the hood there.

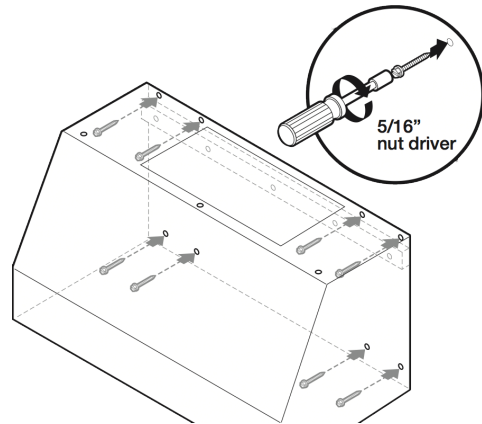


INSTALLATION TIP:

Use the mounting bracket (pictured below) to help secure the hood to the wall.



--OPTIONAL--

 If not using a duct cover, using screws, make sure top mounting screws are secured into soffit or cabinet framing use additional mounting screws, if necessary.

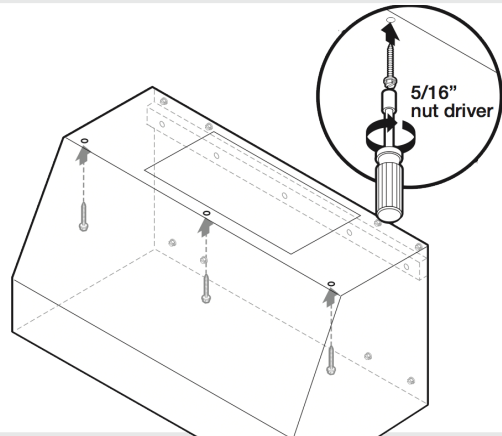

WALL HOOD INSTALLATION

SAFETY

DIAGRAMS

INSTALLATION

 
FILTERS

CARE

TROUBLESHOOTING

STEP 2

Slide filter front over front lip. Push filter rear up, then slide back over rear lip. Repeat this step for all filters on the front and back of the hood.

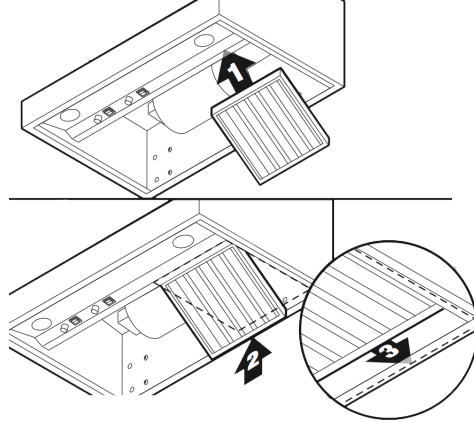

Electrical Requirements - Hood comes with 4 foot cord, and will plug into a 110V outlet which should be wired to a 15 AMP breaker.

CARE & CLEANING



WARNING

- ◆ Never put your hand into the area housing the fan while the fan is operating
- ◆ Turn off power to the hood before cleaning
- ◆ Make sure your cooktop and hood are cool before cleaning
- ◆ Use only the types of cleaning solutions mentioned in this manual
- ◆ Completely dry the filter(s) immediately after cleaning

CLEANING EXTERIOR SURFACES

- ◆ Regular care will help preserve the appearance of your range hood.
- ◆ Always wipe stainless steel surfaces with the grain to avoid scratches
- ◆ Clean periodically with hot soapy water and clean cotton cloth.
- ◆ For heavier soil, use a liquid degreaser such as 409™ or Fantastic™.
- ◆ If hood looks splotchy, use a stainless steel cleaner on the surface. Promptly and gently remove cleaner with a soft towel or wipe.
- ◆ After cleaning, you may use non-abrasive stainless steel polish (such as 3m™ or ZEP™) to buff out stainless luster. Always scrub lightly and with a clean cotton cloth.



DO NOT:

- ◆ Use corrosive or abrasive detergent (eg, Comet Power Scrub™ or EZ-Off™ oven cleaner).
- ◆ Use steel wool or scouring pads, which will scratch and damage the stainless steel surface.
- ◆ Leak cleaning solution onto or into the control panel
- ◆ Allow deposits to accumulate or remain on the hood
- ◆ Allow salt solutions, disinfectants, bleaches, or cleaning compounds to remain in contact with the stainless steel for extended periods.

CLEANING BAFFLE FILTERS

All BLAZE BBQ hoods come with stainless steel baffle filters. They should be inspected for grease accumulation periodically. The baffle filters can be washed in a dishwasher or in a sink with hot, soapy water. Simple periodic cleaning will ensure maximum filter effectiveness.

SAFETY

DIAGRAMS

INSTALLATION

FILTERS

CARE

TROUBLESHOOTING

PURCHASE INFO

CARE & CLEANING

SAFETY

DIAGRAMS

 
INSTALLATION

FILTERS

CARE


TROUBLESHOOTING

STEP 1

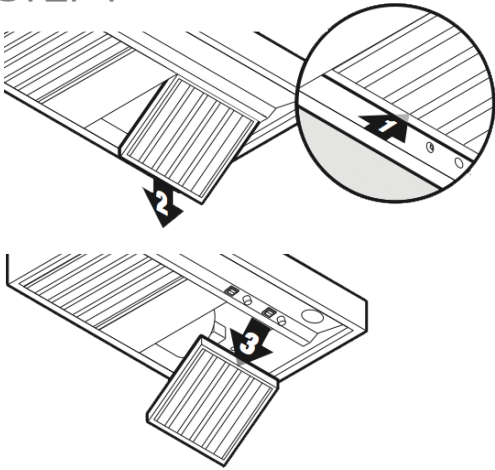

Slide filter forward off of rear lip. Lower filter rear, then slide filter front out. Repeat this step for all filters on the front and back of the hood.

 STEP 2

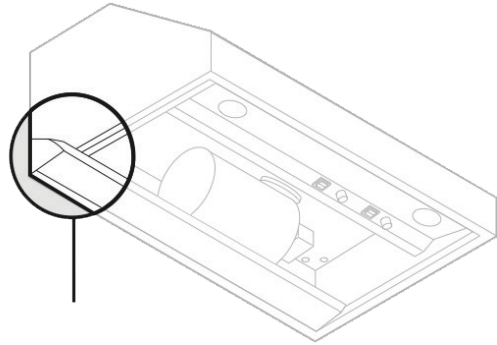

When cleaning filters, always remove the grease channels and clean with hot soapy water. Both the filters and the channels are dishwasher safe. Dry thoroughly before re-installing.

TROUBLESHOOTING

NOTHING WORKS (Control Panel not responding, Blower not working)

Solution 1: Turn on power at circuit breaker panel or fuse box. Check for tripped breaker or blown fuse.

Solution 2: Make sure hood power cable is plugged in and powered.

LIGHTS NOT TURNING ON

Solution 1: see “nothing works”

Solution 2: Swap out lights to determine if bulbs are defective.

RANGE HOOD VIBRATES WHEN BLOWER IS ON

Solution: Make sure the range hood has been secured properly to the ceiling or wall.

BLOWER SYSTEM SEEMS WEAK

Solution 1: Increase the fan speed, ensure that it is at a high enough setting.

Solution 2: Make sure the ducting is sized correctly. Range hood will not function efficiently with insufficient duct size (IE, 9” duct over 8” hole)

Solution 3: Check to see if duct is clogged or if damper unit (half-circular flapper) is installed incorrectly. A tight mesh on a side wall cap unit might also cause restriction to the air flow.

AIR NOT VENTING OUT PROPERLY

Solution 1: Make sure there is at least 36” between the top of the cooking surface and the bottom of the hood

Solution 2: Reduce the number of elbows and length of duct work. Check to ensure all joints are properly connected, sealed, and taped.

Solution 3: Make sure power is on high speed for heavy cooking.

SAFETY

DIAGRAMS

INSTALLATION

FILTERS

CARE

TRUBLESHOOTING

WARRANTY

SAFETY

One Year Warranty - Parts Only

For one year from the date of original purchase, we will repair or replace any non-consumable parts or components that failed due to manufacturing defects.

DIAGRAMS

What is NOT Covered:

- ◆ Consumable parts such as light bulbs and filters (stainless, aluminum, or charcoal)
- ◆ Damage due to natural wear, improper maintenance, or use of abrasive cleaning products
- ◆ Chips, dents, or cracks due to abuse, misuse, or improper installation
- ◆ Damage caused by accident, fire, floods, or natural disaster

INSTALLATION

FILTERS

CARE

TROUBLESHOOTING



7655 Airline Highway Baton Rouge, LA 70814 · 1-866-976-9510 · <http://www.blazegrills.com/>

