



Installation:

- Raise vehicle allowing the axle to hang freely.
- Remove existing bump stop cup.
- Install the new bump stop cup on the tube with a bolt.
- Use soapy water and position the bump stops into cup. Push and twist simultaneously.
- Ensure bump stop is properly seated in cup.
- Lower vehicle.