


How to import library file in microwind software?


STEP 1: Copy the two files **DRC_TS18SL_SCL_CALIBRE** and **DRC.header** in your system.

STEP 2: Right click on DRC_TS18SL_SCL_CALIBRE file and click properties.


STEP 3: copy the path (Location).

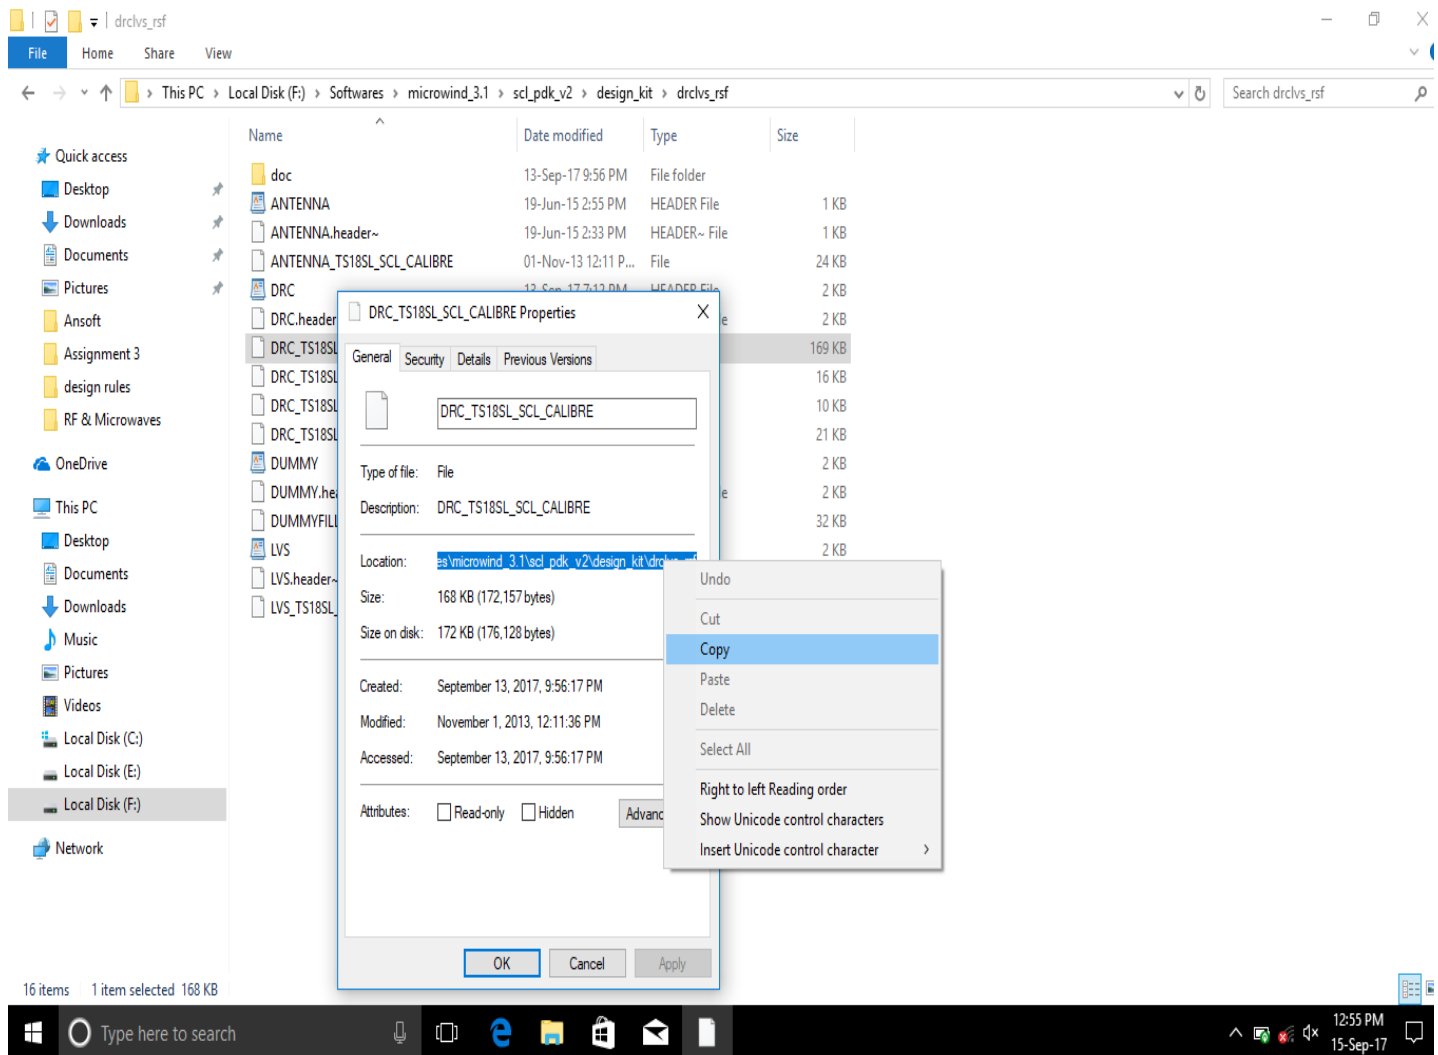

STEP 4: Now open DRC.header file in word pad.

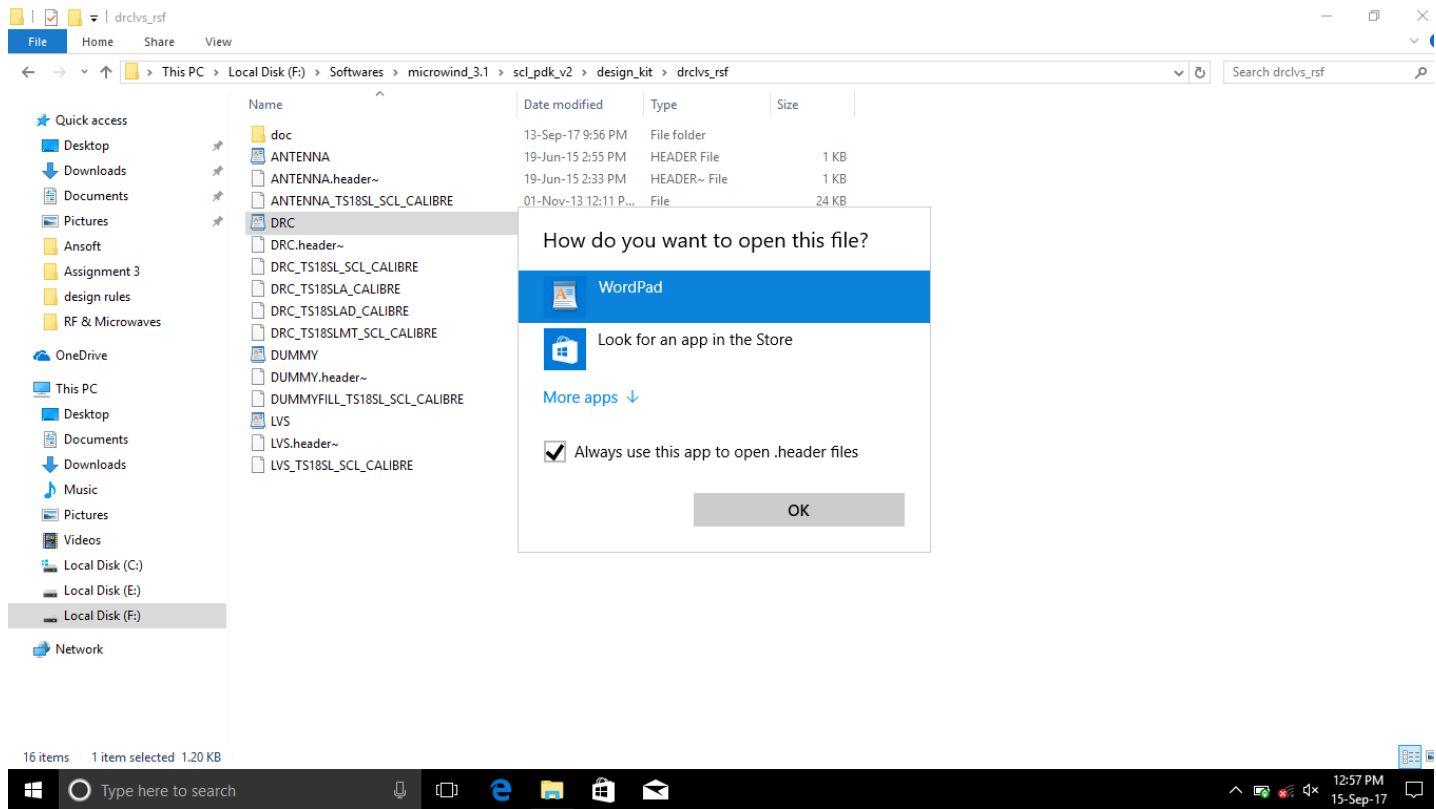

STEP 5: Scroll down and **paste** the copied path or (Location) in the selected text as shown in figure.

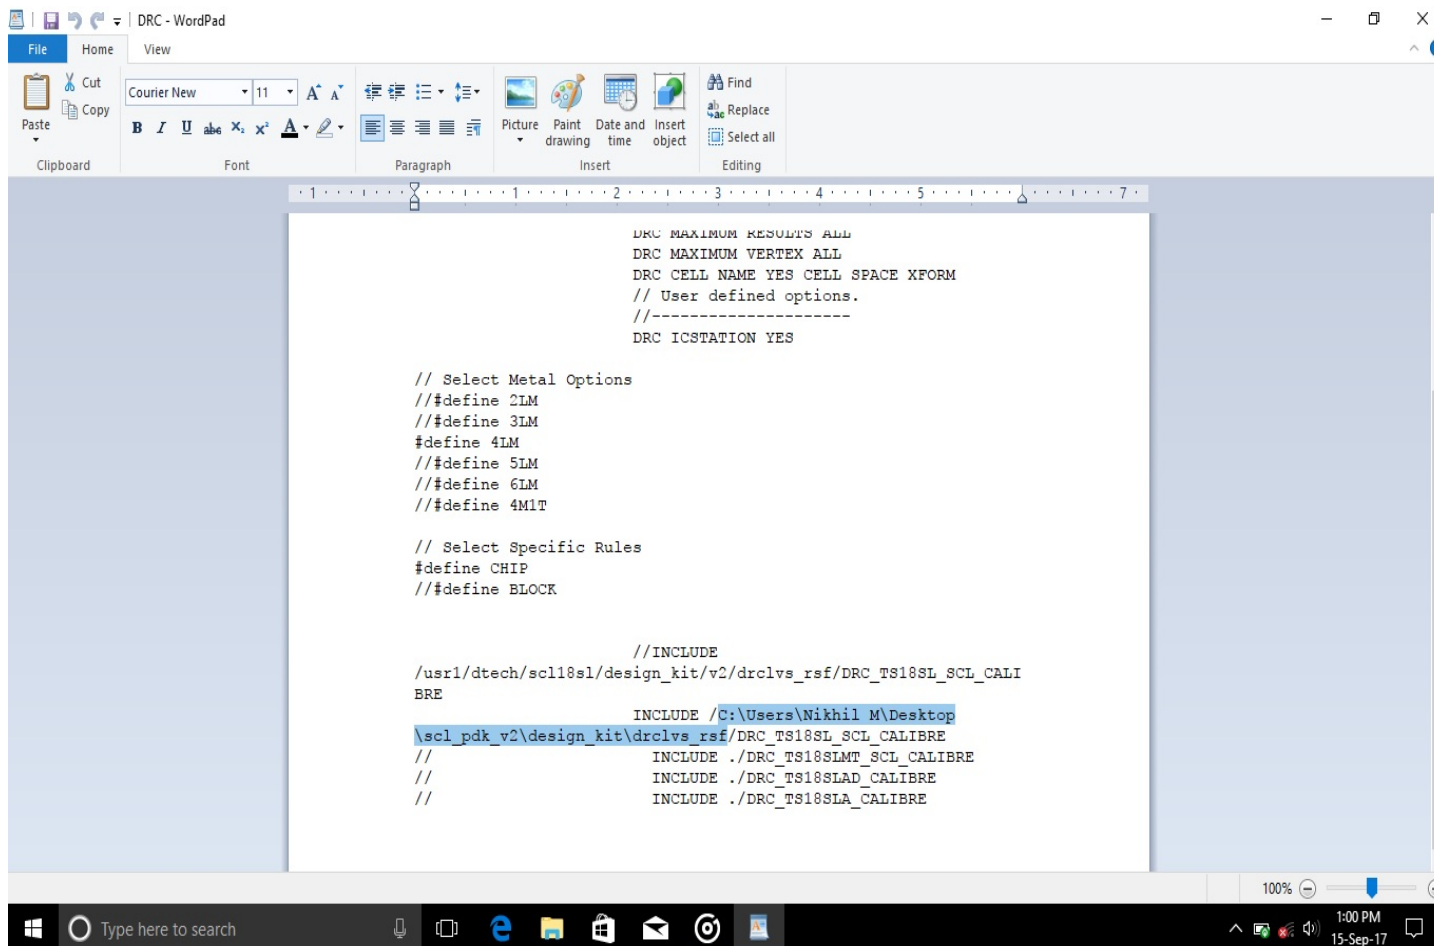


STEP 6: Before saving the file once again please check the selected content and the pasted content (between the two slashes / /). (**IMPORTANT!!! Don't paste on the complete path**)


STEP 7: **Save** the file and close.

STEP 8: open **MICROWIND3** folder -> open **system** folder -> opens **MICROWIND31.exe**

STEP 9: Go to **FILE** -> **Select Foundry**

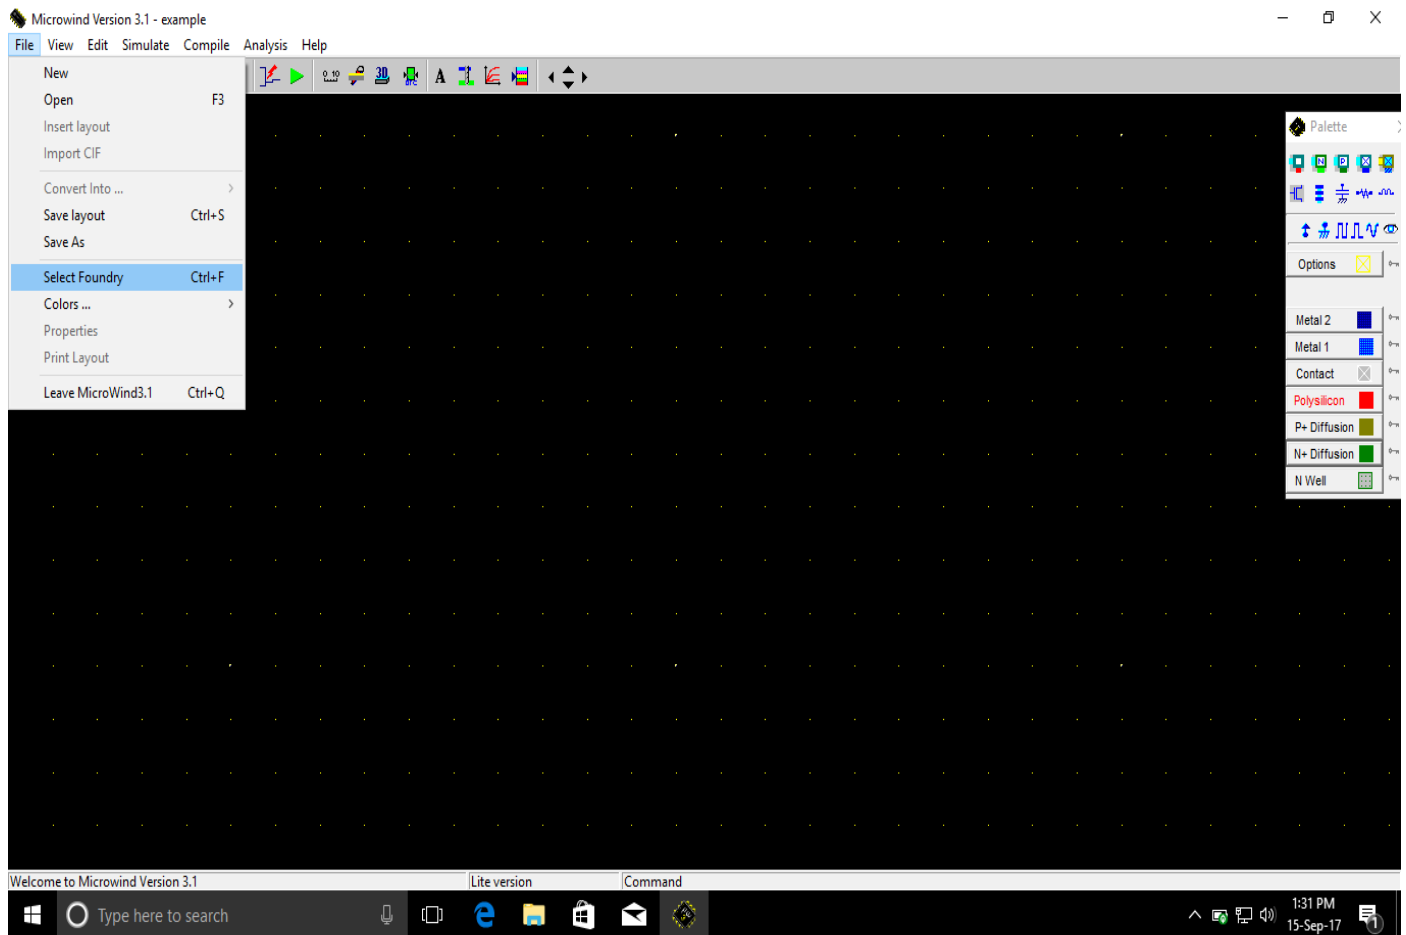

STEP 10: Select the DRC.header file and click on open.

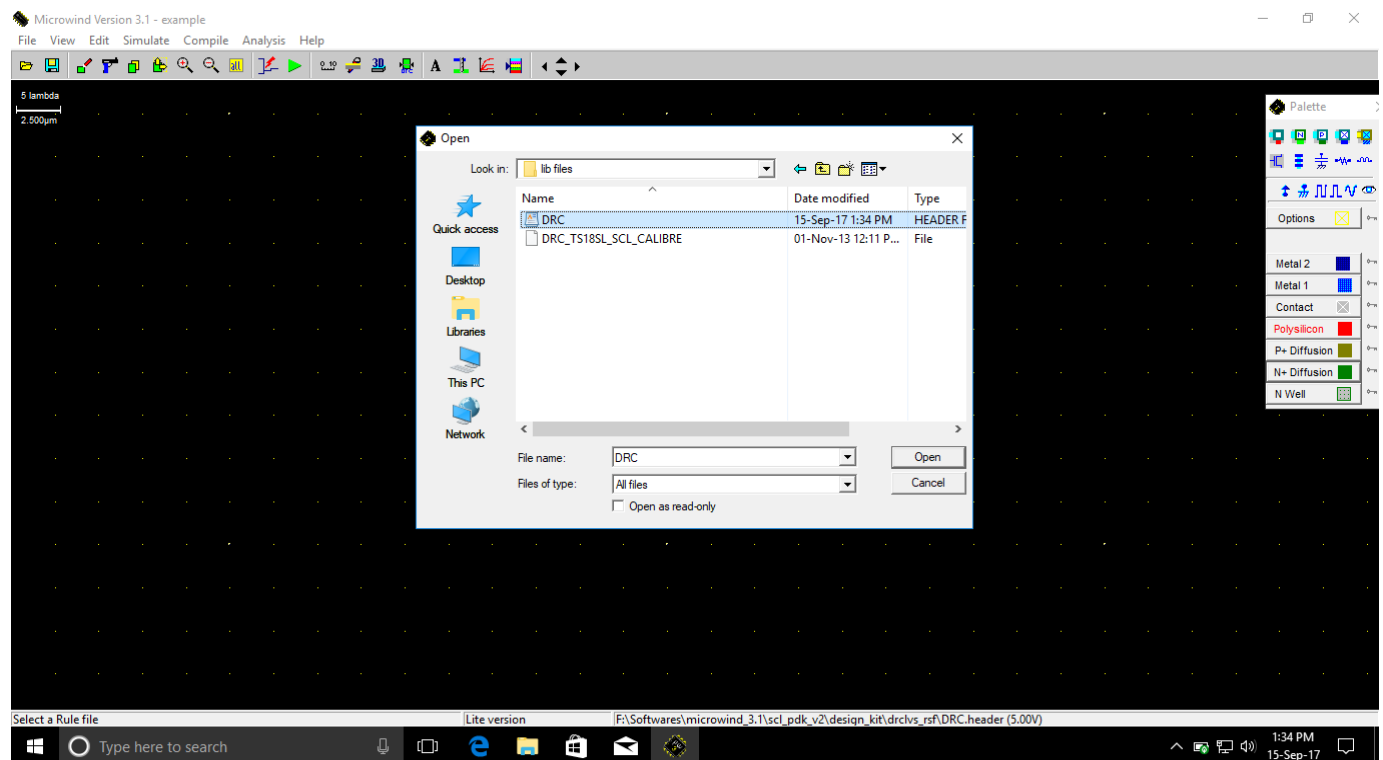

STEP 11: Now you can start drawing the layouts here.

NOTE: Please don't move the library files in your system. If you move the library files in you system from one location to other, correspondingly you have to change the path in the DRC.header file also.