

Washing Machine Modes - Temperature and Spin Guide

Mode	Temperature	Spin Speed	Notes
----- ----- ----- -----			
SUPER ECO WASH	30°C - 40°C	Medium (800-1000 RPM)	Bijli aur paani dono ki bachat.
15' QUICK WASH	30°C	High (1000-1200 RPM)	Halke gande kapdon ke liye.
DAILY WASH	40°C	High (1000-1200 RPM)	Rozana ke kapdon ke liye.
DELICATES	20°C - 30°C	Low (400-600 RPM)	Naazuk kapdon ke liye.
DENIM	40°C	High (1000-1200 RPM)	Jeans aur moti kapdon ke liye.
BABY CARE	60°C - 90°C	Medium-High (800-1000 RPM)	Zyada hygienic wash ke liye.
COTTON	40°C - 60°C	High (1000-1400 RPM)	Heavy cotton kapdon ke liye.
SYNTHETICS	30°C - 40°C	Medium (800-1000 RPM)	Artificial kapdon ke liye.
WOOL	20°C - 30°C	Very Low (400-600 RPM)	Wool kapdon ke liye (shrinkage se bachav).
RINSE + SPIN	Cold (Normal Pani)	High (1000-1400 RPM)	Sirf paani aur spin karna.
SPIN	N/A (Pani nahi chahiye)	High (1000-1400 RPM)	Sirf paani nikalne ke liye.
ECO DRUM CLEAN	70°C ya jyada	N/A	Machine ka drum saf karne ke liye.

Important Notes:

- RPM = Revolutions Per Minute (Drum kitna ghoomega ek minute mein).
- Wool aur delicate kapdon ke liye thanda pani aur low spin.
- Baby Care mein high temperature se germs maar jaate hain.
- Heavy kapdon jaise jeans ke liye high spin aur medium-high temperature.