

Preonic default keymap - QMK Firmware v4.0 (66e0323)

Main typing layers (Qwerty, Lower, Raise)

~ ,	1 !	2 @	3 #	4 \$	5 %	6 ^	7 &	8 *	9 (0)	Backsp
Tab ~	Q !	W @	E #	R \$	T %	Y ^	U &	I *	O (P)	Delete
Del Esc Del	A F1	S F2	D F3	F F4	G F5	H F6	J -	K =	L [;]	' \
Shift	Z F7	X F8	C F9	V F10	B F11	N F12	M ,	.	/	Enter	
BL*	Ctrl	Alt	OS	Lower	Space	Space	Raise	Next Left Next	Vol - Down Vol -	Vol + Up Vol +	Play Right Play

* BL presses shift and cycles through the backlight settings

Adjust layer (Lower + Raise together)

F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
	Reset										Delete
			Audio On*	Audio Off*	Alt/OS Mac*	Alt/OS Win*	Qwerty*	Colemak*	Dvorak*		
	Cycle Voices Back	Cycle Voices Forw	Music Mode On	Music Mode Off							
				Lower			Raise				

* These options are persistent over keyboard power loss and stored in the EEPROM (you'll only need to set them once)

For more information on the firmware, visit <http://qmk.fm> or http://github.com/jackhumbert/qmk_firmware for the code. The default keymap evolves over time, and the one in the repo may be slightly different than what is shown here - for the Massdrop that was shipped in June/July 2016, this is the keymap that came programmed onto the PCBs, and can be used as a typing reference.

Many keys on the Lower/Raise layers were left blank for customising, so consider adjusting things to your liking! Compiling instructions are on the website/repo.