


MT8382 How To ON/OFF USB and OTG

MT8382 default mode is USB mode.


1. Enable OTG mode(can use OTG)

1.1. Open “MT8382ToggleADBandUSB” APP

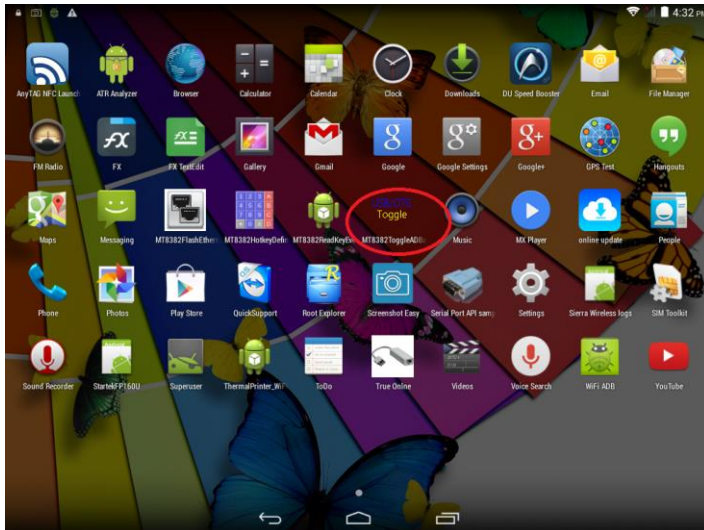


You can see current USB mode

P.S this example mode is USB mode, the mode can use mouse, keyboard e.t.c.

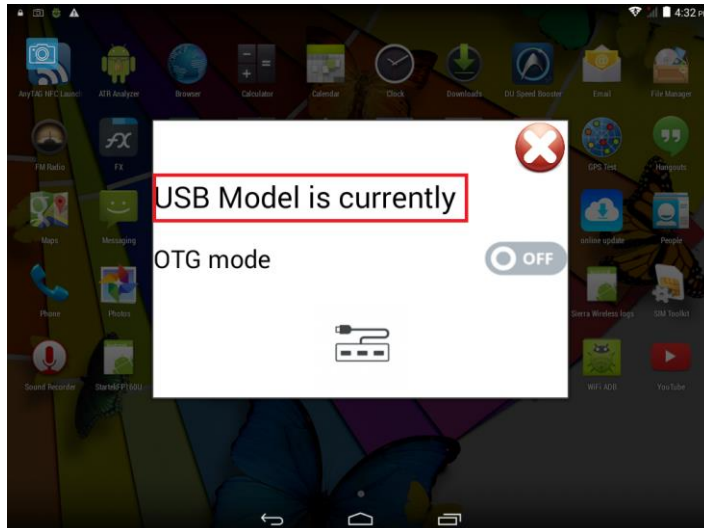


1.2. Enable OTG mode

Click button

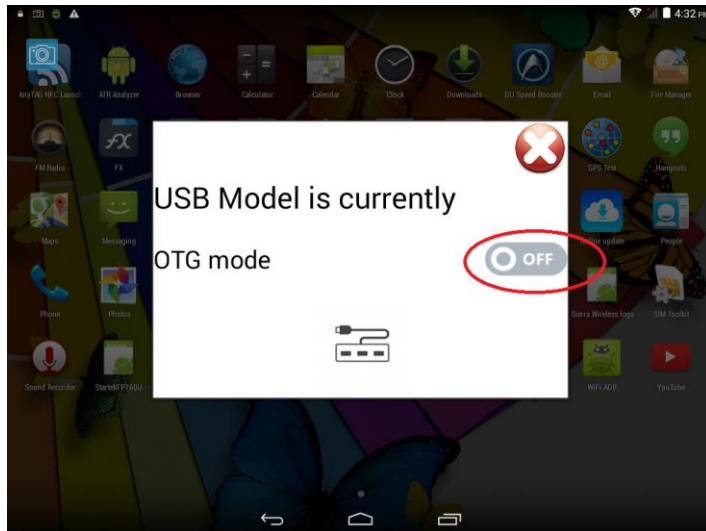


After click ok

P.S After enable OTG mode, USB GPS, USB 3G, NFC e.t.c. function may not work

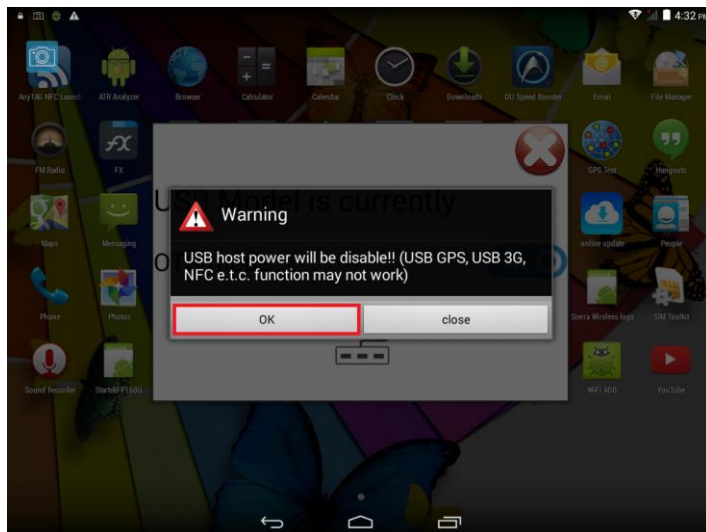


1.3. Done(can use OTG)

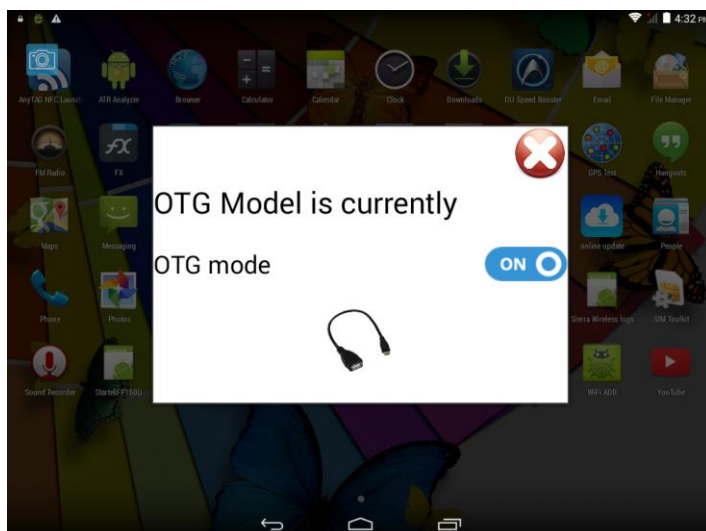


2. Enable USB mode(can use USB)

2.1. Open “MT8382ToggleADBandUSB” APP

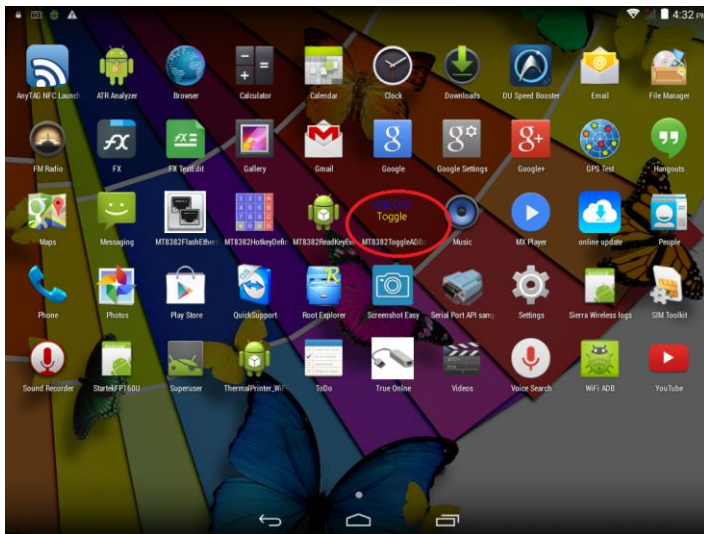


You can see current USB mode

P.S this example mode is OTG mode, the mode can use OTG

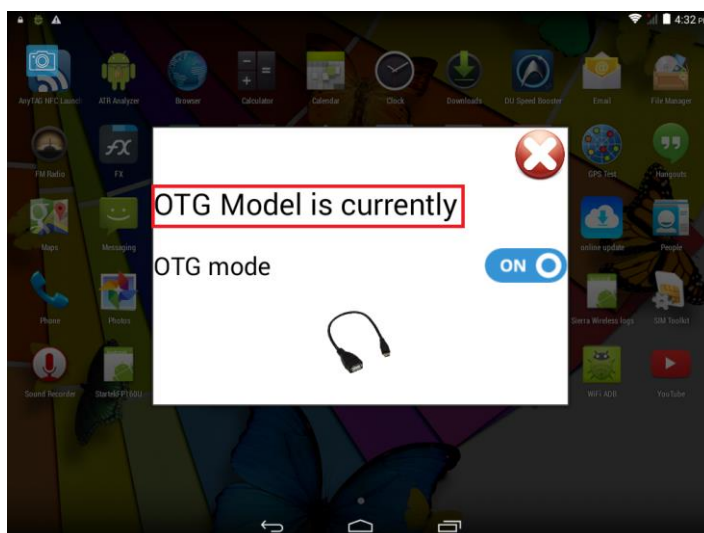

2.2. Enable USB mode

Click button

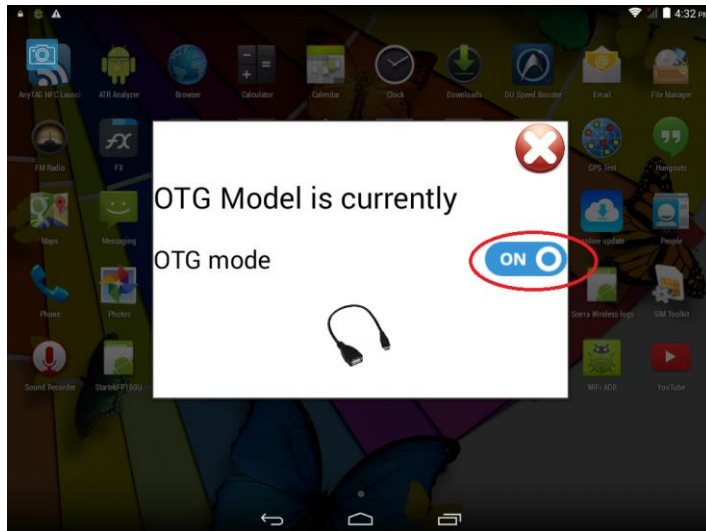

After toggle to USB mode.

2.3. Done(can use USB mouse, keyboard e.t.c.)

