


[IMT8]How to delete Root(remove Superuser.apk)

1. Copy IMT8_delete_Root.apk to SDCard or USB Disk

 IMT8_delete_Root.apk


P.S my example is use USB Disk

2. Plug in USB or SDCard to IMT8
P.S my example is use USB Disk


3. Use IMT8_delete_Root APP remove Root
3.1. click “File Manager”




- 3.2. click “External USB storage”
P.S my example is use USB Disk

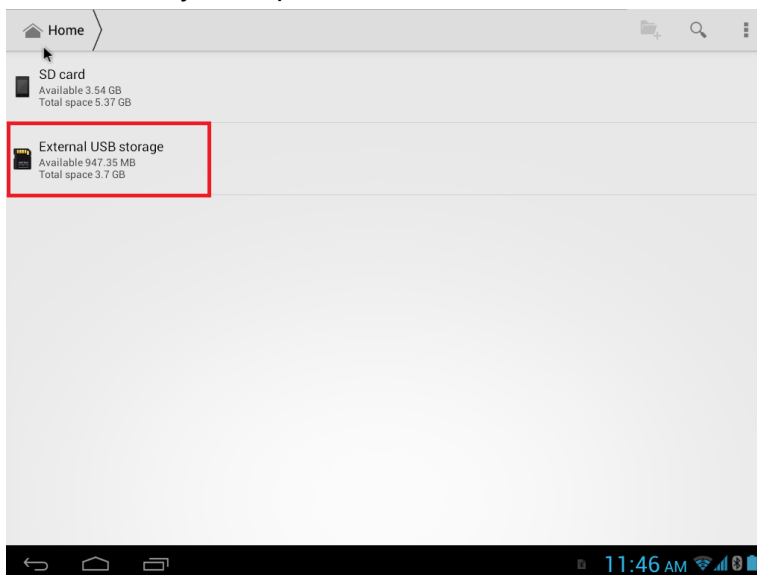

- 3.3. click “IMT8_delete_Root.apk”

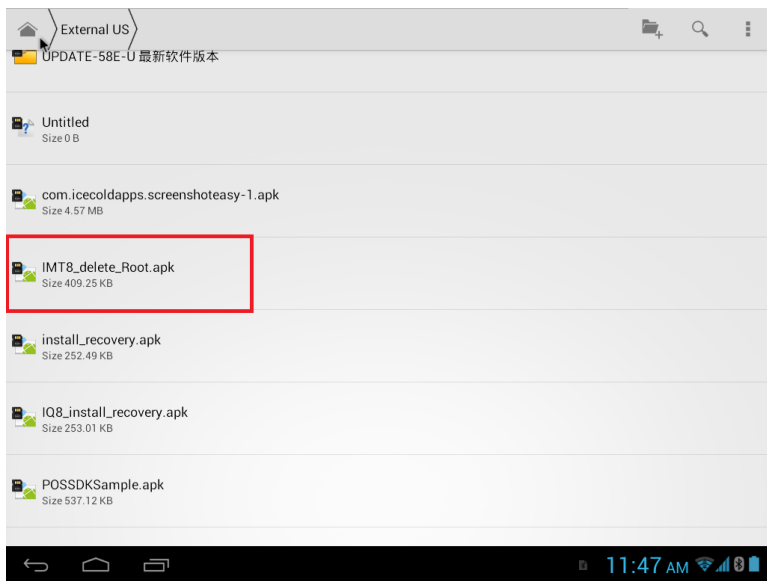


3.4. select “Package installer”

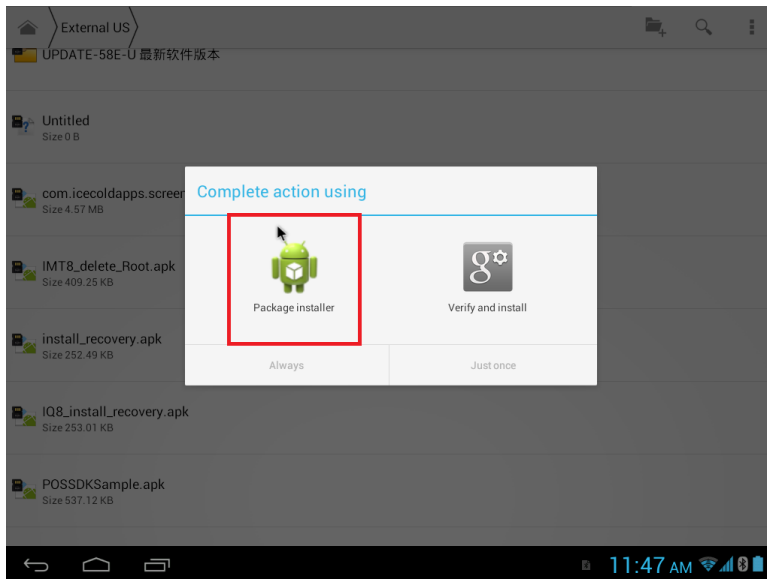


P.S If you see “Install blocked” message, can follow these steps


3.4.1. click “settings”

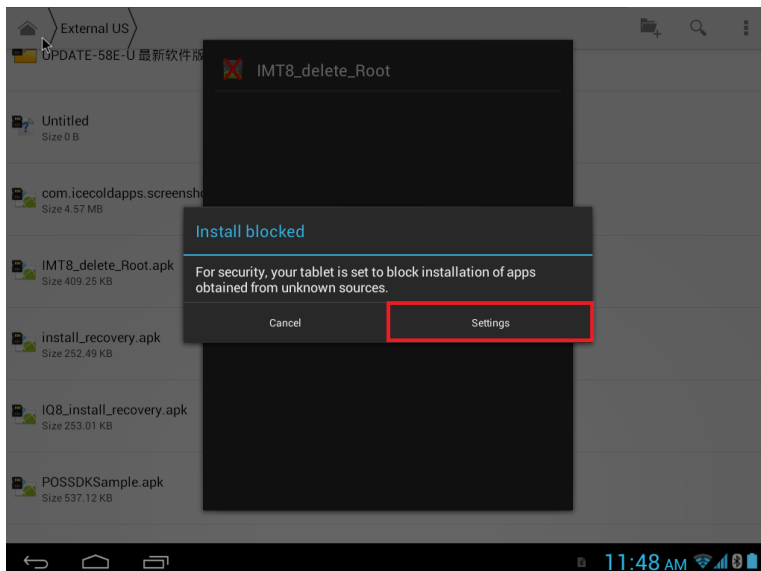

3.4.2. select “Unknown sources”

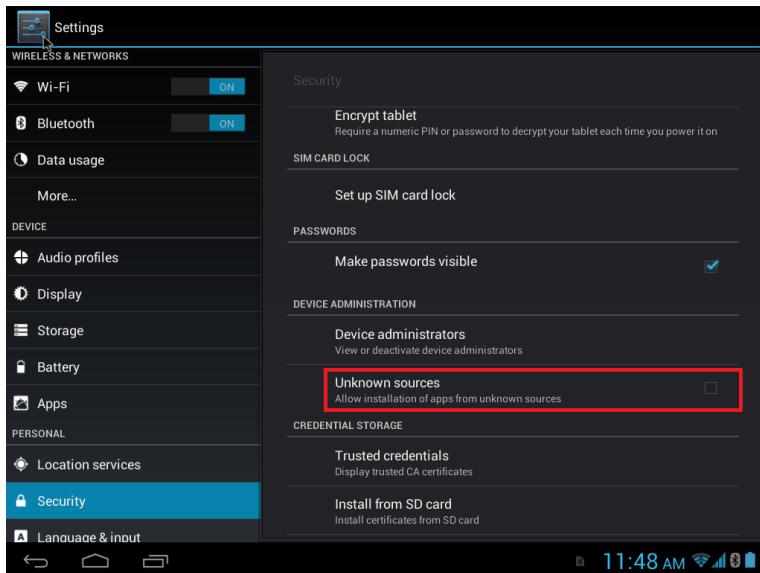

3.4.3. click “OK”

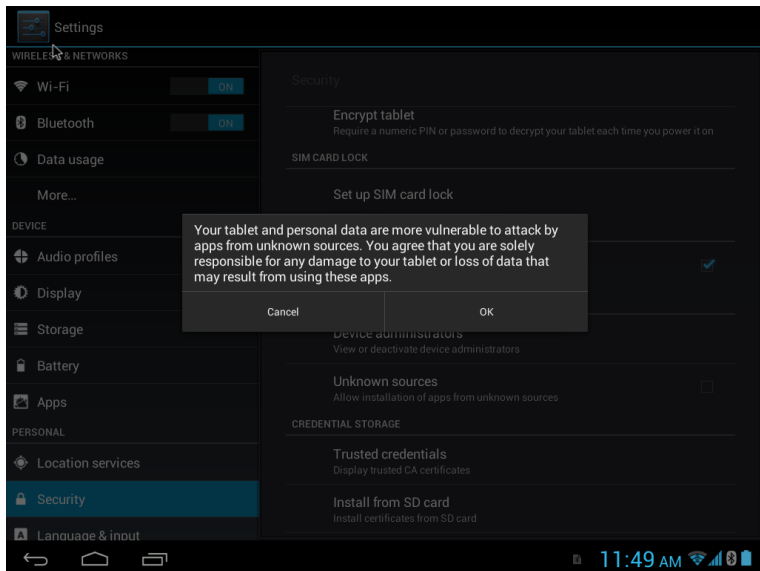

3.4.4. check your setting




3.4.5. after click back




3.5. click “Installer”

P.S install IMT8_delete_Root APP

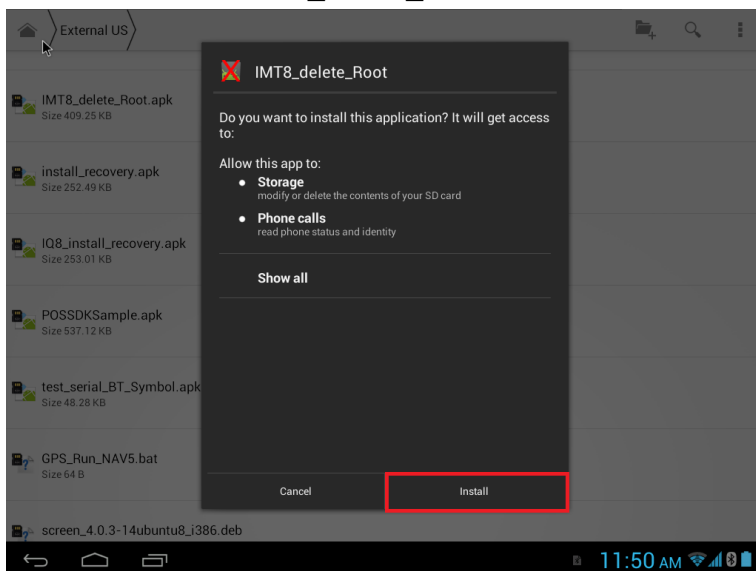


3.5.1. After install, can select “open” or click “IMT8_delete_Root” icon to start APP

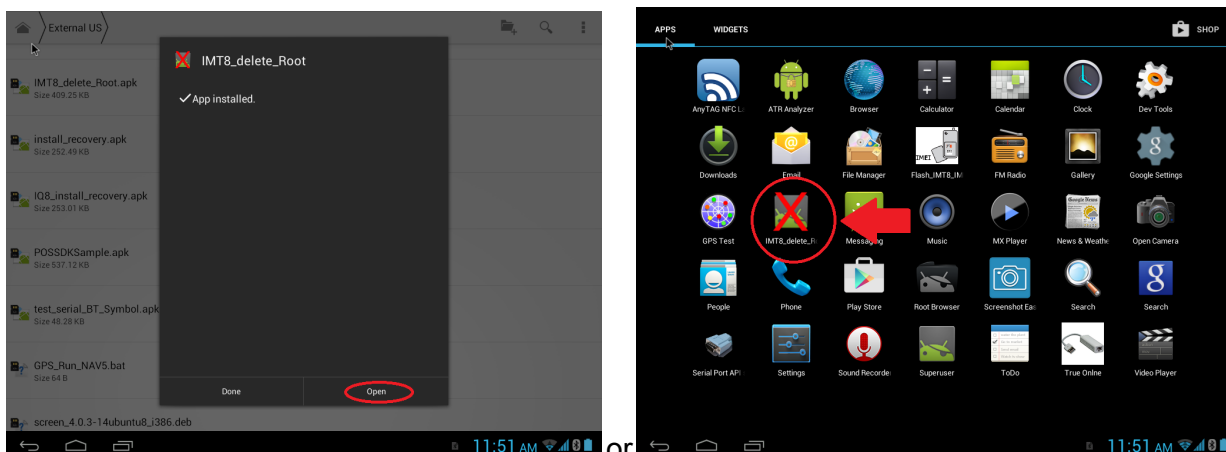


4. Use APP delete Root


4.1. click "Yes"

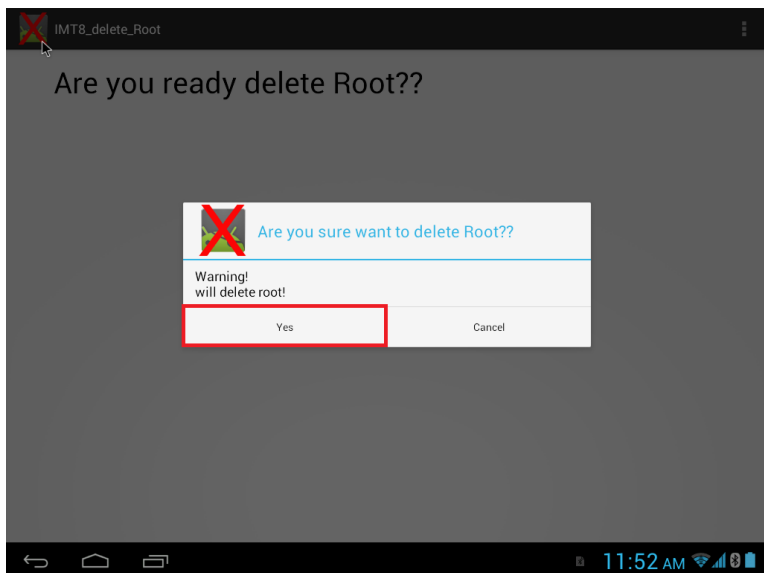

4.2. click "Allow"

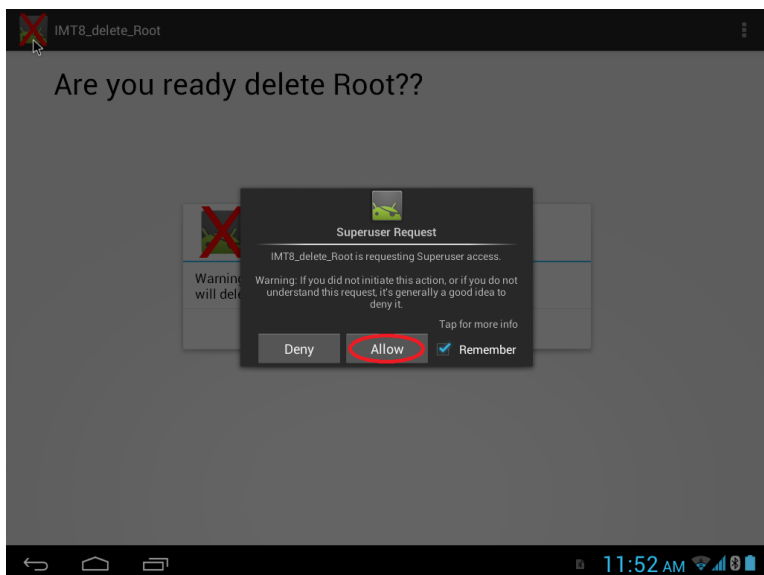

4.3. click "OK" to exit

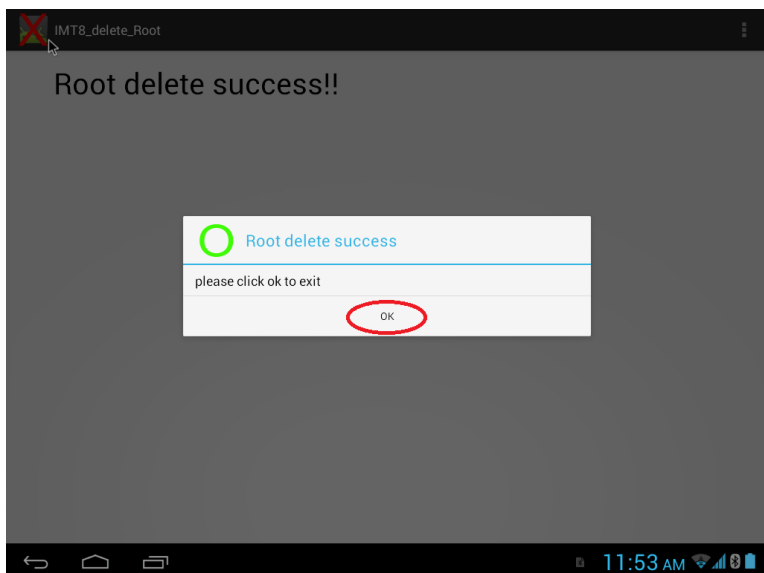

5. Check Superuser is remove on Desktop

P.S if Root remove succes, you not should found Superuser icon

