


Up Connector
(all pins connected)


GPIO21	R190	OR	SID_CS_N
GPIO22	R186	OR	SID_CS_N
GPIO23	R187	OR	SID_CS_N
GPIO24	R188	OR	SID_CS_N
GPIO25	R191	OR	SID_CS_N
GPIO26	R192	OR	SID_CS_N
GPIO27	R193	OR	SID_CS_N
GPIO7	R194	OR	SID_CS_N

Fit only one of these to each board



Master board has no fit on the following:
R195, R196, R197, R198

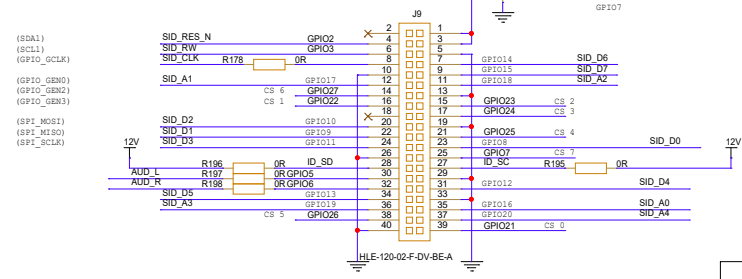



Down Connector - pins are mirrored
(has disconnectable pins)

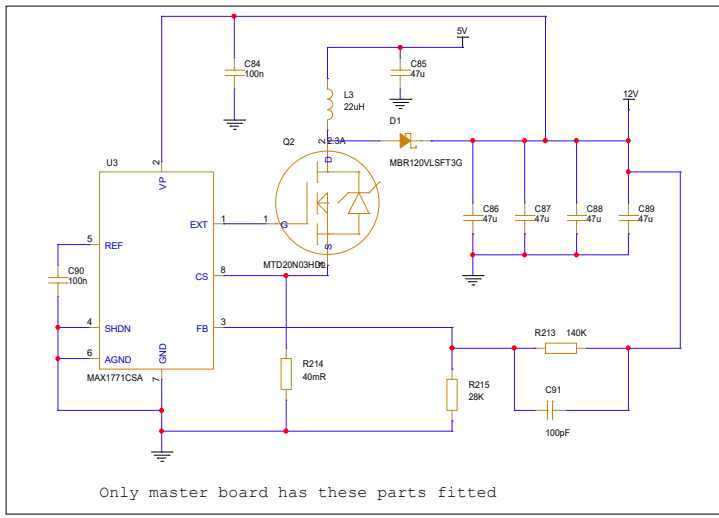

Only master board has these parts fitted

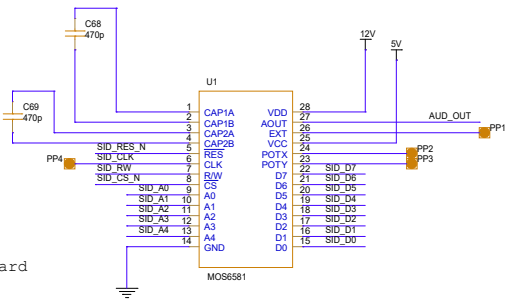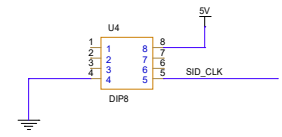

Outputs are mixed together in mono.
You can assign channels to one output
or another by removing one of these.

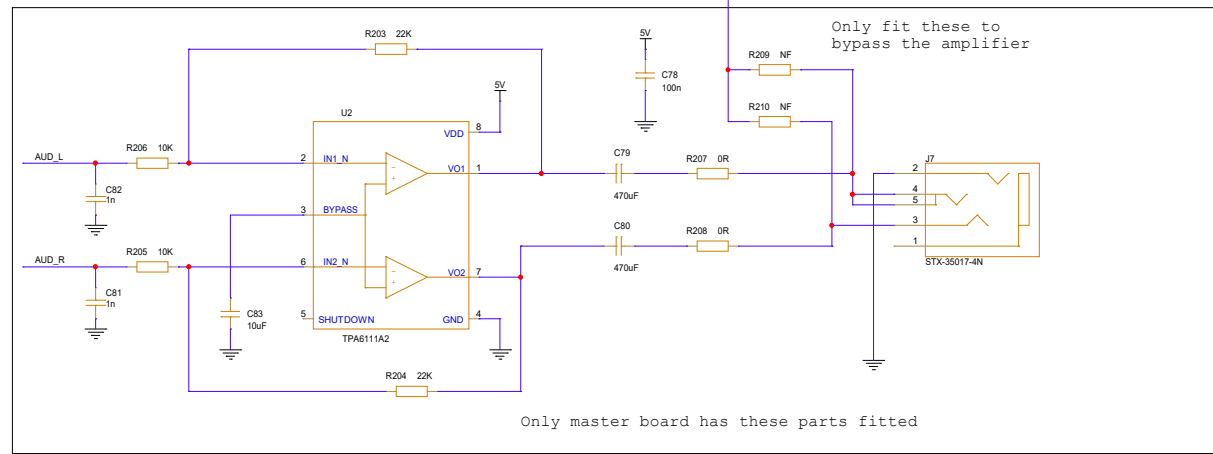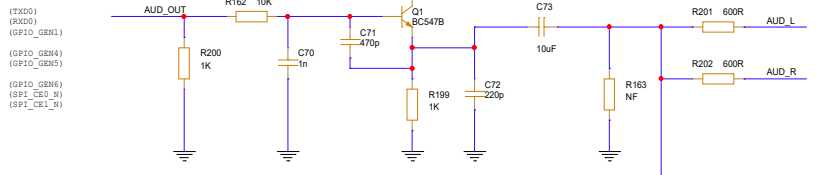

Only master board has these parts fitted