



FTDI PORT USED FOR  
PC TO BOARD  
COMMUNICATION

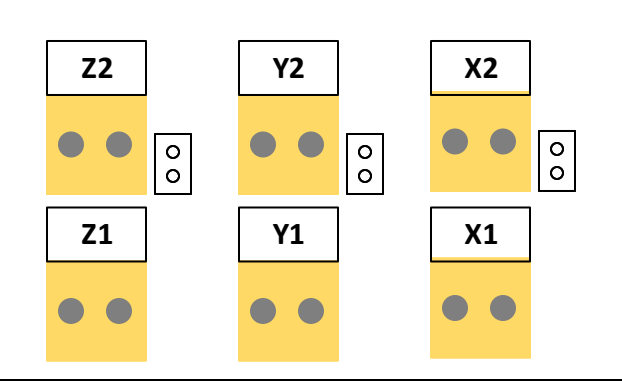


ENDSTOPS


IF YOU DO NOT  
NEED Z2,Y2,X2  
THEN SHORT THE  
PIN NEXT TO IT

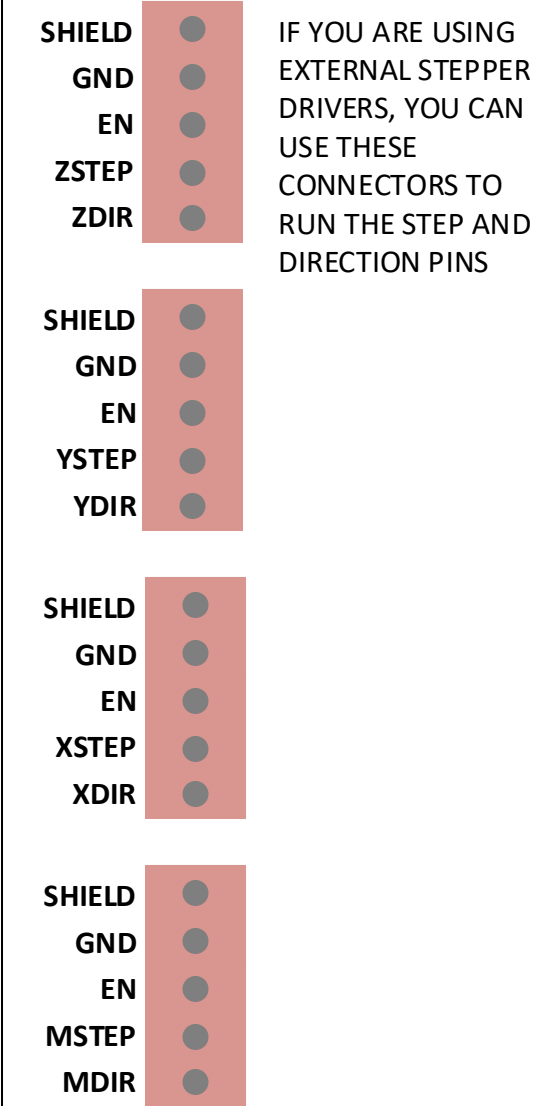

IF YOU ARE USING  
EXTERNAL STEPPER  
DRIVERS, YOU CAN  
USE THESE  
CONNECTORS TO  
RUN THE STEP AND  
DIRECTION PINS

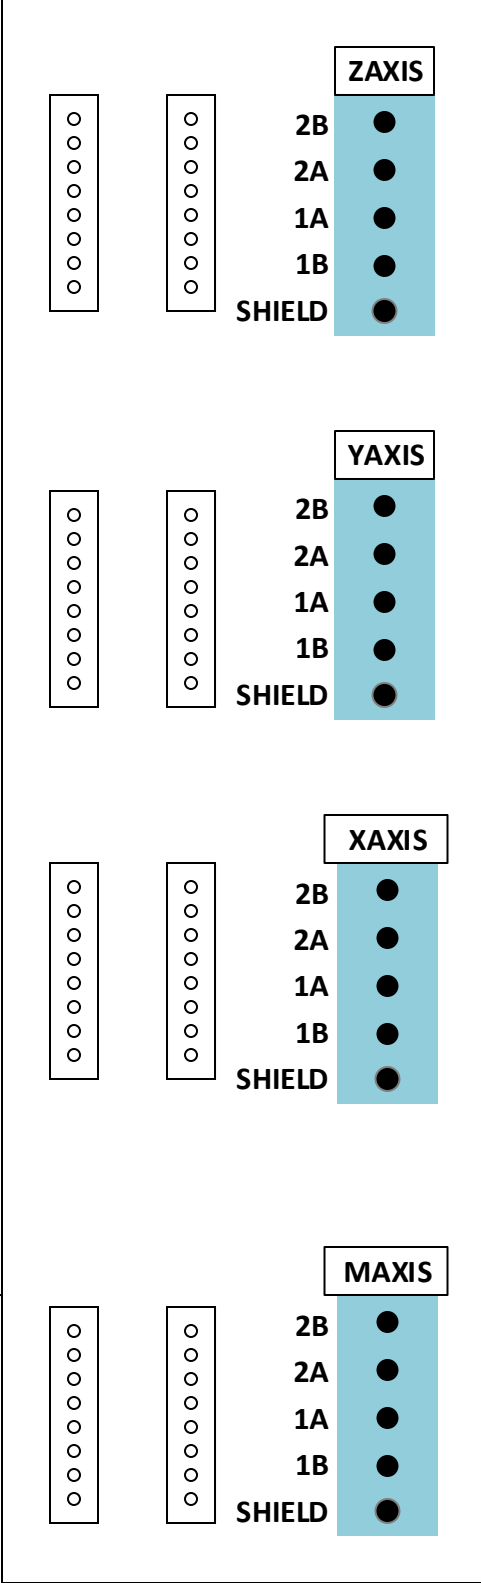

OUTPUT TO STEPPERS  
POLULU STEPPER PINOUT

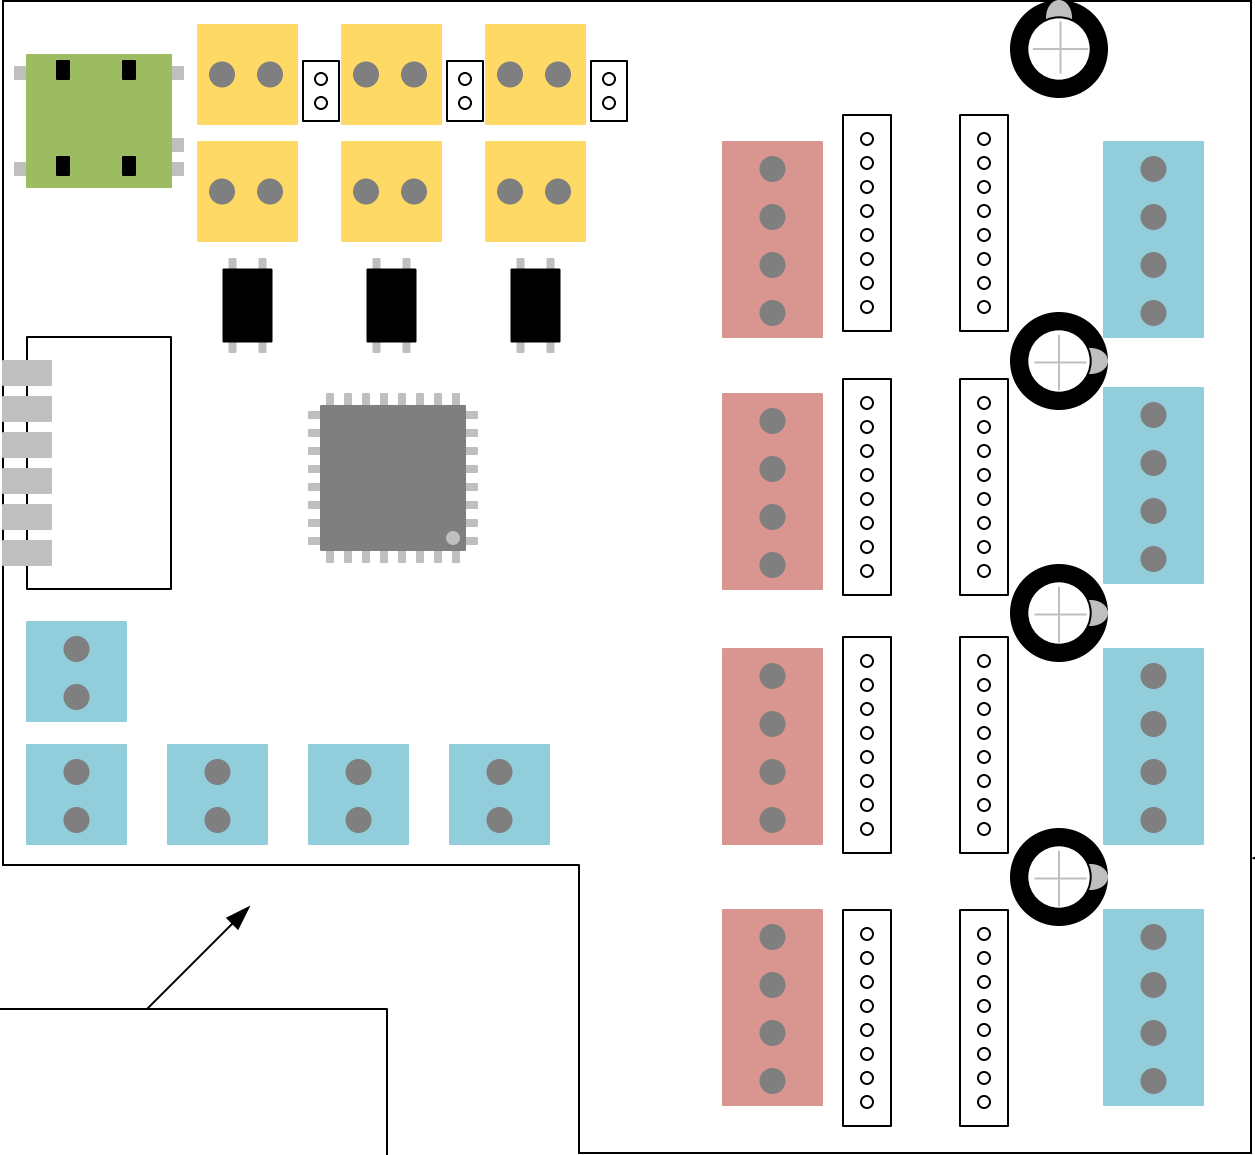

EXTERNAL CONTROL  
PORTS

