




## Preparation

Prior to configuration, contact your network engineer to obtain the following:

- IP Address and Netmask - This is the IP Address that will be assigned to the SiteGate WAN Port. If connected directly to the network it may be a public IP. If the SiteGate is connected to the network via a modem, an IP can be chosen within the range of the Modem's Local Network.
- Gateway - This is the IP Address of the Network Gateway located 'upstream' from the SiteGate. It provides the SiteGate with external network access. Typically this address is of a Router or Modem.
- DNS Servers - These IP Addresses are used for Name->IP Address translation over the network. In most cases, these can be left as the defaults.

## Diagram

Shown below is the SiteGate 6000 unit. The SiteGate 5000 is identical with the exception of the additional LAN ports on the right side offered with the 6000 model.

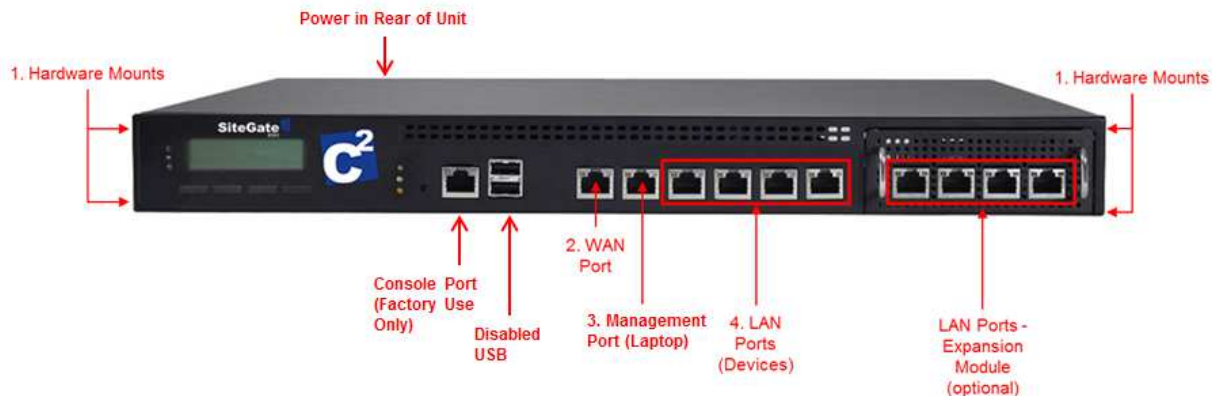

To complete setup, to build your SiteGate into SitePortal®, and for more detailed instructions, please refer to the **SiteGate Implementation Guide** included with your purchase.

**For additional instruction or to request a soft-copy of the *SiteGate Implementation Guide*, please contact SitePortal® Support.**

## SitePortal® Support

- Phone: 877-677-2405
- Email: [siteportal.support@csquaredsystems.com](mailto:siteportal.support@csquaredsystems.com)
- Hours of Operation:  
Monday – Friday from 8:30 A.M. – 8:00 P.M. EST