


How to check the BIOS version of each model

1 , For Z83, Z83II ,Z83V ,BT3PRO, AP34, AP34PRO, MI, SI

Power ups and Power on, immediately press the delete key on the keyboard



Enter the following BIOS interface, Red marked BIOS Version right AB1 0.17 x64
x64 is the BIOS version information

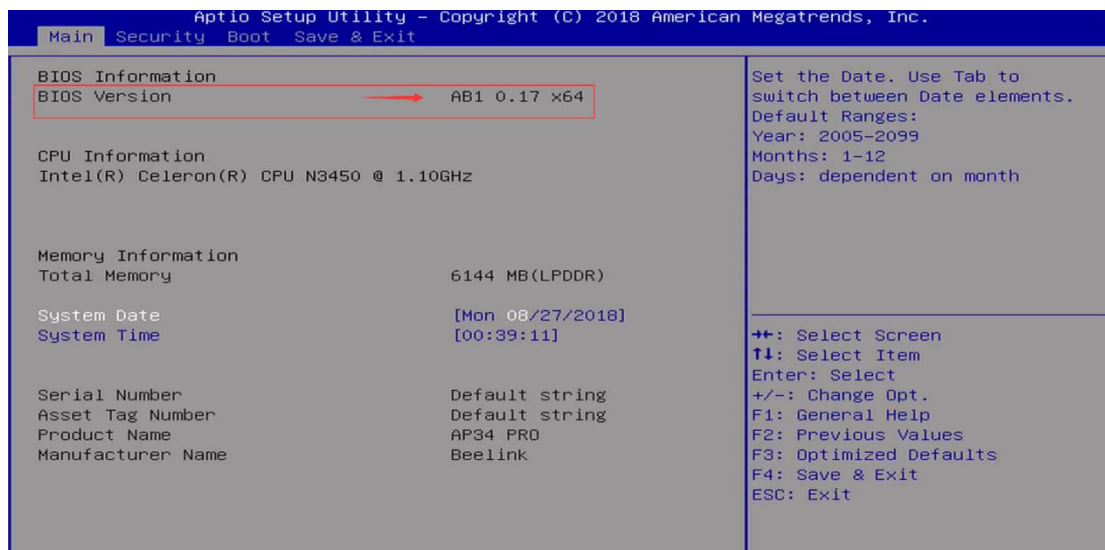

2 , For SII , Gemini X

Power ups and Power on, immediately press the delete key on the keyboard



Enter the following BIOS interface, Red mark Project Version right Gemini X V0.08 x64 is the BIOS version information

