

Connecting with Meta Quest Link

Meta Quest Link allows you to connect your headset to a Windows PC to play PC VR content, use Remote Desktop, or share your screen.

Contents

- headset-preparation
 - **Requirements**
 - **Install the Meta Quest Link App**
 - **Connect Your Headset**
-

Requirements

- **Windows 10 or 11** (64-bit)
 - **8 GB RAM** minimum (16 GB recommended)
 - **USB 3.0 port** or **Wi-Fi 5 GHz** for Air Link
 - Compatible **GPU** (NVIDIA GTX 970 / AMD 400 series or newer)
 - At least **4 GB of free disk space**
-

Install the Meta Quest Link App

1. On your computer, go to **www.meta.com/quest/setup**.
 2. Download and install the **Meta Quest Link app**.
 3. Follow the on-screen instructions to complete setup.
-

Connect Your Headset

Option A – Link Cable

1. Plug a **USB-C 3.2 cable** into your computer and the headset.
2. Put on the headset and open the **Quick Settings** menu.
3. Select **Link** → **Computer** → **Launch** to start PC VR mode.

Option B – Air Link (Wireless)

1. Ensure your **PC and headset** are on the **same 5 GHz Wi-Fi** network.
2. On your headset:
 - Press the **Meta (Oculus)** button → open **Quick Settings** → select **Link**.
 - Enable **Use Air Link** and choose your PC.
3. Confirm the pairing code on both devices.

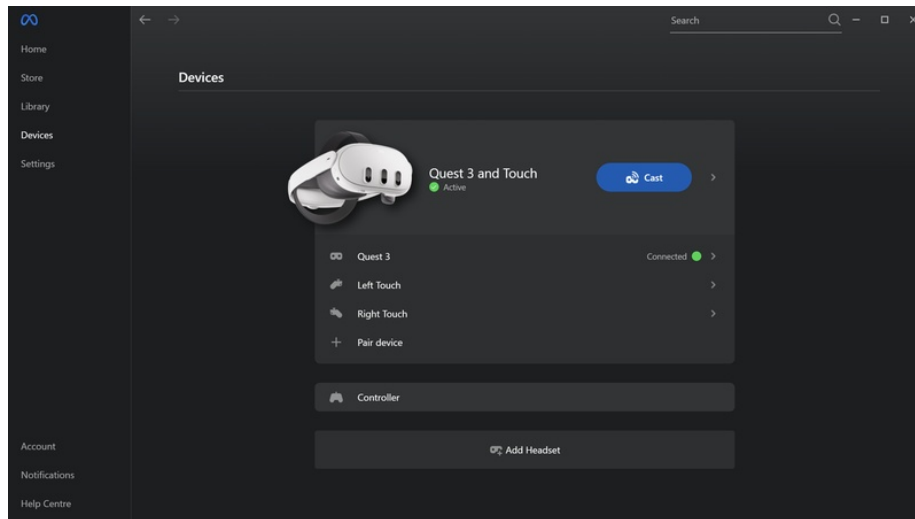


Figure 1: meta quest link app

4. Select **Launch** to start using Air Link.

Disable or Manage Link

- Open **Quick Settings** → **Settings** → **Link**.
 - Use the toggle to enable or disable **Link** or **Air Link** as needed.
-