

Kurle3000 Thermal Carafe Coffee Maker

Quick-Start User Guide



This guide serves to provide a few basic steps to set up the Kurle 3000 Thermal Carafe Coffee Maker. Additionally, it provides a few tips for the user to personalize their first cup. With this guide, users can safely assemble and use the machine. This guide provides users with a basic idea of how to configure the settings to customize coffee.

Instructions for Use

1. Remove all plastic packaging from the cord and reusable filter. The machine comes with the following parts:
 - a. **Machine Body and Cord**
 - b. **Thermal Carafe**
 - c. **Reusable Filter**
2. Place the machine on a stable surface within reach of a three-pronged electrical outlet and plug in the machine.
3. Remove the thermal carafe and fill it with drinkable water. There is a meter on the front of the carafe, and a line of water will appear as it is filled. Do not fill the carafe past the line marked **"MAX."**
4. Open the lid of the water tank using the notch located at the top of the back of the machine labeled **"WATER TANK."** Carefully pour the water from the carafe into the tank and close the lid.
5. If the machine is brand-new, a pot of plain water should be brewed before the machine is used for coffee. To brew immediately, press the **"ON"** button at the front of the machine, and then press the **"BREW"** button. A red light next to the row of buttons should turn on while the machine is brewing.
6. When the machine is finished brewing, the red light should turn off and the machine should click.
7. To add ground coffee to the machine, open the lid labeled **"FILTER"** at the top of the front of the machine. Insert the reusable filter with the two black edges fitting into the slots on

either side. If inserted correctly, the top of the filter should be level with the plastic around it, and the lid should lay completely flat when closed. If the lid does not lay completely flat, there is a chance that this compartment could leak. Add the desired amount of ground coffee. There are recommendations for coffee amounts based on desired coffee strength and number of cups in the general instruction manual on pages 10-12.

8. Close the lid to the filter area and fill the tank with the desired amount of water. There is a level on the tank with lines marking how many eight-ounce cups an added amount of water will make. Fill the tank to the desired number of cups, not filling over the line marked **“MAX.”**

9. Place the empty carafe in its housing and press the **“ON”** button. The rest of the buttons can change the settings in the following ways:

- a.** The **“BOLD”** button slows the brew process, extracting more from the grounds and creating a stronger brew that takes more time
- b.** The **“REGULAR”** button allows the coffee to brew at a faster rate, creating a milder brew
- c.** To set the coffee to brew at a later time, select the **“DELAY BREW”** button. The screen on the face of the machine should turn to a clock and begin blinking. Use the **“HOUR”** button to click forward through the hours, and the **“MINUTE”** button to click forward through the minutes. Your selected time will be visible on the screen. After it stops blinking, press the **“BREW”** button once, and the machine will brew coffee at the set time. The clock operates on a 24-hour cycle, so 3: 00 PM is pictured as 15: 00.

Frequently Asked Questions

Why is it important to flush the coffee maker with water before brewing your first pot of coffee?

We do not recommend brewing your first pot of coffee without running water through the machine because the water removes any dust from the shipping and manufacturing facilities that are lingering on the plastic.

How can I increase the strength of my coffee?

There are many ways to extract more flavor using the Thermal Carafe Coffee Maker. These methods include grinding your coffee more finely, using the **“BOLD”** setting, using a greater ratio of coffee grounds to water, and adding an additional paper filter on top of the reusable filter. For more information on how to customize your coffee, go to www.sophiascoffeemakers.com/customizeyourcup

Can I plug my machine into an international adaptor?

We do not recommend using an international adaptor, because the machine operates at 110 volts and is designed for American electrical systems. Plugging it into an outlet designed for higher voltage typical in other countries could be hazardous.

How often do I need to clean my coffee maker?

The Thermal Carafe Coffee Maker is designed to run smoothly without frequent cleaning. If you notice grime or limescale buildup in the water tank or the carafe, you can follow the cleaning instructions given on pages 15-17 of the Full Instruction Manual.