

ONO-SENDAI

QUICK USER GUIDE (Firmware 1.0)

//////BUTTONS////

Keys////

REC records

TRIGGER plays the current instrument

LFO A toggles on/off between manual or automatic LFO A. By defect is applied to TIMBRE

LFO B toggles on/off between manual or automatic LFO B. By defect is applied to COLOR

KEY (center)toggles sequencer or synth mode.

////

REC Button

REC records/lock sequences while you press it. Listen the new parameter locking, release REC and press any other button or pot.

Try to REC while you move the decay or p decay pots

////

You can do new sequences just pressing REC+LFO B. Every position of the COLOR pot will produce a different sequence

P DECAY Button

P DECAY means Pitch Decay. On center does nothing. To The left down pitches, to the right up pitches. The more far from the center more dramatic the effect.

////

A lot of new features are already working and coming in a few days.