



* - adjust dimension to fit into rotator (weld notches)