





Step 1: Install the firmware download software tool, Flash Programmer 2, on the computer.

Step 2: Insert the Dongle into the computer's USB port.


Step 3: Run Flash Programmer 2 and select the target Dongle from the list on the left. Set the chip to CC2652P.

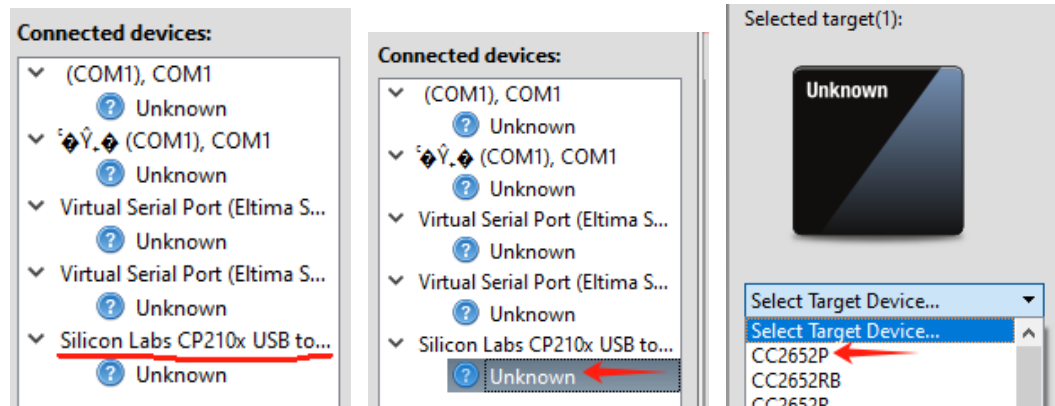

Step 4: When the Dongle is ready, the interface on the left should appear as shown.

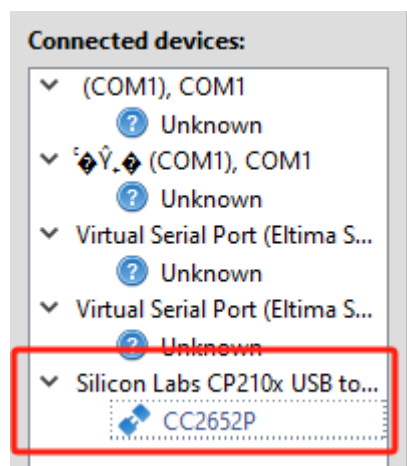

Step 5: In the Flash image section, click Browse to select the target firmware to flash. Then, in the Actions section below, select all actions, including: Erase, Program, Verify.

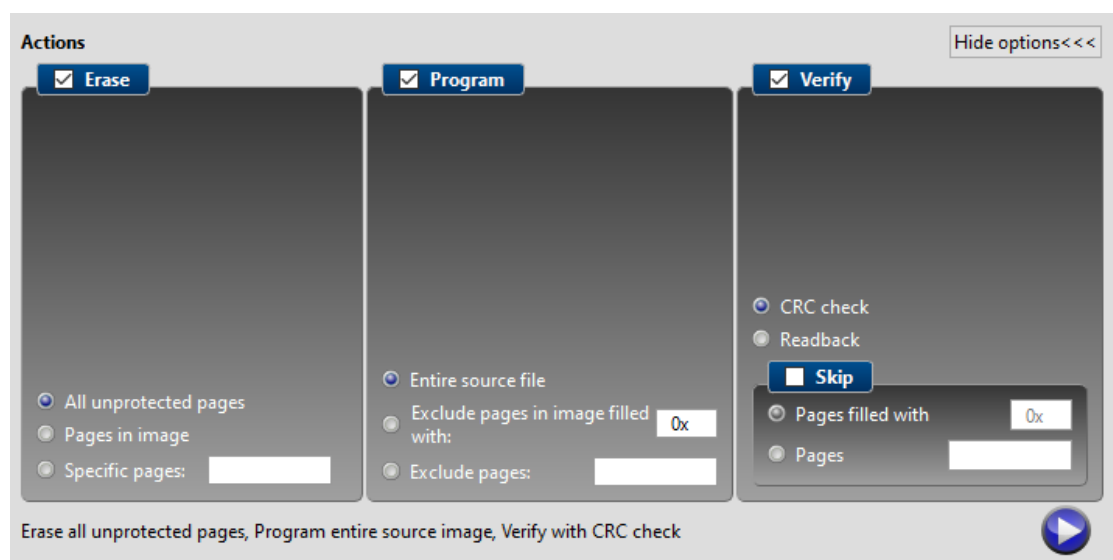

Step 6: Simultaneously press and hold the RST and K1 buttons on the Dongle, then release the RST button first. After approximately 1 second, release the K1 button. The Dongle will reboot and enter flashing mode.

Step 7: Click the triangular button shown below to initiate flashing. The flashing result will be displayed in the Status field below.

