

Control the Modem mode with this terminal instead the Mode Switch in the Modem

Future

Read Modem Parameters

Options

Orders to the modem,
text window

Orders send
button

Manual RS232 handshake control

Select the right
COM and push
Connect or
Disconnect

Write your parameters in the fields and send to the modem using the CHANGE buttons.

Select or write
the UrCall

Load a UrCall CVS file

Send a
CQCQCQ to
the Urcall

Send Echo

Add a L to the end and send (Link)

Send a U
(Unlink)

Number of Hexa
bytes

π (PI) button to show or hide the debug window

To write all my
information in
the Fields

Logbook Reception window

Change the whole parameters in the Modem RAM

Write RAM parameters to the EEPROM.

CRC Calculation, after any change.

D-STAR TERMINAL 2.1.0.1
EA3CNO/EA3HWN 21/04/2024

