

Put the machine on a flat level surface.

Retract the arm and bucket cylinders, put the bucket on the ground and lower the blade. Stop the engine.

Open the tailgate.

Check the hydraulic fluid level, it must be visible in the sight gauge.

Clean the surface around the reservoir (breather) cap and remove the cap from the reservoir

Check the condition of the fill strainer screen. Clean or replace as necessary.

Be sure the screen is installed before adding fluid.

Add the correct fluid to the reservoir until it is visible in the sight gauge.

Check the cap and clean as necessary. Replace the cap if damaged.

Install the cap.

Close the tailgate.