

See the SERVICE SCHEDULE for the correct service interval.

Retract the arm and bucket cylinders, lower the bucket to the ground. Stop the engine.

Open the tailgate.

Remove the drain plug.

Drain the fluid into a container.

Recycle or dispose of the fluid in an environmentally safe manner.

Install the drain plug.

Add the correct fluid to the reservoir until it is visible in the sight gauge

Open the bleed valve or loosen the plug on the hydraulic pump. Close the valve or plug after a steady stream of hydraulic fluid free of any air bubbles drains from the valve. Tighten the bleed valve.

DO NOT RUN THE MACHINE WITH THE BLEED VALVE OR PLUG OPEN.

Run the machine through the hydraulic functions. Stop the engine. Check the fluid level and add as needed.