

Park the excavator on a level surface with the plugs in the position as shown.

Remove the plug. The lube level must be at the bottom edge of the hole.

Add lubricant through the hole if the lube level is low.

See the SERVICE SCHEDULE for the correct service interval.

Park the excavator on a level surface with plugs in the position shown. Remove both plugs and drain the lubricant into a container.

Install the bottom plug. Add lubricant through the top plug hole until the lube level is at the bottom edge of the hole.

Install the plug.