

See the SERVICE SCHEDULE for the correct service interval.

Open the right side cover.

Remove the hydraulic filter.

Clean the housing where the filter gasket makes contact.

Put clean hydraulic fluid on the gasket. Install the new filter and tighten by hand only.

Open the tailgate.

Remove the filter.

Clean the housing where the filter gasket makes contact.

Put clean hydraulic fluid on the gasket. Install the new filter and tighten by hand only.