

Open the tailgate.

If it is necessary to use a booster battery to start the engine, BE CAREFUL! There must be one person in the operator's seat and one person to connect and disconnect the battery cables.

Be sure the key switch is OFF. The booster battery must be 12 volt.

Connect one end of the first cable to the positive terminal of the booster battery. Connect the other end of the same cable to the positive terminal of the excavator starter.

Connect one end of the second cable to the negative terminal of the booster battery. Connect the other end of the same cable to the negative excavator cable where it is attached to the frame.

Start the engine. After the engine has started, remove the ground cable first

Disconnect the cable from the excavator starter