

Lubricate the hydraulic excavator as specified in the SERVICE SCHEDULE for the best performance of the machine.

Always use a good quality lithium based multipurpose grease when lubricating the machine.

Apply the lubricant until extra grease shows.

Lubricate the following locations on the Hydraulic Excavator EVERY 8-10 HOURS:

Install 3 to 4 pumps of grease then rotate the upperstructure 90°.

Install 3 to 4 pumps of grease and again rotate the upperstructure 90°.

Repeat this until the slew pinion has been greased at four positions.

Stop the engine and dismount from the excavator.