

```
#
# (C) Copyright 2000 - 2005
# Wolfgang Denk, DENX Software Engineering, wd@denx.de.
#
# See file CREDITS for list of people who contributed to this
# project.
#
# This program is free software; you can redistribute it and/or
# modify it under the terms of the GNU General Public License as
# published by the Free Software Foundation; either version 2 of
# the License, or (at your option) any later version.
#
# This program is distributed in the hope that it will be useful,
# but WITHOUT ANY WARRANTY; without even the implied warranty of
# MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the
# GNU General Public License for more details.
#
# You should have received a copy of the GNU General Public License
# along with this program; if not, write to the Free Software
# Foundation, Inc., 59 Temple Place, Suite 330, Boston,
# MA 02111-1307 USA
#
```

Summary:摘要

=====

This directory contains the source code for U-Boot, a boot loader for Embedded boards based on PowerPC, ARM, MIPS and several other processors, which can be installed in a boot ROM and used to initialize and test the hardware or to download and run application code.

此目录包含uboot源代码，uboot是基于POWERPC，ARM，MIPS以及其他处理器的嵌入式boards的bootloader，它可以用来安装到bootrom，初始化和测试硬件，下载运行应用程序等。

The development of U-Boot is closely related to Linux: some parts of the source code originate in the Linux source tree, we have some header files in common, and special provision has been made to support booting of Linux images.

uboot的开发与linux相似：一部分源代码来自linux源码树，两者有通用的头文件；对linux映像提供特别的支持。

Some attention has been paid to make this software easily configurable and extendable. For instance, all monitor commands are implemented with the same call interface, so that it's very easy to add new commands. Also, instead of permanently adding rarely used code (for instance hardware test utilities) to the monitor, you can load and run it dynamically.

我们做了一些工作以使这个软件容易配置和扩展，比如，所有的monitor命令都使用一样的调用接口，所以可以很容易的添加新命令。当然，如果你不想固定添加某些很少使用的代码（例如用来测试硬件的工具代码），你可以动态的加载运行它们。

Status:

=====

In general, all boards for which a configuration option exists in the Makefile have been tested to some extent and can be considered "working". In fact, many of them are used in production systems.

通常，Makefile里面有一个配置选项的所有boards都经过一定程度的测试，可以认为它们是working的。事实上，它们当中很多都已经用到产品系统上了。

In case of problems see the CHANGELOG and CREDITS files to find out who contributed the specific port.

遇到问题时，请在CHANGELOG和CREDITS两个文件中查找一个具体的移植是由谁贡献的。

Where to get help:

=====

获取帮助

In case you have questions about, problems with or contributions for U-Boot you should send a message to the U-Boot mailing list at

<u-boot-users@lists.sourceforge.net>. There is also an archive of previous traffic on the mailing list - please search the archive before asking FAQ's. Please see <http://lists.sourceforge.net/lists/listinfo/u-boot-users/>

如果你对U-Boot有疑问, 或者想为U-Boot贡献, 你应该向U-Boot邮件列表<u-boot-users@lists.sourceforge.net>发送消息。在提问前, 请搜索邮件列表的历史记录: <http://lists.sourceforge.net/lists/listinfo/u-boot-users/>

Where we come from:

=====

我们的历史

- 从8xxrom源代码开始
- 建立了 PPCBoot 项目 (<http://sourceforge.net/projects/ppcboot>)
- 清理代码
- 让代码更易于添加自定义单板
- 可以添加其它类型的 [PowerPC] CPU
- 扩展了函数, 特别是:
 - * 为 Linux 引导程序提供了扩展的接口
 - * 下载 S-Record
 - * 从网络引导
 - * 从 PCMCIA / CompactFlash / ATA disk / SCSI ... 等设备引导
- 建立了ARMBoot项目 (<http://sourceforge.net/projects/armboot>)
- 添加了其它CPU家族 (从ARM开始)
- 建立了 U-Boot 项目 (<http://sourceforge.net/projects/u-boot>)
- 当前项目的主页: <http://www.denx.de/wiki/U-Boot>

Names and Spelling:

=====

名字与拼写

本项目的官方名称为"Das U-Boot"。在所有文档中都应使用"U-Boot"。比如:

这是U-Boot项目的README文件。文件名等, 也应基于u-boot字符串。比如:

```
include/asm-ppc/u-boot.h
```

```
#include <asm/u-boot.h>
```

变量名, 宏定义等, 也需要基于u_boot或者U_BOOT来定义。比如:

```
U_BOOT_VERSION      u_boot_logo
IH_OS_U_BOOT        u_boot_hush_start
```

The "official" name of this project is "Das U-Boot". The spelling "U-Boot" shall be used in all written text (documentation, comments in source files etc.). Example:

```
This is the README file for the U-Boot project.
```

File names etc. shall be based on the string "u-boot". Examples:

```
include/asm-ppc/u-boot.h
```

```
#include <asm/u-boot.h>
```

Variable names, preprocessor constants etc. shall be either based on the string "u_boot" or on "U_BOOT". Example:

```
U_BOOT_VERSION      u_boot_logo
IH_OS_U_BOOT        u_boot_hush_start
```

Versioning:

=====

版本

U-Boot uses a 3 level version number containing a version, a sub-version, and a patchlevel: "U-Boot-2.34.5" means version "2", sub-version "34", and patchlevel "4".

uboot的3级版本数字包含一个主版本, 子版本, 补丁级别: uboot-2.34.5表示主版本2, 子版本34, 补丁级别4。

The patchlevel is used to indicate certain stages of development between released versions, i. e. officially released versions of U-Boot will always have a patchlevel of "0".

补丁级别用来指示发布版本之间的特定开发阶段, 比如, 官方发布版本通常补丁级别是0。

Directory Hierarchy:

```

=====
目录结构
- board          与单板相关的文件
- common         一些与架构无关的函数
- cpu            针对特定CPU的文件
  - 74xx_7xx     针对Freescale MPC74xx 和 7xx CPU 的文件
  - arm720t      针对ARM 720 CPU 的文件
- arm920t        针对ARM 920 CPU 的文件
  - at91rm9200   针对Atmel AT91RM9200 CPU 的文件
  - imx          针对Freescale MC9328 i.MX CPU 的文件
  - s3c24x0      针对Samsung S3C24X0 CPU 的文件
- arm925t        针对ARM 925 CPU 的文件
- arm926ejs      针对ARM 926 CPU 的文件
- arm1136        针对ARM 1136 CPU 的文件
- at32ap        针对Atmel AVR32 AP CPU 的文件
- i386           针对i386 CPU 的文件
- ixp           针对Intel XScale IXP CPU 的文件
- leon2         针对Gaisler LEON2 SPARC CPU 的文件
- leon3         针对Gaisler LEON3 SPARC CPU 的文件
- mcf52x2       针对Freescale ColdFire MCF52x2 CPU 的文件
- mcf5227x      针对Freescale ColdFire MCF5227x CPU 的文件
- mcf532x       针对Freescale ColdFire MCF5329 CPU 的文件
- mcf5445x      针对Freescale ColdFire MCF5445x CPU 的文件
- mcf547x_8x    针对Freescale ColdFire MCF547x_8x CPU 的文件
- mips          针对MIPS CPU 的文件
- mpc5xx        针对Freescale MPC5xx CPU 的文件
- mpc5xxx       针对Freescale MPC5xxx CPU 的文件
- mpc8xx        针对Freescale MPC8xx CPU 的文件
- mpc8220       针对Freescale MPC8220 CPU 的文件
- mpc824x       针对Freescale MPC824x CPU 的文件
- mpc8260       针对Freescale MPC8260 CPU 的文件
- mpc85xx       针对Freescale MPC85xx CPU 的文件
- nios          针对Altera NIOS CPU 的文件
- nios2         针对Altera Nios-II CPU 的文件
- ppc4xx        针对AMCC PowerPC 4xx CPU 的文件
- pxa           针对Intel XScale PXA CPU 的文件
- s3c44b0       针对Samsung S3C44B0 CPU 的文件
- sa1100        针对Intel StrongARM SA1100 CPU 的文件
- disk          处理磁盘驱动器分区的代码
- doc           文档
- drivers       常用的设备驱动
- dtc           数字温度计及调节器的驱动
- examples      示范代码
- include       头文件
- lib_arm       针对ARM架构的文件
- lib_avr32     针对AVR32架构的文件
- lib_generic   针对所有架构的文件
- lib_i386      针对i386架构的文件
- lib_m68k      针对m68k架构的文件
- lib_mips      针对MIPS架构的文件
- lib_nios      针对NIOS架构的文件
- lib_ppc       针对PowerPC 架构的文件
- lib_sparc     针对SPARC架构的文件
- libfdt        支持平坦设备树(flattened device trees)的库文件
- net          网络代码
- post          上电自检
- rtc           实时时钟驱动
- tools         编译S-Record或U-Boot映像等相关工具

```

Software Configuration:

软件配置

Configuration is usually done using C preprocessor defines; the rationale behind that is to avoid dead code whenever possible.

配置一般使用c宏定义; 原因是避免可能存在的不可达代码。

There are two classes of configuration variables:

两种类型的配置变量

* **_OPTIONS_** 配置:
这类配置以"CONFIG_"开始, 用户可以自行选择。

* **_SETTINGS_** 配置:
这类配置以"CFG_"开始, 与硬件相关。如果你不清楚它的含义, 则不要随便修改。

后面我们会添加一个配置工具, 可能类似于Linux Kernel配置工具。目前, 我们还得手动完成配置, 比如建一些软链接, 编辑一些配置文件。下面我们使用TQM8xxL单板作为范例。

* Configuration **_OPTIONS_**:
These are selectable by the user and have names beginning with "CONFIG_".

* Configuration **_SETTINGS_**:
These depend on the hardware etc. and should not be meddled with if you don't know what you're doing; they have names beginning with "CFG_".

Later we will add a configuration tool - probably similar to or even identical to what's used for the Linux kernel. Right now, we have to do the configuration by hand, which means creating some symbolic links and editing some configuration files. We use the TQM8xxL boards as an example here.

Selection of Processor Architecture and Board Type:

选择处理器架构与单板类型:

For all supported boards there are ready-to-use default configurations available; just type "make <board_name>_config".
对所有已经支持的单板, 有默认配置可以直接使用; 只需要输入"make <board_name>_config".

比如: 对一个 TQM823L 单板类型:

Example: For a TQM823L module type:

```
cd u-boot
make TQM823L_config
```

For the Cogent platform, you need to specify the cpu type as well; e.g. "make cogent_mpc8xx_config". And also configure the cogent directory according to the instructions in cogent/README.

对于Cogent平台, 你需要指定CPU类型; 比如 "make cogent_mpc8xx_config"。还要根据cogent/README的指导来配置cogent目录。

Configuration Options:

配置选项:

Configuration depends on the combination of board and CPU type; all such information is kept in a configuration file "include/configs/<board_name>.h".

配置依赖于单板类型与CPU类型; 所有这些信息都保存在一个配置文件 "include/configs/<board_name>.h" 中

Example: For a TQM823L module, all configuration settings are in "include/configs/TQM823L.h".

比如: 对一个 TQM823L 单板, 所有配置设置都在文件"include/configs/TQM823L.h"中。

Many of the options are named exactly as the corresponding Linux kernel configuration options. The intention is to make it easier to build a config tool - later.

有许多选项与对应的Linux内核配置选项名称相同, 目的是之后容易做一个配置工具。

The following options need to be configured:

需要配置的选项如下:

- CPU Type: Define exactly one of
CPU类型: 只能定义一个, 比如CONFIG_MPC85XX.
PowerPC based CPUs:

```
CONFIG_MPC823,      CONFIG_MPC850,      CONFIG_MPC855,      CONFIG_MPC860
or CONFIG_MPC5xx
or CONFIG_MPC8220
or CONFIG_MPC824X, CONFIG_MPC8260
or CONFIG_MPC85xx
```

```

or    CONFIG_IOP480
or    CONFIG_405GP
or    CONFIG_405EP
or    CONFIG_440
or    CONFIG_MPC74xx
or    CONFIG_750FX

```

ARM based CPUs:

```

CONFIG_SA1110
CONFIG_ARM7
CONFIG_PXA250
CONFIG_CPU_MONAHANS

```

MicroBlaze based CPUs:

```

CONFIG_MICROBLAZE

```

Nios-2 based CPUs:

```

CONFIG_NIOS2

```

AVR32 based CPUs:

```

CONFIG_AT32AP

```

- Board Type: Define exactly one of
- 单板类型: 只能定义一个, 比如CONFIG_MPC8540ADS.

PowerPC based boards:

```

CONFIG_ADCIOP          CONFIG_FPS860L          CONFIG_OXC
CONFIG_ADS860          CONFIG_GEN860T          CONFIG_PCI405
CONFIG_AMX860          CONFIG_GENIETV          CONFIG_PCIPPC2
CONFIG_API000          CONFIG_GTH              CONFIG_PCIPPC6
CONFIG_AR405           CONFIG_gw8260          CONFIG_pcu_e
CONFIG_BAB7xx          CONFIG_hermes           CONFIG_PIP405
CONFIG_BC3450          CONFIG_hymod            CONFIG_PM826
CONFIG_c2mon           CONFIG_IAD210           CONFIG_ppmc8260
CONFIG_CANBT           CONFIG_ICU862           CONFIG_QS823
CONFIG_CCM             CONFIG_IP860            CONFIG_QS850
CONFIG_CMI             CONFIG_IPHASE4539       CONFIG_QS860T
CONFIG_cogent_mpc8260  CONFIG_IVML24           CONFIG_RBC823
CONFIG_cogent_mpc8xx  CONFIG_IVML24_128      CONFIG_RPXClassic
CONFIG_CPCI405         CONFIG_IVML24_256      CONFIG_RPXLite
CONFIG_CPCI4052        CONFIG_IVMS8            CONFIG_RPXsuper
CONFIG_CPCIISER4       CONFIG_IVMS8_128        CONFIG_rsdproto
CONFIG_CPU86           CONFIG_IVMS8_256        CONFIG_sacsng
CONFIG_CRAYL1          CONFIG_JSE              CONFIG_Sandpoint8240
CONFIG_CSB272          CONFIG_LANTEC           CONFIG_Sandpoint8245
CONFIG_CU824           CONFIG_LITE5200B        CONFIG_sbc8260
CONFIG_DASA_SIM         CONFIG_lwmon            CONFIG_sbc8560
CONFIG_DB64360          CONFIG_MBX              CONFIG_SM850
CONFIG_DB64460          CONFIG_MBX860T          CONFIG_SPD823TS
CONFIG_DU405           CONFIG_MHPC             CONFIG_STXGP3
CONFIG_DUET_ADS         CONFIG_MIP405           CONFIG_SXNI855T
CONFIG_EBONY           CONFIG_MOUSSE           CONFIG_TQM823L
CONFIG_ELPPC           CONFIG_MPC8260ADS       CONFIG_TQM8260
CONFIG_ELPT860         CONFIG_MPC8540ADS       CONFIG_TQM850L
CONFIG_ep8260          CONFIG_MPC8540EVAL      CONFIG_TQM855L
CONFIG_ERIC            CONFIG_MPC8560ADS       CONFIG_TQM860L
CONFIG_ESTEEM192E      CONFIG_MUSENKI          CONFIG_TTTech
CONFIG_ETX094          CONFIG_MVS1             CONFIG_UTX8245
CONFIG_EVB64260        CONFIG_NETPHONE         CONFIG_V37
CONFIG_FADS823         CONFIG_NETTA            CONFIG_W70LMC
CONFIG_FADS850SAR      CONFIG_NETVIA           CONFIG_W70LMG
CONFIG_FADS860T        CONFIG_NX823            CONFIG_WALNUT
CONFIG_FLAGADM          CONFIG_OCRTC            CONFIG_ZPC1900
CONFIG_FPS850L         CONFIG_ORSG             CONFIG_ZUMA

```

ARM based boards:

```

CONFIG_ARMADILLO,    CONFIG_AT91RM9200DK, CONFIG_CERF250,
CONFIG_CSB637,      CONFIG_DELTA,      CONFIG_DNP1110,
CONFIG_EP7312,      CONFIG_H2_OMAP1610, CONFIG_HHP_CRADLE,
CONFIG_IMPA7,       CONFIG_INNOVATOROMAP1510, CONFIG_INNOVATOROMAP1610,
CONFIG_KB9202,      CONFIG_LART,      CONFIG_LPD7A400,
CONFIG_LUBBOCK,     CONFIG_OSK_OMAP5912, CONFIG_OMAP2420H4,
CONFIG_PLEB2,       CONFIG_SHANNON,    CONFIG_P2_OMAP730,
CONFIG_SMDK2400,    CONFIG_SMDK2410,   CONFIG_TRAB,
CONFIG_VCMA9

```

MicroBlaze based boards:

```
CONFIG_SUZAKU
```

Nios-2 based boards:

```

CONFIG_PCI5441 CONFIG_PK1C20
CONFIG_EP1C20 CONFIG_EP1S10 CONFIG_EP1S40

```

AVR32 based boards:

```
CONFIG_ATSTK1000
```

- CPU Daughterboard Type: (if CONFIG_ATSTK1000 is defined)
Define exactly one of
- CPU子卡类型: (如果定义了CONFIG_ATSTK1000)
只能定义一个, 比如CONFIG_ATSTK1002 CONFIG_ATSTK1002
- CPU Module Type: (if CONFIG_COGENT is defined)
Define exactly one of
CONFIG_CMA286_60_OLD
CPU Module 类型 (如果定义了CONFIG_COGENT)
只能定义下列中的一个: CONFIG_CMA286_60_OLD
- FIXME --- 尚未经过测试的:
CONFIG_CMA286_60, CONFIG_CMA286_21, CONFIG_CMA286_60P,
CONFIG_CMA287_23, CONFIG_CMA287_50
- Motherboard Type: (if CONFIG_COGENT is defined)
- 母板类型: (如果定义了CONFIG_COGENT)
可以选择下列定义:
Define exactly one of
CONFIG_CMA101, CONFIG_CMA102
- Motherboard I/O Modules: (if CONFIG_COGENT is defined)
- 母板I/O Modules: (如果定义了CONFIG_COGENT)
可以择下面的一个或多个定义:
Define one or more of
CONFIG_CMA302
- Motherboard Options: (if CONFIG_CMA101 or CONFIG_CMA102 are defined)
- 母板选项: (如果定义了CONFIG_CMA101或者CONFIG_CMA102)
可以择下面的一个或多个定义:
Define one or more of
在LCD上每秒钟用旋转字符(即\-/\/)更新字符的位置
CONFIG_LCD_HEARTBEAT - update a character position on
the lcd display every second with
a "rotator" \-/\/
- Board flavour: (if CONFIG_MPC8260ADS is defined)
CONFIG_ADSTYPE
Possible values are:
CFG_8260ADS - original MPC8260ADS
CFG_8266ADS - MPC8266ADS
CFG_PQ2FADS - PQ2FADS-ZU or PQ2FADS-VR
CFG_8272ADS - MPC8272ADS

- MPC824X Family Member (if CONFIG_MPC824X is defined)

MPC824X 家族成员 (如果定义了CONFIG_MPC824X)

只能定义下列中的一个:

Define exactly one of
CONFIG_MPC8240, CONFIG_MPC8245

- 8xx CPU Options: (if using an MPC8xx cpu)

8xx CPU 选项: (如果使用MPC8xx CPU)

CONFIG_8xx_GCLK_FREQ - 不推荐: 如果get_gclk_freq()不能工作(比如, 没有32KHz PIT/RTC参考时钟), 用该宏定义CPU时钟。

CONFIG_8xx_GCLK_FREQ - deprecated: CPU clock if
get_gclk_freq() cannot work
e.g. if there is no 32KHz
reference PIT/RTC clock

CONFIG_8xx_OSCLK - PLL input clock (either EXTCLK
or XTAL/EXTAL)

- 859/866/885 CPU options: (if using a MPC859 or MPC866 or MPC885 CPU):

CFG_8xx_CPUCLK_MIN

CFG_8xx_CPUCLK_MAX

CONFIG_8xx_CPUCLK_DEFAULT

See doc/README.MPC866

CFG_MEASURE_CPUCLK

定义该宏来测量实际的CPU时钟, 否则需要保证配置的正确性。通常用于单板确认锁相环是否锁定到预期的频率上。注意, 本功能需要一个稳定的参考时钟(32kHz RTC时钟或者CFG_8XX_XIN)

Define this to measure the actual CPU clock instead
of relying on the correctness of the configured
values. Mostly useful for board bringup to make sure
the PLL is locked at the intended frequency. Note
that this requires a (stable) reference clock (32 kHz
RTC clock or CFG_8XX_XIN)

- Intel Monahans options:

CFG_MONAHANS_RUN_MODE_OSC_RATIO

Defines the Monahans run mode to oscillator
ratio. Valid values are 8, 16, 24, 31. The core
frequency is this value multiplied by 13 MHz.

定义Monahans的运行模式频率与晶振频率的比值. 有效值为8, 16, 24, 31.
核心频率为该值乘以13MHz.

CFG_MONAHANS_TURBO_RUN_MODE_RATIO

Defines the Monahans turbo mode to oscillator
ratio. Valid values are 1 (default if undefined) and
2. The core frequency as calculated above is multiplied
by this value.

定义Monahans turbo 模式频率与晶振频率的比值. 有效值为1(不定义的默认值)
和2. 核心频率是上面计算出的值与该值的乘积.

- Linux Kernel Interface:

- Linux内核接口:

CONFIG_CLOCKS_IN_MHZ

U-Boot在内部使用Hz保存所有时钟信息。为了与旧的Linux内核(要求bd_info数据内的时钟是MHZ单位)达到二进制兼容, 可以定义环境变量"clocks_in_mhz", U-Boot在传递给Linux内核前, 将时钟数据转换为MHZ。

当定义了 CONFIG_CLOCKS_IN_MHZ 时, "clocks_in_mhz=1"的定义会自动包含到默认的环境中。

U-Boot stores all clock information in Hz
internally. For binary compatibility with older Linux
kernels (which expect the clocks passed in the
bd_info data to be in MHz) the environment variable
"clocks_in_mhz" can be defined so that U-Boot
converts clock data to MHZ before passing it to the
Linux kernel.

When CONFIG_CLOCKS_IN_MHZ is defined, a definition of
"clocks_in_mhz=1" is automatically included in the
default environment.

CONFIG_MEMSIZE_IN_BYTES

[relevant for MIPS only]

CONFIG_MEMSIZE_IN_BYTES

[只与 MIPS 相关]

当向linux传递memsize参数时, 有一些版本的单位是字节, 其它的则是MB, 如果定义CONFIG_MEMSIZE_IN_BYTES, 则参数单位为字节。
When transferring memsize parameter to linux, some versions expect it to be in bytes, others in MB.
Define CONFIG_MEMSIZE_IN_BYTES to make it in bytes.

CONFIG_OF_FLAT_TREE

新的内核版本要求使用平坦设备树(基于开放固件的概念)将固件设置传递给内核
New kernel versions are expecting firmware settings to be passed using flat open firmware trees.
The environment variable "disable_of", when set, disables this functionality.

CONFIG_OF_FLAT_TREE_MAX_SIZE

The maximum size of the constructed OF tree.
FLAT tree结构最大容量

OF_CPU - The proper name of the cpus node.
OF_SOC - The proper name of the soc node.
OF_TBCLK - The timebase frequency.
OF_STDOUT_PATH - The path to the console device

CONFIG_OF_HAS_BD_T

The resulting flat device tree will have a copy of the bd_t.
Space should be pre-allocated in the dts for the bd_t.
最终的flat设备tree会保留一份bd_t的copy, 在dts应预留空间分配给bd_t.

CONFIG_OF_HAS_UBOOT_ENV

The resulting flat device tree will have a copy of u-boot's environment variables
最终的flat设备tree会保留一份uboot环境变量的copy

CONFIG_OF_BOARD_SETUP

Board code has addition modification that it wants to make to the flat device tree before handing it off to the kernel
单板在将平坦设备树传递给内核前需要做额外的修改

CONFIG_OF_BOOT_CPU

This define fills in the correct boot cpu in the boot param header, the default value is zero if undefined.
该定义填充到boot参数头部的CPU部分。如果不定义, 默认值为0。

- Serial Ports:

- 串行端口

CFG_PL010_SERIAL

Define this if you want support for Amba PrimeCell PL010 UARTs.
如果希望支持Amba PrimeCell PL010串口控制器, 则定义此宏。
CFG_PL011_SERIAL

Define this if you want support for Amba PrimeCell PL011 UARTs.
果希望支持Amba PrimeCell PL011串口控制器, 则定义此宏。

CONFIG_PL011_CLOCK

If you have Amba PrimeCell PL011 UARTs, set this variable to the clock speed of the UARTs.
如果你使用Amba PrimeCell PL011串口控制器, 将该宏定义为串口控制器的时钟频率。

CONFIG_PL01x_PORTS

If you have Amba PrimeCell PL010 or PL011 UARTs on your board, define this to a list of base addresses for each (supported) port. See e.g. include/configs/versatile.h
如果你的单板使用Amba PrimeCell PL010 或者 PL011 串口控制器, 定义该宏为一个列

表(注: 即数组初始化列表, 该数组类型是一个指针数组), 列表里每一项为串口的基地址。例子参见 "include/configs/versatile.h"

- Console Interface:

-控制台终端接口

根据单板的情况, 定义一个串口终端(比如 CONFIG_8xx_CONS_SMC1, CONFIG_8xx_CONS_SMC2, CONFIG_8xx_CONS_SCC1, ...), 或者定义CONFIG_8xx_CONS_NONE来关闭串口终端

Depending on board, define exactly one serial port (like CONFIG_8xx_CONS_SMC1, CONFIG_8xx_CONS_SMC2, CONFIG_8xx_CONS_SCC1, ...), or switch off the serial console by defining CONFIG_8xx_CONS_NONE

Note: if CONFIG_8xx_CONS_NONE is defined, the serial port routines must be defined elsewhere (i.e. serial_init(), serial_getc(), ...)

注意: 如果定义了 CONFIG_8xx_CONS_NONE, 串口例程必须在其它地方定义(比如 serial_init(), serial_getc(), ...)

CONFIG_CFB_CONSOLE

Enables console device for a color framebuffer. Needs following defines (cf. smiLynxEM, i8042, board/eltec/bab7xx)

使能终端设备的彩色帧缓冲. 需要下列定义 (cf. smiLynxEM, i8042, board/eltec/bab7xx)

VIDEO_FB_LITTLE_ENDIAN graphic memory organisation
图像存储组织 (默认为大端序)

(default big endian)

VIDEO_HW_RECTFILL graphic chip supports
图像芯片支持矩形填充(rectangle fill)

rectangle fill
(cf. smiLynxEM)

VIDEO_HW_BITBLT graphic chip supports
图像芯片支持位块传输(bit-blit) (cf. smiLynxEM)

bit-blit (cf. smiLynxEM)

VIDEO_VISIBLE_COLS visible pixel columns
可视像素列 (cols=pitch)

(cols=pitch)

VIDEO_VISIBLE_ROWS visible pixel rows
可视像素行

VIDEO_PIXEL_SIZE bytes per pixel
每像素字节数

VIDEO_DATA_FORMAT graphic data format
图像数据格式 (0-5, cf. cfb_console.c)

(0-5, cf. cfb_console.c)

VIDEO_FB_ADRS framebuffer address
帧缓冲地址

VIDEO_KBD_INIT_FCT keyboard int fct
(i.e. i8042_kbd_init())

VIDEO_TSTC_FCT test char fct
(i.e. i8042_tstc)

VIDEO_GETC_FCT get char fct
(i.e. i8042_getc)

CONFIG_CONSOLE_CURSOR cursor drawing on/off
打开/关闭 光标绘制 (需要 blink timer cf. i8042.c)

(requires blink timer

cf. i8042.c)

CFG_CONSOLE_BLINK_COUNT blink interval (cf. i8042.c)
闪烁间隔

CONFIG_CONSOLE_TIME display time/date info in
在右上角显示时间/日期信息 (需要 CONFIG_CMD_DATE)

upper right corner
(requires CFG_CMD_DATE)

CONFIG_VIDEO_LOGO display Linux logo in
在左上角显示Linux logo

upper left corner

CONFIG_VIDEO_BMP_LOGO use bmp_logo.h instead of
使用bmp_logo.h作为logo(默认是linux_logo.h)。需要

linux_logo.h for logo.

Requires CONFIG_VIDEO_LOGO

CONFIG_CONSOLE_EXTRA_INFO

除了logo外的其它单板信息

additional board info beside
the logo

When CONFIG_CFB_CONSOLE is defined, video console is
default i/o. Serial console can be forced with
environment 'console=serial'.

如果定义了CONFIG_CFB_CONSOLE, 视频终端是默认的i/o。使用'console
=serial'环境可以强制使用串口终端

When CONFIG_SILENT_CONSOLE is defined, all console
messages (by U-Boot and Linux!) can be silenced with
the "silent" environment variable. See
doc/README.silent for more information.

如果定义了 CONFIG_SILENT_CONSOLE, 可以用'silent'环境变量屏蔽所有终端
消息(包括U-Boot和Linux的输出!)。更多信息见doc/README.silent

- Console Baudrate:

控制台波特率

CONFIG_BAUDRATE - in bps

选择一个CFG_BAUDRATE_TABLE列出的波特率。

Select one of the baudrates listed in

CFG_BAUDRATE_TABLE, see below.

CFG_BRGCLK_PRESCALE, baudrate prescale

波特率预分频系数

- Interrupt driven serial port input:

终端驱动的串口输入

CONFIG_SERIAL_SOFTWARE_FIFO

PPC405GP only. 仅用于PPC405GP。

使用一个中断处理程序来接收串口数据。它将使能并使用硬件握手(RTS/CTS)和串口内
置FIFO。必须设置中断驱动的输入缓冲的字节数

Use an interrupt handler for receiving data on the
serial port. It also enables using hardware handshake
(RTS/CTS) and UART's built-in FIFO. Set the number of
bytes the interrupt driven input buffer should have.

不定义该宏则禁用此特性, 包括禁用缓冲和硬件握手。

Leave undefined to disable this feature, including
disable the buffer and hardware handshake.

- Console UART Number:

控制台UART编号

CONFIG_UART1_CONSOLE

AMCC PPC4xx only.

如果定义该宏, 则使用内部UART1作为默认的U-Boot终端 (否则使用UART0)

If defined internal UART1 (and not UART0) is used
as default U-Boot console.

- Boot Delay: CONFIG_BOOTDELAY - in seconds

引导延时, 单位秒

Delay before automatically booting the default image;
set to -1 to disable autoboot.

在自动引导默认映像前的延时, 设为-1表示禁用自动引导。

See doc/README.autoboot for these options that
work with CONFIG_BOOTDELAY. None are required.

与CONFIG_BOOTDELAY相关的选项见 doc/README.autoboot。这些选项都不是必需的。

CONFIG_BOOT_RETRY_TIME

CONFIG_BOOT_RETRY_MIN

CONFIG_AUTOBOOT_KEYED

CONFIG_AUTOBOOT_PROMPT

CONFIG_AUTOBOOT_DELAY_STR

CONFIG_AUTOBOOT_STOP_STR

CONFIG_AUTOBOOT_DELAY_STR2

CONFIG_AUTOBOOT_STOP_STR2

```
CONFIG_ZERO_BOOTDELAY_CHECK
CONFIG_RESET_TO_RETRY
```

- Autoboot Command: 自动引导命令

```
CONFIG_BOOTCOMMAND
```

只有定义了CONFIG_BOOTDELAY时, 才需要定义这个宏。如果在引导延时无字符输入, 则自动执行该宏定义的命令字符串。

Only needed when CONFIG_BOOTDELAY is enabled;
define a command string that is automatically executed
when no character is read on the console interface
within "Boot Delay" after reset.

```
CONFIG_BOOTARGS
```

该宏用于向bootm命令传递参数。CONFIG_BOOTARGS的值也被赋给环境变量"bootargs"
This can be used to pass arguments to the bootm
command. The value of CONFIG_BOOTARGS goes into the
environment value "bootargs".

```
CONFIG_RAMBOOT and CONFIG_NFSBOOT
```

两个宏值分别被赋给环境变量"ramboot"和"nfsboot"。用于简化从RAM和NFS两种引导途径之间的切换。
The value of these goes into the environment as
"ramboot" and "nfsboot" respectively, and can be used
as a convenience, when switching between booting from
ram and nfs.

- Pre-Boot Commands: 预引导命令

```
CONFIG_PREBOOT
```

如果定义了该选项, 则在引导延时的计时前或者运行自动引导命令前, 检查环境变量"preboot"是否存在, 如果存在则进入交互模式。

When this option is #defined, the existence of the
environment variable "preboot" will be checked
immediately before starting the CONFIG_BOOTDELAY
countdown and/or running the auto-boot command resp.
entering interactive mode.

该功能在"preboot"是由程序自动生成或修改的情况下比较有用。比如, LWMON单板的代码: 当引导系统时, 如果用户按下特定组合键, preboot会被修改。

This feature is especially useful when "preboot" is
automatically generated or modified. For an example
see the LWMON board specific code: here "preboot" is
modified when the user holds down a certain
combination of keys on the (special) keyboard when
booting the systems

- Serial Download Echo Mode: 串口下载回显模式

```
CONFIG_LOADS_ECHO
```

If defined to 1, all characters received during a
serial download (using the "loads" command) are
echoed back. This might be needed by some terminal
emulations (like "cu"), but may as well just take
time on others. This setting #define's the initial
value of the "loads_echo" environment variable.

如果定义为1, 在串口下载(使用"loads"命令)过程中, 会对所有收到的字符进行回显。在某些终端上可能有用(如"cu")
, 但对大多数终端只是浪费时间。这个设置定义了"loads_echo"环境变量的默认值。

- Kgdb Serial Baudrate: (if CFG_CMD_KGDB is defined) Kgdb串口波特率

```
CONFIG_KGDB_BAUDRATE
```

从CFG_BAUDRATE_TABLE里面选择一个波特率。
Select one of the baudrates listed in
CFG_BAUDRATE_TABLE, see below.

- Monitor Functions: Monitor功能

```
CONFIG_COMMANDS
```

Most monitor functions can be selected (or de-selected) by adjusting the definition of CONFIG_COMMANDS; to select individual functions, #define CONFIG_COMMANDS by "OR"ing any of the following values:

大多数monitor功能可以调整CONFIG_COMMANDS定义来选择或者去掉; 用#define CONFIG_COMMANDS或上任何下面的值来选择功能。

#define enables commands:

```
-----
CFG_CMD_ASKENV                * ask for env variable
CFG_CMD_AUTOSCRIP             Autoscript Support
CFG_CMD_BDI                   bdiinfo
CFG_CMD_BEDBUG                * Include BedBug Debugger
CFG_CMD_BMP                   * BMP support
CFG_CMD_BSP                   * Board specific commands
CFG_CMD_BOOTD                bootd
CFG_CMD_CACHE                 * icache, dcache
CFG_CMD_CONSOLE               coninfo
CFG_CMD_DATE                  * support for RTC, date/time...
CFG_CMD_DHCP                  * DHCP support
CFG_CMD_DIAG                  * Diagnostics
CFG_CMD_DOC                   * Disk-On-Chip Support
CFG_CMD_DTT                   * Digital Therm and Thermostat
CFG_CMD_ECHO                  echo arguments
CFG_CMD_EEPROM                * EEPROM read/write support
CFG_CMD_ELF                   * bootelf, bootvx
CFG_CMD_ENV                   saveenv
CFG_CMD_FDC                   * Floppy Disk Support
CFG_CMD_FAT                   * FAT partition support
CFG_CMD_FDOS                  * Dos diskette Support
CFG_CMD_FLASH                 flinfo, erase, protect
CFG_CMD_FPGA                  FPGA device initialization support
CFG_CMD_HWFLOW                * RTS/CTS hw flow control
CFG_CMD_I2C                   * I2C serial bus support
CFG_CMD_IDE                   * IDE harddisk support
CFG_CMD_IMI                   iminfo
CFG_CMD_IMLS                  List all found images
CFG_CMD_IMMAP                 * IMMR dump support
CFG_CMD_IRQ                   * irqinfo
CFG_CMD_ITEST                  Integer/string test of 2 values
CFG_CMD_JFFS2                 * JFFS2 Support
CFG_CMD_KGDB                  * kgdb
CFG_CMD_LOADB                 loadb
CFG_CMD_LOADS                 loads
CFG_CMD_MEMORY                md, mm, nm, mw, cp, cmp, crc, base,
                                loop, loopw, mtest
CFG_CMD_MISC                  Misc functions like sleep etc
CFG_CMD_MMC                   * MMC memory mapped support
CFG_CMD_MII                   * MII utility commands
CFG_CMD_NAND                  * NAND support
CFG_CMD_NET                   bootp, tftpboot, rarpboot
CFG_CMD_PCI                   * pciinfo
CFG_CMD_PCMCIA                * PCMCIA support
CFG_CMD_PING                  * send ICMP ECHO_REQUEST to network host
CFG_CMD_PORTIO                * Port I/O
CFG_CMD_REGINFO               * Register dump
CFG_CMD_RUN                   run command in env variable
CFG_CMD_SAVES                 * save S record dump
CFG_CMD_SCSI                  * SCSI Support
CFG_CMD_SDRAM                 * print SDRAM configuration information
                                (requires CFG_CMD_I2C)
CFG_CMD_SETGETDCR             Support for DCR Register access (4xx only)
CFG_CMD_SPI                   * SPI serial bus support
CFG_CMD_USB                   * USB support
CFG_CMD_VFD                   * VFD support (TRAB)
CFG_CMD_BSP                   * Board SPecific functions
CFG_CMD_CDP                   * Cisco Discover Protocol support
-----
```

CFG_CMD_ALL all

CONFIG_CMD_DFL Default configuration;

默认配置, 目前为止包含上面列举的所有不含星号的命令。
 at the moment this includes all commands, except the ones marked
 with "*" in the list above.

If you don't define CONFIG_COMMANDS it defaults to
 CONFIG_CMD_DFL in include/cmd_confdefs.h. A board can
 override the default settings in the respective
 include file.

如果你没有在include/cmd_confdefs.h定义默认的命令, 各个单板可以在各自的包含头文件
 覆盖默认设定。

EXAMPLE: If you want all functions except of network
 support you can write:

假设你想包含除了网络以外所有的功能, 你可以这样写:

```
#define CONFIG_COMMANDS (CFG_CMD_ALL & ~CFG_CMD_NET)
```

注意: 如果你不清楚, 请不要开启"icache"和"dcache"命令(配置参数CONFIG_CMD_CACHE)。
 在8xx或8260上无法使能数据cache(访问IMMR区间必须不过cache), 在其它使用数据cache
 作为初期栈和数据保存的系统里也不能禁用数据cache。

Note: Don't enable the "icache" and "dcache" commands
 (configuration option CFG_CMD_CACHE) unless you know
 what you (and your U-Boot users) are doing. Data
 cache cannot be enabled on systems like the 8xx or
 8260 (where accesses to the IMMR region must be
 uncached), and it cannot be disabled on all other
 systems where we (mis-) use the data cache to hold an
 initial stack and some data.

XXX - this list needs to get updated!

- Watchdog: 看门狗

CONFIG_WATCHDOG

如果定义该变量, 则使能看门狗支持。必须有平台特定的看门狗实现。对8xx和8260 CPU, SIU看
 门狗功能在SYPCR寄存器中使能。

If this variable is defined, it enables watchdog
 support. There must be support in the platform specific
 code for a watchdog. For the 8xx and 8260 CPUs, the
 SIU Watchdog feature is enabled in the SYPCR
 register.

- U-Boot Version: 版本

CONFIG_VERSION_VARIABLE

如果定义该宏, U-Boot创建一个"ver"环境变量, 用于显示"version"命令所打印出的U-Boot版本。本变量是只读的。

If this variable is defined, an environment variable
 named "ver" is created by U-Boot showing the U-Boot
 version as printed by the "version" command.

This variable is readonly.

- Real-Time Clock: 实时时钟

When CFG_CMD_DATE is selected, the type of the RTC
 has to be selected, too. Define exactly one of the
 following options:

如果选择了 CONFIG_CMD_DATE, 需要同时选择RTC的类型。使用下列定义中的一个:

```
CONFIG_RTC_MPC8xx    - use internal RTC of MPC8xx
CONFIG_RTC_PCF8563   - use Philips PCF8563 RTC
CONFIG_RTC_MC146818  - use MC146818 RTC
CONFIG_RTC_DS1307    - use Maxim, Inc. DS1307 RTC
CONFIG_RTC_DS1337    - use Maxim, Inc. DS1337 RTC
CONFIG_RTC_DS1338    - use Maxim, Inc. DS1338 RTC
CONFIG_RTC_DS164x    - use Dallas DS164x RTC
CONFIG_RTC_MAX6900   - use Maxim, Inc. MAX6900 RTC
```

Note that if the RTC uses I2C, then the I2C interface
 must also be configured. See I2C Support, below.

注意: 如果RTC使用I2C, 则需要配置I2C接口。参见见下面的I2C支持。

- Timestamp Support:

- 时间戳支持:

如果定义CONFIG_TIMESTAMP, 与映像相关的命令如bootm或iminfo会打印给定映像的时间戳(日期和时间)。如果定义了CONFIG_CMD_DATE, 该选项自动使能。
When CONFIG_TIMESTAMP is selected, the timestamp (date and time) of an image is printed by image commands like bootm or iminfo. This option is automatically enabled when you select CFG_CMD_DATE .

- Partition Support:

分区支持

CONFIG_MAC_PARTITION and/or CONFIG_DOS_PARTITION
and/or CONFIG_ISO_PARTITION

如果使能了IDE或SCSI支持(CONFIG_CMD_IDE 或者 CONFIG_CMD_SCSI), 你必须至少配置一种分区类型的支持
If IDE or SCSI support is enabled (CFG_CMD_IDE or CFG_CMD_SCSI) you must configure support for at least one partition type as well.

- IDE Reset method:

IDE复位方式

CONFIG_IDE_RESET_ROUTINE - this is defined in several board configurations files but used nowhere!

在几个单板的配置文件中定义, 但并未使用!

CONFIG_IDE_RESET - is this is defined, IDE Reset will be performed by calling the function

如果定义了, 会调用下面的函数复位IDE,

ide_set_reset(int reset)

which has to be defined in a board specific file

这个函数必须在单板相关文件里定义。

- ATAPI Support:

CONFIG_ATAPI

Set this to enable ATAPI support.

- LBA48 Support

CONFIG_LBA48

定义该宏可支持大于137GB的磁盘。需要检查CFG_64BIT_LBA, CFG_64BIT_VSPRINTF 和 CFG_64BIT_STRTOUL 选项。如果不定义它们, LBA48使用32位变量, 只能支持到最大2.1TB的磁盘。

Set this to enable support for disks larger than 137GB

Also look at CFG_64BIT_LBA ,CFG_64BIT_VSPRINTF and CFG_64BIT_STRTOUL

Whithout these , LBA48 support uses 32bit variables and will 'only' support disks up to 2.1TB.

CFG_64BIT_LBA:

When enabled, makes the IDE subsystem use 64bit sector addresses.

Default is 32bit.

如果使能, 则IDE子系统使用64位的扇区地址, 默认是32位。

- SCSI Support:

当前只支持 SYM53C8XX SCSI 控制器: 定义 CONFIG_SCSI_SYM53C8XX 来使能。

At the moment only there is only support for the

SYM53C8XX SCSI controller; define

CONFIG_SCSI_SYM53C8XX to enable it.

CFG_SCSI_MAX_LUN [8], CFG_SCSI_MAX_SCSI_ID [7] and

CFG_SCSI_MAX_DEVICE [CFG_SCSI_MAX_SCSI_ID *

CFG_SCSI_MAX_LUN] can be adjusted to define the

maximum numbers of LUNs, SCSI ID's and target devices.

CFG_SCSI_SYM53C8XX_CCF to fix clock timing (80Mhz)

可以调整CFG_SCSI_MAX_LUN [8], CFG_SCSI_MAX_SCSI_ID [7] 及 CFG_SCSI_MAX_DEVICE

[CFG_SCSI_MAX_SCSI_ID * CFG_SCSI_MAX_LUN] 定义最大LUN, SCSI ID及目标的最大设备数。

定义CFG_SCSI_SYM53C8XX_CCF 以修正clock timing(时钟时序?) (80Mhz)

- NETWORK Support (PCI):

- 网络支持 (PCI设备):

CONFIG_E1000

Support for Intel 8254x gigabit chips.

CONFIG_EEPROM100

支持Intel 82557/82559/82559ER芯片。还可以定义CONFIG_EEPROM100_SROM_WRITE使能首次初始

化时的EEPROM写流程.

Support for Intel 82557/82559/82559ER chips.

Optional CONFIG_EEPROM100_SROM_WRITE enables eeprom write routine for first time initialisation.

CONFIG_TULIP

Support for Digital 2114x chips.

Optional CONFIG_TULIP_SELECT_MEDIA for board specific modem chip initialisation (KS8761/QS6611).

支持 Digital 2114x 芯片。

还可以定义 CONFIG_TULIP_SELECT_MEDIA 支持单板特定的modem芯片初始化(KS8761/QS6611).

CONFIG_NATSEMI

Support for National dp83815 chips.

CONFIG_NS8382X

Support for National dp8382[01] gigabit chips.

- NETWORK Support (other):

- 网络支持 (其它设备):

CONFIG_DRIVER_LAN91C96

Support for SMSC's LAN91C96 chips.

CONFIG_LAN91C96_BASE

Define this to hold the physical address of the LAN91C96's I/O space

CONFIG_LAN91C96_USE_32_BIT

Define this to enable 32 bit addressing

CONFIG_DRIVER_SMC91111

Support for SMSC's LAN91C111 chip

CONFIG_SMC91111_BASE

Define this to hold the physical address of the device (I/O space)

CONFIG_SMC_USE_32_BIT

Define this if data bus is 32 bits

CONFIG_SMC_USE_IOFUNCS

Define this to use i/o functions instead of macros (some hardware wont work with macros)

- USB Support:

目前只支持UHCI host controller (PIP405, MIP405, MPC5200); 定义 CONFIG_USB_UHCI 来使能。

定义 CONFIG_USB_KEYBOARD 使能USB键盘支持, 定义 CONFIG_USB_STORAGE 使能USB存储设备。

At the moment only the UHCI host controller is

supported (PIP405, MIP405, MPC5200); define

CONFIG_USB_UHCI to enable it.

define CONFIG_USB_KEYBOARD to enable the USB Keyboard

and define CONFIG_USB_STORAGE to enable the USB

storage devices.

Note:

注意: 受支持的是USB键盘和USB软驱 (TEAC FD-05PUB).

Supported are USB Keyboards and USB Floppy drives (TEAC FD-05PUB).

MPC5200 USB requires additional defines:

CONFIG_USB_CLOCK

for 528 MHz Clock: 0x0001bbbb

CONFIG_USB_CONFIG

for differential drivers: 0x00001000

for single ended drivers: 0x00005000

- MMC Support:

U-Boot支持Intel PXA上的MMC控制器, 定义CONFIG_MMC以使能支持。用与flash类似的方式将MMC设备映射到物理内存, 即

可在boot提示符下访问设备。CONFIG_CMD_MMC使能命令行。MMC驱动支持FAT文件系统, 可以通过CONFIG_CMD_FAT

开启.

The MMC controller on the Intel PXA is supported. To enable this define CONFIG_MMC. The MMC can be accessed from the boot prompt by mapping the device to physical memory similar to flash. Command line is enabled with CFG_CMD_MMC. The MMC driver also works with the FAT fs. This is enabled with CFG_CMD_FAT.

- Journaling Flash filesystem support:

- 日志Flash文件系统支持:

CONFIG_JFFS2_NAND, CONFIG_JFFS2_NAND_OFF, CONFIG_JFFS2_NAND_SIZE, CONFIG_JFFS2_NAND_DEV

Define these for a default partition on a NAND device

用于NAND设备上的默认分区的参数

CFG_JFFS2_FIRST_SECTOR, CFG_JFFS2_FIRST_BANK, CFG_JFFS2_NUM_BANKS

Define these for a default partition on a NOR device

用于NOR设备上的默认分区的参数

CFG_JFFS_CUSTOM_PART

定义此宏来创建一个私有分区, 你必须提供一个函数: struct part_info* jffs2_part_info(int part_num)

Define this to create an own partition. You have to provide a

function struct part_info* jffs2_part_info(int part_num)

如果只定义一个JFFS2分区, 也可以定义下面的宏来禁用chpart命令。

#define CFG_JFFS_SINGLE_PART 1

在没有自定义分区的时候, 这个是默认行为。

If you define only one JFFS2 partition you may also want to

#define CFG_JFFS_SINGLE_PART 1

to disable the command chpart. This is the default when you have not defined a custom partition

- Keyboard Support:

- 键盘支持:

CONFIG_ISA_KEYBOARD

定义该宏以支持标准PC键盘

Define this to enable standard (PC-Style) keyboard support

CONFIG_I8042_KBD

支持标准PC键盘, US(默认)和GERMAN键盘布局(通过"keymap=de"切换)。为cfb_console提供函数

i8042_kbd_init,

i8042_tstc和i8042_getc。支持光标闪烁。

Standard PC keyboard driver with US (is default) and

GERMAN key layout (switch via environment 'keymap=de') support.

Export function i8042_kbd_init, i8042_tstc and i8042_getc

for cfb_console. Supports cursor blinking.

- Video support:

- 视频支持

CONFIG_VIDEO

定义该宏以支持视频 (输出到视频)。

Define this to enable video support (for output to video).

CONFIG_VIDEO_CT69000

支持 Chips & Technologies 69000 视频芯片

Enable Chips & Technologies 69000 Video chip

CONFIG_VIDEO_SMI_LYNXEM

使能Silicon Motion SMI 712/710/810 视频芯片. 视频输出由环境变量'videoout' (1 = LCD and 2 =

CRT).

如果不定义videoout,默认为CRT

Enable Silicon Motion SMI 712/710/810 Video chip. The

video output is selected via environment 'videoout'

(1 = LCD and 2 = CRT). If videoout is undefined, CRT is assumed.

For the CT69000 and SMI_LYNXEM drivers, videomode is selected via environment 'videomode'. Two diferent ways are possible:

对CT69000 和 SMI_LYNXEM 驱动, 视频模式由环境变量'videomode'选择, 有两个选择:

- "videomode=num" 'num' is a standard LiLo mode numbers.

Following standard modes are supported (* is default):

支持下列标准模式 (* 为默认值):

	Colors	640x480	800x600	1024x768	1152x864	1280x1024
8 bits		0x301*	0x303	0x305	0x161	0x307
15 bits		0x310	0x313	0x316	0x162	0x319
16 bits		0x311	0x314	0x317	0x163	0x31A
24 bits		0x312	0x315	0x318	?	0x31B

(i.e. setenv videomode 317; saveenv; reset;)

- "videomode=bootargs" 所有视频参数从bootargs提取. (见 drivers/video/videomodes.c)

- "videomode=bootargs" all the video parameters are parsed from the bootargs. (See drivers/videomodes.c)

CONFIG_VIDEO_SED13806

使能 Epson SED13806 驱动. 该驱动支持8bpp和16bpp模式(由CONFIG_VIDEO_SED13806_8BPP或CONFIG_VIDEO_SED13806_16BPP定义)

Enable Epson SED13806 driver. This driver supports 8bpp and 16bpp modes defined by CONFIG_VIDEO_SED13806_8BPP or CONFIG_VIDEO_SED13806_16BPP

- Keyboard Support:

- 键盘支持:

CONFIG_KEYBOARD

定义该宏来使能自定义键盘支持。它简单地调用drv_keyboard_init(), 该函数需要在单板相关文件中提供。目前使用该宏的单板只有RBC823。

Define this to enable a custom keyboard support.

This simply calls drv_keyboard_init() which must be defined in your board-specific files.

The only board using this so far is RBC823.

- LCD Support: CONFIG_LCD

定义该宏以支持 LCD (输出至LCD); 同时从下列的显示支持中选择一种:

Define this to enable LCD support (for output to LCD display); also select one of the supported displays by defining one of these:

CONFIG_NEC_NL6448AC33:

NEC NL6448AC33-18. Active, color, single scan.

CONFIG_NEC_NL6448BC20

NEC NL6448BC20-08. 6.5", 640x480.
Active, color, single scan.

CONFIG_NEC_NL6448BC33_54

NEC NL6448BC33-54. 10.4", 640x480.
Active, color, single scan.

CONFIG_SHARP_16x9

Sharp 320x240. Active, color, single scan.
It isn't 16x9, and I am not sure what it is.

CONFIG_SHARP_LQ64D341

Sharp LQ64D341 display, 640x480.
Active, color, single scan.

CONFIG_HLD1045

HLD1045 display, 640x480.
Active, color, single scan.

CONFIG_OPTREX_BW

Optrex CBL50840-2 NF-FW 99 22 M5
or
Hitachi LMG6912RPFC-00T
or
Hitachi SP14Q002

320x240. Black & white.

Normally display is black on white background; define
CFG_WHITE_ON_BLACK to get it inverted.

- Splash Screen Support: CONFIG_SPLASH_SCREEN

如果设置该选项, 将检查环境变量"splashimage". 如果变量存在则显示一张BMP图像, 普通的logo, 版权及系统信息不再显示. "splashimage"指定了位图的存放地址. 终端也被重定向到"nulldev". 由于启动的早期就会加载 Splash screen, 使用它可以实现安静的启动.

If this option is set, the environment is checked for a variable "splashimage". If found, the usual display of logo, copyright and system information on the LCD is suppressed and the BMP image at the address specified in "splashimage" is loaded instead. The console is redirected to the "nulldev", too. This allows for a "silent" boot where a splash screen is loaded very quickly after power-on.

- Gzip compressed BMP image support: CONFIG_VIDEO_BMP_GZIP

如果设置该选项, 除了支持标准BMP图像外, splashscreen或者bmp命令可以使用gzip压缩的BMP图像.

If this option is set, additionally to standard BMP images, gzipped BMP images can be displayed via the splashscreen support or the bmp command.

- Compression support:

压缩支持

CONFIG_BZIP2

如果设置了该选项, u-boot将包含对bzip2压缩映像的支持。如果不设置该选项, 则只支持未压缩的或者gzip压缩的映像。

If this option is set, support for bzip2 compressed images is included. If not, only uncompressed and gzip compressed images are supported.

注意: bzip2 算法需要大量的RAM, 因此malloc区大小(通过CFG_MALLOC_LEN定义)至少为4MB。

NOTE: the bzip2 algorithm requires a lot of RAM, so the malloc area (as defined by CFG_MALLOC_LEN) should be at least 4MB.

- MII/PHY support:

-MII/PHY支持

CONFIG_PHY_ADDR

The address of PHY on MII bus.

PHY在MII总线上的地址

CONFIG_PHY_CLOCK_FREQ (ppc4xx)

MII总线的时钟频率。

The clock frequency of the MII bus

CONFIG_PHY_GIGE

如果设置该选项, 则支持GE PHY的速度/双工检测

If this option is set, support for speed/duplex detection of Gigabit PHY is included.

CONFIG_PHY_RESET_DELAY

有一些PHY (如Intel LXT971A) 在复位后需要经过一定的时延才能访问MII寄存器, 需要设置该宏。该设置的单位为usec (LXT971A至少需设为300usec)

Some PHY like Intel LXT971A need extra delay after

reset before any MII register access is possible.
For such PHY, set this option to the usec delay
required. (minimum 300usec for LXT971A)

CONFIG_PHY_CMD_DELAY (ppc4xx)

有一些PHY (如Intel LXT971A) 在发起MII命令时, 需要额外的时延才能读取MII状态寄存器。
Some PHY like Intel LXT971A need extra delay after
command issued before MII status register can be read

- Ethernet address:

以太网地址

CONFIG_ETHADDR
CONFIG_ETH2ADDR
CONFIG_ETH3ADDR

为对应的以太网接口定义一个默认的MAC地址, 当不能自动确定时使用该定义。
Define a default value for ethernet address to use
for the respective ethernet interface, in case this
is not determined automatically.

- IP address:

- IP 地址:

CONFIG_IPADDR

为默认的以太网接口定义一个默认的IP地址(在没有确定IP地址的时候使用, 比如通过bootp确定IP地址)。
Define a default value for the IP address to use for
the default ethernet interface, in case this is not
determined through e.g. bootp.

- Server IP address:

- 服务器 IP 地址:

CONFIG_SERVERIP

定义默认的TFTP服务器IP地址。在使用"tftboot"命令时, 将使用该地址连接TFTP服务器
Defines a default value for the IP address of a TFTP
server to contact when using the "tftboot" command.

- BOOTP Recovery Mode:

- BOOTP 恢复模式:

CONFIG_BOOTP_RANDOM_DELAY

If you have many targets in a network that try to
boot using BOOTP, you may want to avoid that all
systems send out BOOTP requests at precisely the same
moment (which would happen for instance at recovery
from a power failure, when all systems will try to
boot, thus flooding the BOOTP server. Defining
CONFIG_BOOTP_RANDOM_DELAY causes a random delay to be
inserted before sending out BOOTP requests. The
following delays are insterted then:

如果你的网络中有多个系统使用BOOTP启动, 你可能需要避免出现所有系统同时发送BOOTP请求的情况(如因电源
恢复产生的系统同时上电), 将导致BOOTP服务器过载. 定义 CONFIG_BOOTP_RANDOM_DELAY 将在发送BOOTP请
求前插入随机延时. 插入规则如下:

1st BOOTP request: delay 0 ... 1 sec
2nd BOOTP request: delay 0 ... 2 sec
3rd BOOTP request: delay 0 ... 4 sec
4th and following
BOOTP requests: delay 0 ... 8 sec

- DHCP Advanced Options:

- DHCP 高级选项:

CONFIG_BOOTP_MASK

You can fine tune the DHCP functionality by adding
these flags to the CONFIG_BOOTP_MASK define:

可以定义下列CONFIG_BOOTP_*宏来微调DHCP的功能:

CONFIG_BOOTP_DNS2 - If a DHCP client requests the DNS
serverip from a DHCP server, it is possible that more
than one DNS serverip is offered to the client.
If CONFIG_BOOTP_DNS2 is enabled, the secondary DNS
serverip will be stored in the additional environment
variable "dnsip2". The first DNS serverip is always
stored in the variable "dnsip", when CONFIG_BOOTP_DNS
is added to the CONFIG_BOOTP_MASK.

CONFIG_BOOTP_SEND_HOSTNAME - Some DHCP servers are capable to do a dynamic update of a DNS server. To do this, they need the hostname of the DHCP requester.
If **CONFIG_BOOTP_SEND_HOSTNAME** is added to the **CONFIG_BOOTP_MASK**, the content of the "hostname" environment variable is passed as option 12 to the DHCP server.

- CDP Options:
- CDP 选项:

CONFIG_CDP_DEVICE_ID

The device id used in CDP trigger frames.

CONFIG_CDP_DEVICE_ID_PREFIX

添加到MAC地址的2个字符前缀.

A two character string which is prefixed to the MAC address of the device.

CONFIG_CDP_PORT_ID

包含端口ascii名称的printf格式串. 一般设为"eth%d", 对第一个以太网口为eth0, 对第二个以太网口为eth1等等.

A printf format string which contains the ascii name of the port. Normally is set to "eth%d" which sets eth0 for the first ethernet, eth1 for the second etc.

CONFIG_CDP_CAPABILITIES

表示设备能力的32位整数. 0x00000010 表示普通的不转发的主机.

A 32bit integer which indicates the device capabilities; 0x00000010 for a normal host which does not forwards.

CONFIG_CDP_VERSION

包含软件版本的ascii字符串.

An ascii string containing the version of the software.

CONFIG_CDP_PLATFORM

包含平台名称的ascii字符串.

An ascii string containing the name of the platform.

CONFIG_CDP_TRIGGER

A 32bit integer sent on the trigger.

CONFIG_CDP_POWER_CONSUMPTION

A 16bit integer containing the power consumption of the device in .1 of milliwatts.

CONFIG_CDP_APPLIANCE_VLAN_TYPE

A byte containing the id of the VLAN.

- Status LED: **CONFIG_STATUS_LED**

linux

有几个配置可以用LED显示当前的状态. 比如, 在运行U-Boot代码时, LED快闪, 收到BOOTP应答时, 停止快闪, 在运行

内核时慢闪(由linux内核的状态LED驱动支持). 定义 **CONFIG_STATUS_LED** 可以打开U-Boot的这个功能.

Several configurations allow to display the current status using a LED. For instance, the LED will blink fast while running U-Boot code, stop blinking as soon as a reply to a BOOTP request was received, and start blinking slow once the Linux kernel is running (supported by a status LED driver in the Linux kernel). Defining **CONFIG_STATUS_LED** enables this feature in U-Boot.

- CAN Support: **CONFIG_CAN_DRIVER**

定义 **CONFIG_CAN_DRIVER** 在支持 CAN 的系统上使能驱动支持(可选), 比如 TQM8xxL. Defining **CONFIG_CAN_DRIVER** enables CAN driver support on those systems that support this (optional) feature, like the TQM8xxL modules.

- I2C Support: CONFIG_HARD_I2C | CONFIG_SOFT_I2C

使能I2C串行总线命令. 定义任一个宏可以在选择的CPU内包含相应的I2C驱动(但不能同时定义). These enable I2C serial bus commands. Defining either of (but not both of) CONFIG_HARD_I2C or CONFIG_SOFT_I2C will include the appropriate I2C driver for the selected cpu.

可以在u-boot命令行下使用i2c命令(只要在CONFIG_COMMANDS中设置了CONFIG_CMD_I2C), 并与基于i2c的实时时钟芯片通讯。命令接口的说明见common/cmd_i2c.c. This will allow you to use i2c commands at the u-boot command line (as long as you set CFG_CMD_I2C in CONFIG_COMMANDS) and communicate with i2c based realtime clock chips. See common/cmd_i2c.c for a description of the command line interface.

CONFIG_HARD_I2C selects the CPM hardware driver for I2C. 选择一个I2C控制器硬件。

CONFIG_SOFT_I2C configures u-boot to use a software (aka bit-banging) driver instead of CPM or similar hardware support for I2C. 配置u-boot使用软件(即bit-banging)驱动代替CPM或相似的I2C支持。

There are several other quantities that must also be defined when you define CONFIG_HARD_I2C or CONFIG_SOFT_I2C. 你定义了CONFIG_HARD_I2C 或者 CONFIG_SOFT_I2C后, 还有其它几个数值也需要定义。

两种定义下都需要再定义 CFG_I2C_SPEED 为你预定的i2c总线运行频率(Hz单位), 定义CFG_I2C_SLAVE 为本节点的地址(即CPU的i2c节点地址)。

In both cases you will need to define CFG_I2C_SPEED to be the frequency (in Hz) at which you wish your i2c bus to run and CFG_I2C_SLAVE to be the address of this node (ie the cpu's i2c node address).

目前, u-boot在mpc8xx上的i2c代码(cpu/mpc8xx/i2c.c)将CPU设为主节点, 因此地址应设为0(见手册, 如MPC823e User's Manual p.16-473)。将CFG_I2C_SLAVE设为0。Now, the u-boot i2c code for the mpc8xx (cpu/mpc8xx/i2c.c) sets the cpu up as a master node and so its address should therefore be cleared to 0 (See, eg, MPC823e User's Manual p.16-473). So, set CFG_I2C_SLAVE to 0.

对CONFIG_HARD_I2C, 上面就是所有需要的设置。 That's all that's required for CONFIG_HARD_I2C.

如果你使用软件i2c接口(CONFIG_SOFT_I2C), 还需要定义下列宏(例子取自include/configs/lwmon.h): If you use the software i2c interface (CONFIG_SOFT_I2C) then the following macros need to be defined (examples are from include/configs/lwmon.h):

I2C_INIT

(可选). 定义用于使能i2c控制器或配置端口的命令。(Optional). Any commands necessary to enable the I2C controller or configure ports.

eg: #define I2C_INIT (immr->im_cpm.cp_pbdir |= PB_SCL)

I2C_PORT

(仅用于MPC8260 CPU). 定义要使用的I/O (the code assumes both bits are on the same port). 有效的值为0..3, 对应端口A..D。(Only for MPC8260 CPU). The I/O port to use (the code assumes both bits are on the same port). Valid values are 0..3 for ports A..D.

I2C_ACTIVE

使I2C数据线处于激活状态(driven)的必要代码。如果数据线对collector是开放的, 定义可以为空。The code necessary to make the I2C data line active (driven). If the data line is open collector, this define can be null.

eg: #define I2C_ACTIVE (immr->im_cpm.cp_pbdir |= PB_SDA)

I2C_TRISTATE

使I2C数据线处于三态(非激活)的必要代码。如果数据线对collector是开放的, 定义可以为空。

The code necessary to make the I2C data line tri-stated (inactive). If the data line is open collector, this define can be null.

eg: #define I2C_TRISTATE (immr->im_cpm.cp_pbdire &= ~PB_SDA)

I2C_READ

定义一段代码, 在I2C数据线为高时返回TRUE, 为低时返回FALSE。

Code that returns TRUE if the I2C data line is high, FALSE if it is low.

eg: #define I2C_READ ((immr->im_cpm.cp_pbdat & PB_SDA) != 0)

I2C_SDA(bit)

如果 <bit> 为TRUE, 将I2C总线置为高, 否则置为低。

If <bit> is TRUE, sets the I2C data line high. If it is FALSE, it clears it (low).

eg: #define I2C_SDA(bit) \
 if(bit) immr->im_cpm.cp_pbdat |= PB_SDA; \
 else immr->im_cpm.cp_pbdat &= ~PB_SDA

I2C_SCL(bit)

如果 <bit> 为TRUE, 将I2C时钟线置为高, 否则置为低。

If <bit> is TRUE, sets the I2C clock line high. If it is FALSE, it clears it (low).

eg: #define I2C_SCL(bit) \
 if(bit) immr->im_cpm.cp_pbdat |= PB_SCL; \
 else immr->im_cpm.cp_pbdat &= ~PB_SCL

I2C_DELAY

每个时钟周期会调用该延时4次, 因此它控制了数据传输速率。数据速率为 $1 / (I2C_DELAY * 4)$ 。通常定义成下面的

样子:

This delay is invoked four times per clock cycle so this controls the rate of data transfer. The data rate thus is $1 / (I2C_DELAY * 4)$. Often defined to be something like:

```
#define I2C_DELAY udelay(2)
```

CFG_I2C_INIT_BOARD

单板在i2c总线正在传输时复位, 芯片会认为当前传输仍然在进行。对一些单板而言, 直接访问i2c SCLK线是可行的,

可以

将处理器引脚作为GPIO使用, 或者另连一根引脚连到总线上。如果定义了该选项, boards/xxx/board.c中自定义的i2c_init_board()例程会在boot过程较早阶段执行。

When a board is reset during an i2c bus transfer chips might think that the current transfer is still in progress. On some boards it is possible to access the i2c SCLK line directly, either by using the processor pin as a GPIO or by having a second pin connected to the bus. If this option is defined a custom i2c_init_board() routine in boards/xxx/board.c is run early in the boot sequence.

CONFIG_I2CFAST (PPC405GP|PPC405EP only)

该选项使能u-boot基于环境变量i2cfast'配置bd_info结构体内的bi_iic_fast[]标志。(见i2cfast)

This option enables configuration of bi_iic_fast[] flags in u-boot bd_info structure based on u-boot environment variable "i2cfast". (see also i2cfast)

- SPI Support: CONFIG_SPI
- SPI支持

Enables SPI driver (so far only tested with SPI EEPROM, also an instance works with Crystal A/D and D/As on the SACSng board)

CONFIG_SPI_X

Enables extended (16-bit) SPI EEPROM addressing.
(symmetrical to CONFIG_I2C_X)

CONFIG_SOFT_SPI

Enables a software (bit-bang) SPI driver rather than using hardware support. This is a general purpose driver that only requires three general I/O port pins (two outputs, one input) to function. If this is defined, the board configuration must define several SPI configuration items (port pins to use, etc). For an example, see include/configs/sacsng.h.

- FPGA Support: CONFIG_FPGA_COUNT

—FPGA支持

Specify the number of FPGA devices to support.

CONFIG_FPGA

Used to specify the types of FPGA devices. For example,
#define CONFIG_FPGA CFG_XILINX_VIRTEX2

CFG_FPGA_PROG_FEEDBACK

Enable printing of hash marks during FPGA configuration.

CFG_FPGA_CHECK_BUSY

Enable checks on FPGA configuration interface busy status by the configuration function. This option will require a board or device specific function to be written.

CONFIG_FPGA_DELAY

If defined, a function that provides delays in the FPGA configuration driver.

CFG_FPGA_CHECK_CTRL_C

Allow Control-C to interrupt FPGA configuration

CFG_FPGA_CHECK_ERROR

Check for configuration errors during FPGA bitfile loading. For example, abort during Virtex II configuration if the INIT_B line goes low (which indicated a CRC error).

CFG_FPGA_WAIT_INIT

Maximum time to wait for the INIT_B line to deassert after PROB_B has been deasserted during a Virtex II FPGA configuration sequence. The default time is 500 mS.

CFG_FPGA_WAIT_BUSY

Maximum time to wait for BUSY to deassert during Virtex II FPGA configuration. The default is 5 mS.

CFG_FPGA_WAIT_CONFIG

Time to wait after FPGA configuration. The default is 200 mS.

- Configuration Management:

—配置管理

CONFIG_IDENT_STRING

如果定义了, 该字符串会添加到uboot版本信息里面。

If defined, this string will be added to the U-Boot version information (U_BOOT_VERSION)

- Vendor Parameter Protection: — 供应商参数保护

uboot中, 供应商制造商只能设定环境变量"serial#"和"ethaddr"的值一次, 以保护这些变量被user非正式的修改。一旦设定了这些变量, 它们是只读的, 写和删除访问都会被拒绝。当然你也是可以配置成可读写的:

U-Boot considers the values of the environment variables "serial#" (Board Serial Number) and "ethaddr" (Ethernet Address) to be parameters that are set once by the board vendor / manufacturer, and protects these variables from casual modification by the user. Once set, these variables are read-only, and write or delete attempts are rejected. You can change this behaviour:

如果在你的配置文件中#define CONFIG_ENV_OVERWRITE, 供应商参数写保护就会被完全禁止。任何人都可以更改或

者

删除这些参数。

If CONFIG_ENV_OVERWRITE is #defined in your config file, the write protection for vendor parameters is completely disabled. Anybody can change or delete these parameters.

或者, 如果你定义了CONFIG_OVERWRITE_ETHADDR_ONCE和CONFIG_ETHADDR, 一个默认的以太网地址会在环境中安

装,

它可以被user修改一次。the serial#不受影响, 它依然是只读的。

Alternatively, if you #define _both_ CONFIG_ETHADDR _and_ CONFIG_OVERWRITE_ETHADDR_ONCE, a default ethernet address is installed in the environment, which can be changed exactly ONCE by the user. [The serial# is unaffected by this, i. e. it remains read-only.]

- Protected RAM: — 保护ram

CONFIG_PRAM

定义这个变量允许protected ram保留一定的内存, 它不会被uboot覆盖掉。你可以通过定义一个环境变量pram设定

保留的

内存大小代替默认值。注意board info结构仍然会显示整个内存的大小, 如果pram定义了, 一个新的环境变量mem会

以一定的

格式保存剩余内存大小, 它可以以启动参数的形式传递给linux。

Define this variable to enable the reservation of "protected RAM", i. e. RAM which is not overwritten by U-Boot. Define CONFIG_PRAM to hold the number of kB you want to reserve for pRAM. You can overwrite this default value by defining an environment variable "pram" to the number of kB you want to reserve. Note that the board info structure will still show the full amount of RAM. If pRAM is reserved, a new environment variable "mem" will automatically be defined to hold the amount of remaining RAM in a form that can be passed as boot argument to Linux, for instance like that:

```
setenv bootargs ... mem=\${mem}
saveenv
```

通过这种方式你可以告诉linux不要使用这些不受重启影响的内存。This way you can tell Linux not to use this memory, either, which results in a memory region that will not be affected by reboots.

警告, 如果你的单板配置使用了自动检测ram大小, 你必须保证这些内存检测是非破坏性的。

WARNING If your board configuration uses automatic detection of the RAM size, you must make sure that this memory test is non-destructive. So far, the

following board configurations are known to be
"pRAM-clean":

ETX094, IVMS8, IVML24, SPD8xx, TQM8xxL,
HERMES, IP860, RPXlite, LWMON, LANTEC,
PCU_E, FLAGADM, TQM8260

- Error Recovery: —错误恢复

CONFIG_PANIC_HANG

系统来说

定义这个变量，在系统遇到致命错误时候停止运作，这样你必须手动复位它。这对于你期望能自动快速的重启的嵌入式

可能不是什么好主意。但是它在开发阶段可能有用，这样你就可以试着调试导致这情况的原因。

Define this variable to stop the system in case of a fatal error, so that you have to reset it manually. This is probably NOT a good idea for an embedded system where you want to system to reboot automatically as fast as possible, but it may be useful during development since you can try to debug the conditions that lead to the situation.

CONFIG_NET_RETRY_COUNT

此变量定义了网络操作如ARP, RARP, TFTP, or BOOTP在放弃操作之前的重试次数。默认值是5。

This variable defines the number of retries for network operations like ARP, RARP, TFTP, or BOOTP before giving up the operation. If not defined, a default value of 5 is used.

- Command Interpreter: 命令解析器

CONFIG_AUTO_COMPLETE

Enable auto completion of commands using TAB.

用tab键自动补全命令

注意这个功能在hush shell里面暂时没有实现。

Note that this feature has NOT been implemented yet for the "hush" shell.

CFG_HUSH_PARSER

定义这个变量允许hush shell作为命令行解析器，它允许强大的命令行表达式如if...then...else...fi

Define this variable to enable the "hush" shell (from Busybox) as command line interpreter, thus enabling powerful command line syntax like if...then...else...fi conditionals or '&&' and '||' constructs ("shell scripts").

如果没有定义，你只能使用更少内存消耗的旧的简单的特性。

If undefined, you get the old, much simpler behaviour with a somewhat smaller memory footprint.

CFG_PROMPT_HUSH_PS2

这定义了第二个字符串提示符，当命令解析器需要更多的输入来完成一个命令时，它会显示出来，通常是 ">"

This defines the secondary prompt string, which is printed when the command interpreter needs more input to complete a command. Usually "> ".

Note:

个局部

在目前实现中，局部和全局变量空间是分开的。局部变量是那些你简单的输入 `name=value` 的变量。此后要访问一

变量，你可以用\$name或者\${name}引用它；要执行一个变量的内容，可直接在命令行输入\$name。

In the current implementation, the local variables space and global environment variables space are

separated. Local variables are those you define by simply typing ``name=value'`. To access a local variable later on, you have write ``$name'` or ``${name}'`; to execute the contents of a variable directly type ``$name'` at the command prompt.

能用\$name

全局环境变量是那些你用`setenv/printenv`来工作的。要运行保存这样一个变量的命令，你需要运行命令，而且你不能的方式访问它们。

Global environment variables are those you use `setenv/printenv` to work with. To run a command stored in such a variable, you need to use the run command, and you must not use the `'$'` sign to access them.

的符号。

为了保存命令和特定的字符在一个变量中，请用双引号包围整个变量的文字，而不是在分号前面使用一个反斜杠或者别的符号。

To store commands and special characters in a variable, please use double quotation marks surrounding the whole text of the variable, instead of the backslashes before semicolons and special symbols.

- Commandline Editing and History:

— 命令行编辑跟历史

`CONFIG_CMDLINE_EDITING`

允许编辑和历史功能，以便命令行输入操作的互动。

Enable editing and History functions for interactive commandline input operations

- Default Environment:

— 默认环境

`CONFIG_EXTRA_ENV_SETTINGS`

定义包含任意数量以空格终止的字符串，它将是编译进boot映像的默认环境的一部分。

Define this to contain any number of null terminated strings (variable = value pairs) that will be part of the default environment compiled into the boot image.

For example, place something like this in your board's config file:

例如，在你的board配置文件放置如下文字

```
#define CONFIG_EXTRA_ENV_SETTINGS \
    "myvar1=value1\0" \
    "myvar2=value2\0"
```

不太可能

警告：这个方法的前提是你了解内部环境的格式是如何存储在uboot代码中的。这不是正式的输出接口。当然这种格式

很快就改变，但是也不保证。你最好清楚在这里你所做的。

Warning: This method is based on knowledge about the internal format how the environment is stored by the U-Boot code. This is NOT an official, exported interface! Although it is unlikely that this format will change soon, there is no guarantee either. You better know what you are doing here.

note: 过分依赖默认的环境变量是不鼓励这样做的。确保其他方式预设的环境如自动脚本功能或者启动命令。

Note: overly (ab)use of the default environment is discouraged. Make sure to check other ways to preset the environment like the autoscript function or the boot command first.

- DataFlash Support:

`CONFIG_HAS_DATAFLASH`

允许dataflash功能，允许通过标准命令如cp读写dataflash。

Defining this option enables DataFlash features and allows to read/write in Dataflash via the standard commands cp, md...

- SystemACE Support:

CONFIG_SYSTEMACE

Adding this option adds support for Xilinx SystemACE chips attached via some sort of local bus. The address of the chip must also be defined in the CFG_SYSTEMACE_BASE macro. For example:

```
#define CONFIG_SYSTEMACE
#define CFG_SYSTEMACE_BASE 0xf0000000
```

When SystemACE support is added, the "ace" device type becomes available to the fat commands, i.e. fatls.

- TFTP Fixed UDP Port:

-TFTP固定UDP端口

CONFIG_TFTP_PORT

如果定义了, 环境变量tftpsrcp用来提供TFTP UDP源端口的值, 如果tftpsrcp没有定义, 则正常的随机端口号将被使用。

If this is defined, the environment variable tftpsrcp is used to supply the TFTP UDP source port value. If tftpsrcp isn't defined, the normal pseudo-random port number generator is used.

当然, 环境变量tftpdstp用来提供TFTP UDP目标端口值, 如果tftpdstp没有定义, 通常使用69号端口。Also, the environment variable tftpdstp is used to supply the TFTP UDP destination port value. If tftpdstp isn't defined, the normal port 69 is used.

tftpsrcp的目的是允许TFTP服务端使用预先配置好的目标IP地址和UDP端口开始TFTP传输。这个穿透影响了防火墙, 允许其他

的TFTP传输和进程正常进出。一个比较好的解决方法是正确配置防火墙, 但是这有时候又是不允许的。The purpose for tftpsrcp is to allow a TFTP server to blindly start the TFTP transfer using the pre-configured target IP address and UDP port. This has the effect of "punching through" the (Windows XP) firewall, allowing the remainder of the TFTP transfer to proceed normally. A better solution is to properly configure the firewall, but sometimes that is not allowed.

- Show boot progress:

-显示引导进度

CONFIG_SHOW_BOOT_PROGRESS

定义这个选项, 允许添加一些特定的板级代码 (调用一个用户提供的名为"show_boot_progress(int)"的函数) 使用你

的board上面的显示器显示系统启动进度, 目前, 下面的检查点将实施。Defining this option allows to add some board-specific code (calling a user-provided function "show_boot_progress(int)") that enables you to show the system's boot progress on some display (for example, some LED's) on your board. At the moment, the following checkpoints are implemented:

Arg	Where	When
1	common/cmd_bootm.c	before attempting to boot an image
-1	common/cmd_bootm.c	Image header has bad magic number
2	common/cmd_bootm.c	Image header has correct magic number
-2	common/cmd_bootm.c	Image header has bad checksum
3	common/cmd_bootm.c	Image header has correct checksum
-3	common/cmd_bootm.c	Image data has bad checksum
4	common/cmd_bootm.c	Image data has correct checksum
-4	common/cmd_bootm.c	Image is for unsupported architecture
5	common/cmd_bootm.c	Architecture check OK
-5	common/cmd_bootm.c	Wrong Image Type (not kernel, multi, standalone)
6	common/cmd_bootm.c	Image Type check OK
-6	common/cmd_bootm.c	gunzip uncompression error

```

-7 common/cmd_bootm.c      Unimplemented compression type
 7 common/cmd_bootm.c      Uncompression OK
-8 common/cmd_bootm.c      Wrong Image Type (not kernel, multi, standalone)
 8 common/cmd_bootm.c      Image Type check OK
-9 common/cmd_bootm.c      Unsupported OS (not Linux, BSD, VxWorks, QNX)
 9 common/cmd_bootm.c      Start initial ramdisk verification
-10 common/cmd_bootm.c      Ramdisk header has bad          magic number
-11 common/cmd_bootm.c      Ramdisk header has bad          checksum
 10 common/cmd_bootm.c      Ramdisk header is OK
-12 common/cmd_bootm.c      Ramdisk data  has bad          checksum
 11 common/cmd_bootm.c      Ramdisk data  has correct checksum
 12 common/cmd_bootm.c      Ramdisk verification complete, start loading
-13 common/cmd_bootm.c      Wrong Image Type (not PPC Linux Ramdisk)
 13 common/cmd_bootm.c      Start multifile image verification
 14 common/cmd_bootm.c      No initial ramdisk, no multifile, continue.
 15 common/cmd_bootm.c      All preparation done, transferring control to OS

-30 lib_ppc/board.c        Fatal error, hang the system
-31 post/post.c            POST test failed, detected by post_output_backlog()
-32 post/post.c            POST test failed, detected by post_run_single()

-1 common/cmd_doc.c        Bad usage of "doc" command
-1 common/cmd_doc.c        No boot device
-1 common/cmd_doc.c        Unknown Chip ID on boot device
-1 common/cmd_doc.c        Read Error on boot device
-1 common/cmd_doc.c        Image header has bad magic number

-1 common/cmd_ide.c        Bad usage of "ide" command
-1 common/cmd_ide.c        No boot device
-1 common/cmd_ide.c        Unknown boot device
-1 common/cmd_ide.c        Unknown partition table
-1 common/cmd_ide.c        Invalid partition type
-1 common/cmd_ide.c        Read Error on boot device
-1 common/cmd_ide.c        Image header has bad magic number

-1 common/cmd_nand.c        Bad usage of "nand" command
-1 common/cmd_nand.c        No boot device
-1 common/cmd_nand.c        Unknown Chip ID on boot device
-1 common/cmd_nand.c        Read Error on boot device
-1 common/cmd_nand.c        Image header has bad magic number

-1 common/env_common.c      Environment has a bad CRC, using default

```

Modem Support:

目前只支持SMDK2400和TRAB的板
[so far only for SMDK2400 and TRAB boards]

- Modem support enable:
CONFIG_MODEM_SUPPORT

- RTS/CTS Flow control enable:
流控制

CONFIG_HWFLOW

- Modem debug support:
调试支持

CONFIG_MODEM_SUPPORT_DEBUG

Enables debugging stuff (char screen[1024], dbg())
for modem support. Useful only with BDI2000.

- Interrupt support (PPC):
中断支持

There are common interrupt_init() and timer_interrupt()
for all PPC archs. interrupt_init() calls interrupt_init_cpu()
for cpu specific initialization. interrupt_init_cpu()
should set decremter_count to appropriate value. If

cpu resets decremter automatically after interrupt (ppc4xx) it should set decremter_count to zero. timer_interrupt() calls timer_interrupt_cpu() for cpu specific handling. If board has watchdog / status_led / other_activity_monitor it works automatically from general timer_interrupt().

- General:

In the target system modem support is enabled when a specific key (key combination) is pressed during power-on. Otherwise U-Boot will boot normally (autoboot). The key_pressed() fuction is called from board_init(). Currently key_pressed() is a dummy function, returning 1 and thus enabling modem initialization.

If there are no modem init strings in the environment, U-Boot proceed to autoboot; the previous output (banner, info printf) will be supressed, though.

See also: doc/README.Modem

Configuration Settings:

配置设定

- CFG_LONGHELP: Defined when you want long help messages included; undefine this when you're short of memory.
当你需要详细的help信息时候定义它; 当你内存有限时候最好不定义。
- CFG_PROMPT: This is what U-Boot prints on the console to prompt for user input.
终端命令提示符。
- CFG_CBSIZE: Buffer size for input from the Console
控制台输入的buffer容量
- CFG_PBSIZE: Buffer size for Console output
控制台输出的buffer容量
- CFG_MAXARGS: max. Number of arguments accepted for monitor commands
monitor命令最大接受参数个数
- CFG_BARGSIZE: Buffer size for Boot Arguments which are passed to the application (usually a Linux kernel) when it is booted
传递给应用程序 (通常是linux kernel) 的启动参数的buffer 大小
- CFG_BAUDRATE_TABLE: List of legal baudrate settings for this board.
合法的波特率列表
- CFG_CONSOLE_INFO_QUIET: Suppress display of console information at boot.
启动时候禁止控制台信息
- CFG_CONSOLE_IS_IN_ENV: If the board specific function extern int overwrite_console (void); returns 1, the stdin, stderr and stdout are switched to the serial port, else the settings in the environment are used.
如果board定义了这个函数extern int overwrite_console (void);返回1, 那么stdin, stderr, stdout都会切换到
串行端口, 否则的话环境的设定将会用到。
- CFG_CONSOLE_OVERWRITE_ROUTINE: Enable the call to overwrite_console().
允许调用overwrite_console().
- CFG_CONSOLE_ENV_OVERWRITE: Enable overwrite of previous console environment settings.
允许覆盖以前的控制台环境设定
- CFG_MEMTEST_START, CFG_MEMTEST_END: Begin and End addresses of the area used by the simple memory test.

简单内存测试的开始和结束地址。

- CFG_ALT_MEMTEST:
Enable an alternate, more extensive memory test.
允许一个备用的更深度的内存测试。
- CFG_MEMTEST_SCRATCH:
Scratch address used by the alternate memory test
You only need to set this if address zero isn't writeable
构建一个用来代替内存测试的地址, 你仅在地址0不可写入的情况下才需要设置
- CFG_TFTP_LOADADDR:
Default load address for network file downloads
默认网络文件下载的加载地址
- CFG_LOADS_BAUD_CHANGE:
Enable temporary baudrate change while serial download
允许一个临时的波特率当需要串口下载时候
- CFG_SDRAM_BASE:
Physical start address of SDRAM. Must be 0 here.
SDRAM物理开始地址, 必须是0? ?
- CFG_MBI0_BASE:
Physical start address of Motherboard I/O (if using a Cogent motherboard)
主板I/O物理开始地址, 如果使用cogent的主板的话
- CFG_FLASH_BASE:
Physical start address of Flash memory.
Flash内存开始的物理地址。
- CFG_MONITOR_BASE:
Physical start address of boot monitor code (set by make config files to be same as the text base address (TEXT_BASE) used when linking) - same as CFG_FLASH_BASE when booting from flash.
boot minitor的物理开始地址 (make config文件设置, 和linking时候用的TEXT_BASE一样), 如果在flash启动, 则和 CFG_FLASH_BASE一样。
- CFG_MONITOR_LEN:
Size of memory reserved for monitor code, used to determine at compile time (!) if the environment is embedded within the U-Boot image, or in a separate flash sector.
monitor代码保留的内存大小, 在编译阶段决定, 如果环境是嵌入在uboot映像或者独立的flash扇区。
- CFG_MALLOC_LEN:
Size of DRAM reserved for malloc() use.
保留给malloc函数使用的DRAM大小。
- CFG_BOOTM_LEN:
Normally compressed uImages are limited to an uncompressed size of 8 MBytes. If this is not enough, you can define CFG_BOOTM_LEN in your board config file to adjust this setting to your needs.
正常压缩后的uImages解压后大小限制在8MB以下。如果不够, 你可以在你的board配置文件配置CFG_BOOTM_LEN以适应你的需要。
- CFG_BOOTMAPSZ:
Maximum size of memory mapped by the startup code of the Linux kernel; all data that must be processed by the Linux kernel (bd_info, boot arguments, eventually initrd image) must be put below this limit.
linux kernel启动代码在内存分布的最大容量。linux kernel必须处理的所有数据(bd_info, boot arguments, initrd image)都在这个限制之下。
- CFG_MAX_FLASH_BANKS:
Max number of Flash memory banks
flash 最大banks
- CFG_MAX_FLASH_SECT:
Max number of sectors on a Flash chip
flash最大扇区数
- CFG_FLASH_ERASE_TOUT:
Timeout for Flash erase operations (in ms)
flash擦除操作超时时间, 单位ms
- CFG_FLASH_WRITE_TOUT:
Timeout for Flash write operations (in ms)
flash写操作超时时间, 单位ms
- CFG_FLASH_LOCK_TOUT:
Timeout for Flash set sector lock bit operation (in ms)

- CFG_FLASH_UNLOCK_TOUT
Timeout for Flash clear lock bits operation (in ms)
flash清除上锁位的超时, 单位ms
- CFG_FLASH_PROTECTION
If defined, hardware flash sectors protection is used instead of U-Boot software protection.
如果定义了, 硬件的flash扇区保护将被使用, 而不是uboot的软件保护。
- CFG_DIRECT_FLASH_TFTP:
Enable TFTP transfers directly to flash memory; without this option such a download has to be performed in two steps: (1) download to RAM, and (2) copy from RAM to flash.
允许TFTP传输直接存储到flash内存; 没有选中这个选项时, 一个下载通常分两个步骤: (1) 下载到RAM(2)从RAM拷

贝到flash

The two-step approach is usually more reliable, since you can check if the download worked before you erase the flash, but in some situations (when sytem RAM is too limited to allow for a tempory copy of the downloaded image) this option may be very useful.
分两步的下载方式通常更可靠一些, 因为你可以在擦除flash之前检查下载是否正常。

- CFG_FLASH_CFI:
Define if the flash driver uses extra elements in the common flash structure for storing flash geometry.
定义flash驱动是否使用为存储flash矩阵设计的通用flash接口的额外特性
- CFG_FLASH_CFI_DRIVER
This option also enables the building of the cfi_flash driver in the drivers directory
这个选项允许在驱动目录构建cfi_flash驱动
- CFG_FLASH_QUIET_TEST
If this option is defined, the common CFI flash doesn't print it's warning upon not recognized FLASH banks. This is useful, if some of the configured banks are only optionally available.
如果定义了这个选项, 通用的CFI flash不会打印它未识别的flash banks。如果某些配置的banks以可选的方式存

在的话

这可能有用。

- CFG_RX_ETH_BUFFER:
Defines the number of ethernet receive buffers. On some ethernet controllers it is recommended to set this value to 8 or even higher (EEPROM100 or 405 EMAC), since all buffers can be full shortly after enabling the interface on high ethernet traffic.
Defaults to 4 if not defined.
定义以太网接收buffers的数量。此值在某些以太网控制器默认设置是8或者更高(EEPROM100或者405EMAC), 因为在高

速的以太网

传输中, buffers可能很快就满了。

The following definitions that deal with the placement and management of environment data (variable area); in general, we support the following configurations:

接下来的定义主要处理环境变量数据的布局管理; 通常我们支持以下配置:

- CFG_ENV_IS_IN_FLASH:
Define this if the environment is in flash memory.
如果环境存储在flash内存的话, 定义这个配置选项。

- a) The environment occupies one whole flash sector, which is "embedded" in the text segment with the U-Boot code. This happens usually with "bottom boot sector" or "top boot sector" type flash chips, which have several smaller sectors at the start or the end. For instance, such a layout can have sector sizes of 8, 2x4, 16, Nx32 kB. In such a case you would place the environment in one of the 4 kB sectors - with U-Boot code before and after it. With "top boot sector" type flash chips, you would put the environment in one of the last sectors, leaving a gap between U-Boot and the environment.

环境占用了整个flash扇区, 它嵌入在uboot代码的代码段中。这通常发生在带顶部启动扇区或者底部启动扇区类型的

flash芯片

，它的顶部和底部扇区通常都比较小。比如，布局可以是8, 2X4, 16, NX32KB的扇区大小。这样你可以把环境变量放在一个4KB大小的扇区，uboot代码在它的前面或者它的后面。在顶部启动扇区类型的flash芯片中，你可以把环境变量放在最后一个扇区，它和uboot代码段之间有一个间隔。

- CFG_ENV_OFFSET:

Offset of environment data (variable area) to the beginning of flash memory; for instance, with bottom boot type flash chips the second sector can be used: the offset for this sector is given here.

环境变量数据跟flash内存的开始端之间的偏移量；比如，底部启动扇区类型的flash芯片的第二个扇区可以用做这里给出的偏移

CFG_ENV_OFFSET is used relative to CFG_FLASH_BASE.

CFG_ENV_OFFSET是与CFG_FLASH_BASE相关联的。

- CFG_ENV_ADDR:

This is just another way to specify the start address of the flash sector containing the environment (instead of CFG_ENV_OFFSET).

这是另外一个方式代替CFG_ENV_OFFSET定义flash扇区保存环境变量的开始地址。

- CFG_ENV_SECT_SIZE:

Size of the sector containing the environment.

保存环境变量的扇区大小。

b) Sometimes flash chips have few, equal sized, BIG sectors. In such a case you don't want to spend a whole sector for the environment.

有时flash芯片只有少量的，相等大小，很大的扇区，这样的话你就不会为环境变量划分一整个扇区的大小了。

- CFG_ENV_SIZE:

If you use this in combination with CFG_ENV_IS_IN_FLASH and CFG_ENV_SECT_SIZE, you can specify to use only a part of this flash sector for the environment. This saves memory for the RAM copy of the environment.

如果你同时配置了CFG_ENV_IS_IN_FLASH和CFG_ENV_SECT_SIZE,你可以定义只使用这个flash扇区的一部分保存环境变量。这节省了环境变量拷贝到RAM时候的内存消耗。

It may also save flash memory if you decide to use this when your environment is "embedded" within U-Boot code, since then the remainder of the flash sector could be used for U-Boot code. It should be pointed out that this is STRONGLY DISCOURAGED from a robustness point of view: updating the environment in flash makes it always necessary to erase the WHOLE sector. If something goes wrong before the contents has been restored from a copy in RAM, your target system will be dead.

uboot代码使 当你的环境变量是嵌入到uboot代码段的时候，使用这个配置可能节省了flash，因为flash扇区的剩余部分可以给用。当然从鲁棒性的观点出发，这也是有很大的缺点的：更新flash里面的环境变量使得必须擦除整个扇区。如果在RAM里面的拷贝恢复内容之前发生错误，你的目标系统可能会当机。

- CFG_ENV_ADDR_REDUND CFG_ENV_SIZE_REDUND

These settings describe a second storage area used to hold a redundant copy of the environment data, so that there is a valid backup copy in case there is a power failure during a "saveenv" operation.

有效 这两个设定描述了用来保存环境变量拷贝的第二个存储区域，这样当saveenv操作的时候如果发生掉电时候可以有一份的备份。

BE CAREFUL! Any changes to the flash layout, and some changes to the

source code will make it necessary to adapt <board>/u-boot.lds* accordingly!

注意！任何对flash布局以及源代码的修改都有必要重新相应的调整 <board>/u-boot.lds。

- CFG_ENV_IS_IN_NVRAM:

Define this if you have some non-volatile memory device (NVRAM, battery buffered SRAM) which you want to use for the environment.

如果你使用某些非易失的内存设备来保存环境变量，定义这个选项。

- CFG_ENV_ADDR:

- CFG_ENV_SIZE:

These two #defines are used to determin the memory area you want to use for environment. It is assumed that this memory can just be read and written to, without any special provision.

这两个选项用来决定你保存环境变量的内存区域。假定这种内存可以不用其他设置就可以读写。

BE CAREFUL! The first access to the environment happens quite early in U-Boot initialization (when we try to get the setting of for the console baudrate). You **MUST** have mappend your NVRAM area then, or U-Boot will hang.

注意！第一次环境变量的访问发生在uboot初始化的早期（当我们试着得到控制台波特率的设置的时候）。你必须先安排好NVRAM的布局，不然uboot会当机的。

Please note that even with NVRAM we still use a copy of the environment in RAM: we could work on NVRAM directly, but we want to keep settings there always unmodified except somebody uses "saveenv" to save the current settings.

请注意，虽然使用的是NVRAM，我们仍然使用环境变量在RAM中的拷贝：当然我们也可以直接用NVRAM，但我们想要保存没有修改的设定，除非某人用saveenv命令保存当前设定。

- CFG_ENV_IS_IN_EEPROM:

Use this if you have an EEPROM or similar serial access device and a driver for it.

定义这个选项，如果你有一个EEPROM或者类似的串行访问设备并且有它的驱动。

- CFG_ENV_OFFSET:

- CFG_ENV_SIZE:

These two #defines specify the offset and size of the environment area within the total memory of your EEPROM.

这两个选项定义了你的EEPROM的全部内存中环境变量的偏移量和大小。

- CFG_I2C_EEPROM_ADDR:

If defined, specified the chip address of the EEPROM device. The default address is zero.

定义EEPROM设备的芯片地址，默认是0。

- CFG_EEPROM_PAGE_WRITE_BITS:

If defined, the number of bits used to address bytes in a single page in the EEPROM device. A 64 byte page, for example would require six bits.

定义EEPROM设备一页中要用地址字节中多少位。一个64字节的页面，一般要求6位来表示。

- CFG_EEPROM_PAGE_WRITE_DELAY_MS:

If defined, the number of milliseconds to delay between page writes. The default is zero milliseconds.

页面写入之间的延时，默认是0ms。

- CFG_I2C_EEPROM_ADDR_LEN:

The length in bytes of the EEPROM memory array address. Note that this is NOT the chip address length!

定义EEPROM内存阵列地址的字节长度。注意这不是芯片地址长度。

- CFG_I2C_EEPROM_ADDR_OVERFLOW:

EEPROM chips that implement "address overflow" are ones like Catalyst 24WC04/08/16 which has 9/10/11 bits of

address and the extra bits end up in the "chip address" bit slots. This makes a 24WC08 (1Kbyte) chip look like four 256 byte chips.

EEPROM实现了地址溢出的芯片，它有9/10/11位的地址，额外的地址位占用了芯片地址位，这使得一片24WC08（1k字节）看起来

好像是有4片256字节的芯片。

Note that we consider the length of the address field to still be one byte because the extra address bits are hidden in the chip address.

注意，我们仍然认为地址的长度是一个字节的，因为额外的地址位是隐藏在芯片地址中的。

- CFG_EEPROM_SIZE:

The size in bytes of the EEPROM device.

定义EEPROM设备的字节容量

- CFG_ENV_IS_IN_DATAFLASH:

Define this if you have a DataFlash memory device which you want to use for the environment.

如果你有dataflash内存设备用来保存环境变量的话，定义此项。

- CFG_ENV_OFFSET:

- CFG_ENV_ADDR:

- CFG_ENV_SIZE:

These three #defines specify the offset and size of the environment area within the total memory of your DataFlash placed at the specified address.

这三个选项定义了在你的dataflash总内存中的特定地址环境变量的偏移量和大小。

- CFG_ENV_IS_IN_NAND:

Define this if you have a NAND device which you want to use for the environment.

如果你是用NAND闪存来保存环境变量的话，定义此项。

- CFG_ENV_OFFSET:

- CFG_ENV_SIZE:

These two #defines specify the offset and size of the environment area within the first NAND device.

这两项定义了环境变量在第一个NAND设备上的偏移量和大小。

- CFG_ENV_OFFSET_REDUND

This setting describes a second storage area of CFG_ENV_SIZE size used to hold a redundant copy of the environment data, so that there is a valid backup copy in case there is a power failure during a "saveenv" operation.

这个设定描述了用来保存环境变量拷贝的第二个存储区域，这样当saveenv操作的时候如果发生掉电时候可以有一份有效的备份。

Note: CFG_ENV_OFFSET and CFG_ENV_OFFSET_REDUND must be aligned to a block boundary, and CFG_ENV_SIZE must be a multiple of the NAND devices block size.

注意：CFG_ENV_OFFSET和CFG_ENV_OFFSET_REDUND必须对齐到一个block的边界，而且CFG_ENV_SIZE必须是NAND设备块大小的倍数。

- CFG_SPI_INIT_OFFSET

Defines offset to the initial SPI buffer area in DPRAM. The area is used at an early stage (ROM part) if the environment is configured to reside in the SPI EEPROM: We need a 520 byte scratch DPRAM area. It is used between the two initialization calls (spi_init_f() and spi_init_r()). A value of 0xB00 seems to be a good choice since it makes it far enough from the start of the data area as well as from the stack pointer.

定义DPRAM初始化SPI缓冲区域的偏移量。这个区域是用在如果环境变量配置成位于SPI EEPROM的早期阶段：我们需要DPRAM区域的520字节空间。它用在两个初始化调用之间(spi_init_f() and spi_init_r())。值0XB00看起来是个很好的选择，因为它

离

数据区域和堆栈指针都很远。

Please note that the environment is read-only as long as the monitor has been relocated to RAM and a RAM copy of the environment has been created; also, when using EEPROM you will have to use `getenv_r()` until then to read environment variables.

请注意，环境变量直到monitor已经重定位到RAM并且RAM有一份环境变量的拷贝还是只读的。当然，使用EEPROM时候你可以使用`use getenv_r()`直到读出环境变量为止。

The environment is protected by a CRC32 checksum. Before the monitor is relocated into RAM, as a result of a bad CRC you will be working with the compiled-in default environment - **silently*!!!* [This is necessary, because the first environment variable we need is the "baudrate" setting for the console - if we have a bad CRC, we don't have any device yet where we could complain.]

环境变量受CRC32校验和的保护。在monitor重定位到RAM中之前，坏的CRC的结果是你将使用编译时候的默认环境。这是必须的，因为我们首先需要设置控制台的第一个环境变量就是**baudrate**，如果CRC出错，我们没有任何设备可以报告了。

Note: once the monitor has been relocated, then it will complain if the default environment is used; a new CRC is computed as soon as you use the "saveenv" command to store a valid environment.

注意：一旦monitor重定位后，如果使用默认的环境变量它会抱怨的。新的CRC会在使用**saveenv**命令保存有效的环境变量之后重新计算。

- CFG_FAULT_ECHO_LINK_DOWN:

Echo the inverted Ethernet link state to the fault LED.
在故障LED显示错误的以太网连接。

Note: If this option is active, then CFG_FAULT_MII_ADDR also needs to be defined.

如果激活这个选项，CFG_FAULT_MII_ADDR也需要定义。

- CFG_FAULT_MII_ADDR:

MII address of the PHY to check for the Ethernet link state.
PHY的MII地址用来检查以太网连接的状态。

- CFG_64BIT_VSPRINTF:

Makes vsprintf (and all *printf functions) support printing of 64bit values by using the L quantifier

- CFG_64BIT_STRTOUL:

Adds simple_strtoul that returns a 64bit value

Low Level (hardware related) configuration options:

底层硬件相关的配置选项

- CFG_CACHELINE_SIZE:

Cache Line Size of the CPU.

- CFG_DEFAULT_IMMR:

Default address of the IMMR after system reset.
系统复位后IMMR默认地址

Needed on some 8260 systems (MPC8260ADS, PQ2FADS-ZU, and RPXsuper) to be able to adjust the position of the IMMR register after a reset.

在一些8260系统，复位后以适应IMMR寄存器的位置。

- Floppy Disk Support:

—软驱支持

CFG_FDC_DRIVE_NUMBER

the default drive number (default value 0)
默认驱动器编号

CFG_ISA_IO_STRIDE

defines the spacing between fdc chipset registers

(default value 1)
定义fdc芯片寄存器之间的间隔

CFG_ISA_IO_OFFSET

defines the offset of register from address. It depends on which part of the data bus is connected to the fdc chipset. (default value 0)
定义IO地址寄存器的偏移量。它取决于那些数据总线连接到fdc芯片。

If CFG_ISA_IO_STRIDE CFG_ISA_IO_OFFSET and CFG_FDC_DRIVE_NUMBER are undefined, they take their default value.

如果CFG_ISA_IO_STRIDE CFG_ISA_IO_OFFSET和CFG_FDC_DRIVE_NUMBER没有定义，取默认值。

if CFG_FDC_HW_INIT is defined, then the function fdc_hw_init() is called at the beginning of the FDC setup. fdc_hw_init() must be provided by the board source code. It is used to make hardware dependant initializations.

如果 CFG_FDC_HW_INIT定义了，FDC setup的时候会调用fdc_hw_init()函数，这个函数必须由board源代码提

供。它提供

硬件相关的初始化。

- CFG_IMMR: Physical address of the Internal Memory. DO NOT CHANGE unless you know exactly what you're doing! (11-4) [MPC8xx/82xx systems only]
内部存储器的物理地址，除非你清楚否则不要更改。

- CFG_INIT_RAM_ADDR:

Start address of memory area that can be used for initial data and stack; please note that this must be writable memory that is working WITHOUT special initialization, i. e. you CANNOT use normal RAM which will become available only after programming the memory controller and running certain initialization sequences.

内存区域的开始地址可以用来初始化数据和堆栈。注意这个区域必须是不用任何特殊的初始化就可以写入的内存，例如

你不能用的是

要对内存控制器编程以及要运行特定的初始化顺序的普通RAM来定义是INIT_RAM。

U-Boot uses the following memory types:

- MPC8xx and MPC8260: IMMR (internal memory of the CPU)
- MPC824X: data cache
- PPC4xx: data cache

- CFG_GBL_DATA_OFFSET:

Offset of the initial data structure in the memory area defined by CFG_INIT_RAM_ADDR. Usually CFG_GBL_DATA_OFFSET is chosen such that the initial data is located at the end of the available space (sometimes written as (CFG_INIT_RAM_END - CFG_INIT_DATA_SIZE), and the initial stack is just below that area (growing from (CFG_INIT_RAM_ADDR + CFG_GBL_DATA_OFFSET) downward).

在CFG_INIT_RAM_ADDR定义的初始化数据结构的内存区域的偏移量。CFG_GBL_DATA_OFFSET通常选择那些位于有效

空间尾端

的初始化数据。初始化堆栈位于这个区域的下面。

Note:

On the MPC824X (or other systems that use the data cache for initial memory) the address chosen for CFG_INIT_RAM_ADDR is basically arbitrary - it must point to an otherwise UNUSED address space between the top of RAM and the start of the PCI space.

注意：在MPC824X或者其他使用data cache作初始化内存的系统中，CFG_INIT_RAM_ADDR地址的选择可以任意，它

必须指向

在RAM顶部和PCI空间开始之间的未用到的地址空间。

- CFG_SIUMCR: SIU Module Configuration (11-6)
- CFG_SYPCR: System Protection Control (11-9)
- CFG_TBSCR: Time Base Status and Control (11-26)
- CFG_PISCR: Periodic Interrupt Status and Control (11-31)
- CFG_PLPRCR: PLL, Low-Power, and Reset Control Register (15-30)
- CFG_SCCR: System Clock and reset Control Register (15-27)
- CFG_OR_TIMING_SDRAM:
SDRAM timing
- CFG_MAMR_PTA:
periodic timer for refresh
- CFG_DER: Debug Event Register (37-47)
- FLASH_BASE0_PRELIM, FLASH_BASE1_PRELIM, CFG_REMAP_OR_AM,
CFG_PRELIM_OR_AM, CFG_OR_TIMING_FLASH, CFG_OR0_REMAP,
CFG_OR0_PRELIM, CFG_BR0_PRELIM, CFG_OR1_REMAP, CFG_OR1_PRELIM,
CFG_BR1_PRELIM:
Memory Controller Definitions: BR0/1 and OR0/1 (FLASH)
- SDRAM_BASE2_PRELIM, SDRAM_BASE3_PRELIM, SDRAM_MAX_SIZE,
CFG_OR_TIMING_SDRAM, CFG_OR2_PRELIM, CFG_BR2_PRELIM,
CFG_OR3_PRELIM, CFG_BR3_PRELIM:
Memory Controller Definitions: BR2/3 and OR2/3 (SDRAM)
- CFG_MAMR_PTA, CFG_MPTPR_2BK_4K, CFG_MPTPR_1BK_4K, CFG_MPTPR_2BK_8K,
CFG_MPTPR_1BK_8K, CFG_MAMR_8COL, CFG_MAMR_9COL:
Machine Mode Register and Memory Periodic Timer
Prescaler definitions (SDRAM timing)
- CFG_I2C_UCODE_PATCH, CFG_I2C_DPMEM_OFFSET [0x1FC0]:
enable I2C microcode relocation patch (MPC8xx);
define relocation offset in DPRAM [DSP2]
- CFG_SPI_UCODE_PATCH, CFG_SPI_DPMEM_OFFSET [0x1FC0]:
enable SPI microcode relocation patch (MPC8xx);
define relocation offset in DPRAM [SCC4]
- CFG_USE_OSCCLK:
Use OSCM clock mode on MBX8xx board. Be careful,
wrong setting might damage your board. Read
doc/README.MBX before setting this variable!
- CFG_CPM_POST_WORD_ADDR: (MPC8xx, MPC8260 only)
Offset of the bootmode word in DPRAM used by post
(Power On Self Tests). This definition overrides
#define'd default value in commproc.h resp.
cpm_8260.h.
- CFG_PCI_SLV_MEM_LOCAL, CFG_PCI_SLV_MEM_BUS, CFG_PICMR0_MASK_ATTRIB,
CFG_PCI_MSTR0_LOCAL, CFG_PCIMSK0_MASK, CFG_PCI_MSTR1_LOCAL,
CFG_PCIMSK1_MASK, CFG_PCI_MSTR_MEM_LOCAL, CFG_PCI_MSTR_MEM_BUS,
CFG_CPU_PCI_MEM_START, CFG_PCI_MSTR_MEM_SIZE, CFG_POCMR0_MASK_ATTRIB,
CFG_PCI_MSTR_MEMIO_LOCAL, CFG_PCI_MSTR_MEMIO_BUS, CPU_PCI_MEMIO_START,
CFG_PCI_MSTR_MEMIO_SIZE, CFG_POCMR1_MASK_ATTRIB, CFG_PCI_MSTR_IO_LOCAL,
CFG_PCI_MSTR_IO_BUS, CFG_CPU_PCI_IO_START, CFG_PCI_MSTR_IO_SIZE,
CFG_POCMR2_MASK_ATTRIB: (MPC826x only)
Overrides the default PCI memory map in cpu/mpc8260/pci.c if set.
- CONFIG_ETHER_ON_FEC[12]
Define to enable FEC[12] on a 8xx series processor.
- CONFIG_FEC[12]_PHY
Define to the hardcoded PHY address which corresponds
to the given FEC; i. e.
#define CONFIG_FEC1_PHY 4

means that the PHY with address 4 is connected to FEC1

When set to -1, means to probe for first available.

- CONFIG_FEC[12]_PHY_NORXERR
The PHY does not have a RXERR line (RMII only).
(so program the FEC to ignore it).
- CONFIG_RMII
Enable RMII mode for all FECs.
Note that this is a global option, we can't
have one FEC in standard MII mode and another in RMII mode.
- CONFIG_CRC32_VERIFY
Add a verify option to the crc32 command.
The syntax is:
添加一个验证选项到crc32命令
=> crc32 -v <address> <count> <crc32>

Where address/count indicate a memory area
and crc32 is the correct crc32 which the
area should have.
上面address/count指示内存区域, crc32是修正crc32应该在那个区域。
- CONFIG_LOOPW
Add the "loopw" memory command. This only takes effect if
the memory commands are activated globally (CFG_CMD_MEM).
添加loopw内存命令。这只是如果定义了全局变量CFG_CMD_MEM才有作用。
- CONFIG_MX_CYCLIC
Add the "mdc" and "mwc" memory commands. These are cyclic
"md/mw" commands.
Examples:
添加mdc和mwc内存命令。这是周期性的md, mw命令。
=> mdc.b 10 4 500
This command will print 4 bytes (10,11,12,13) each 500 ms.
这个命令会每500ms一个周期打印4字节数据。

=> mwc.l 100 12345678 10
This command will write 12345678 to address 100 all 10 ms.
这个命令在10ms内对地址100写入12345678
This only takes effect if the memory commands are activated
globally (CFG_CMD_MEM).
这只是如果定义了全局变量CFG_CMD_MEM才有作用。
- CONFIG_SKIP_LOWLEVEL_INIT
- CONFIG_SKIP_RELOCATE_UBOOT

[ARM only] If these variables are defined, then
certain low level initializations (like setting up
the memory controller) are omitted and/or U-Boot does
not relocate itself into RAM.

Normally these variables MUST NOT be defined. The
only exception is when U-Boot is loaded (to RAM) by
some other boot loader or by a debugger which
performs these initializations itself.

ARM适用。如果定义了这些变量, 某些底层的初始化比如设置内存控制器会跳过或者uboot不会把自身重定位到RAM。通常这两个

变量不应该设置, 除非当uboot是被其他bootloader加载到RAM或者某些调试器自己执行了这些初始化。

Building the Software:

=====

构建uboot

Building U-Boot has been tested in native PPC environments (on a
PowerBook G3 running LinuxPPC 2000) and in cross environments
(running RedHat 6.x and 7.x Linux on x86, Solaris 2.6 on a SPARC, and
NetBSD 1.5 on x86).

构建uboot已经在本地的ppc环境以及在交叉环境中测试过了。

If you are not using a native PPC environment, it is assumed that you have the GNU cross compiling tools available in your path and named with a prefix of "powerpc-linux-". If this is not the case, (e.g. if you are using Monta Vista's Hard Hat Linux CDK 1.2) you must change the definition of CROSS_COMPILE in Makefile. For HHL on a 4xx CPU, change it to:

如果你不是用本地的ppc环境，假设你已经在你的路径中安装了一个前缀为powerpc-linux-的GNU交叉编译工具。或者你使用的是MONTA

VISTA的CDK工具，你必须在Makefile里面定义CROSS_COMPILE。对于HHL 的4xx CPU，做以下更改

```
CROSS_COMPILE = ppc_4xx-
```

U-Boot is intended to be simple to build. After installing the sources you must configure U-Boot for one specific board type. This is done by typing:

uboot被设计成简单的就可以构建。在安装源码后，你必须配置uboot为一个定义的board类型，这可以简单的输入make NAME_config.

```
make NAME_config
```

where "NAME_config" is the name of one of the existing configurations; the following names are supported:

这里"NAME_config"就是一个已经存在的配置的名字。支持以下配置:

ADCIOP_config	FPS860L_config	omap730p2_config
ADS860_config	GEN860T_config	pcu_e_config
Alaska8220_config		
AR405_config	GENIETV_config	PIP405_config
at91rm9200dk_config	GTH_config	QS823_config
CANBT_config	hermes_config	QS850_config
cmi_mpc5xx_config	hymod_config	QS860T_config
cogent_common_config	IP860_config	RPXlite_config
cogent_mpc8260_config	IVML24_config	RPXlite_DW_config
cogent_mpc8xx_config	IVMS8_config	RPXsuper_config
CPCI405_config	JSE_config	rsdproto_config
CPCIISER4_config	LANTEC_config	Sandpoint8240_config
csb272_config	lwmon_config	sbc8260_config
CU824_config	MBX860T_config	sbc8560_33_config
DUET_ADS_config	MBX_config	sbc8560_66_config
EBONY_config	MPC8260ADS_config	SM850_config
ELPT860_config	MPC8540ADS_config	SPD823TS_config
ESTEEM192E_config	MPC8540EVAL_config	stxgp3_config
ETX094_config	MPC8560ADS_config	SXNI855T_config
FADS823_config	NETVIA_config	TQM823L_config
FADS850SAR_config	omap1510inn_config	TQM850L_config
FADS860T_config	omap1610h2_config	TQM855L_config
FPS850L_config	omap1610inn_config	TQM860L_config
	omap5912osk_config	walnut_config
	omap2420h4_config	Yukon8220_config
		ZPC1900_config

Note: for some board special configuration names may exist; check if additional information is available from the board vendor; for instance, the TQM823L systems are available without (standard) or with LCD support. You can select such additional "features" when choosing the configuration, i. e.

注意: 对于某些board可能存在特定的配置名字; 从供应商那里确认是否有额外的信息存在; 比如, TQM823L系统可以选择是否有LCD支持

, 你可以在选择配置的时候选择额外的特性。

```
make TQM823L_config
```

```
- will configure for a plain TQM823L, i. e. no LCD support
配置成简单的没有LCD支持的TQM823L
```

```
make TQM823L_LCD_config
```

```
- will configure for a TQM823L with U-Boot console on LCD
配置TQM823L带LCD控制台的支持。
```

```
etc.
```

Finally, type "make all", and you should get some working U-Boot images ready for download to / installation on your system:

最后, 输入make all, 然后你将得到可以下载安装到你的系统的uboot映像。

- "u-boot.bin" is a raw binary image
uboot.bin是raw格式映像
- "u-boot" is an image in ELF binary format
u-boot是ELF二进制格式的映像
- "u-boot.srec" is in Motorola S-Record format
uboot.srec是motorola s-record格式的文件

By default the build is performed locally and the objects are saved in the source directory. One of the two methods can be used to change this behavior and build U-Boot to some external directory:

默认情况下构建和目标文件的保存都是在当前源码目录。有两个方法可以改变这种情况把uboot构建在外部其他目录中。

1. Add O= to the make command line invocations:

1. 在命令行执行make命令后面添加O= 目录名称
make O=/tmp/build distclean
make O=/tmp/build NAME_config
make O=/tmp/build all

2. Set environment variable BUILD_DIR to point to the desired location:

2. 设置环境变量BUILD_DIR 指向你期望的目录:
export BUILD_DIR=/tmp/build
make distclean
make NAME_config
make all

Note that the command line "O=" setting overrides the BUILD_DIR environment variable.

注意命令行上的 "O=" 设定会覆盖BUILD_DIR环境变量。

Please be aware that the Makefiles assume you are using GNU make, so for instance on NetBSD you might need to use "gmake" instead of native "make".

请注意, Makefiles假设你用的是GNU make, 假设在NetBSD上你可能需要用gmake代替make。

If the system board that you have is not listed, then you will need to port U-Boot to your hardware platform. To do this, follow these steps:

如果你需要的board没有在系统的列表中, 那你可能需要移植uboot到你的硬件平台上。按以下步骤进行:

1. Add a new configuration option for your board to the toplevel "Makefile" and to the "MAKEALL" script, using the existing entries as examples. Note that here and at many other places boards and other names are listed in alphabetical sort order. Please keep this order.
1. 添加一个你的board配置选项到顶层的Makefile和MAKEALL脚本, 用里面的其他条目作参考。注意这些boards的名字是按字母顺序排列的, 请保持这个顺序。
2. Create a new directory to hold your board specific code. Add any files you need. In your board directory, you will need at least the "Makefile", a "<board>.c", "flash.c" and "u-boot.lds".
2. 创建一个新目录来保存你的board相关代码。添加必要的文件。在此目录中, 你至少需要一个Makefile, 一个"<board>.c", "flash.c" 和 "u-boot.lds"。
3. Create a new configuration file "include/configs/<board>.h" for your board
3. 在"include/configs/<board>.h"里面创建你的board配置文件。
3. If you're porting U-Boot to a new CPU, then also create a new directory to hold your CPU specific code. Add any files you need.
3. 如果你是在移植uboot到一个新的cpu, 那么也应该创建一个新目录保存你的cpu相关代码。添加必要的文件到里面。
4. Run "make <board>_config" with your new name.
4. 运行你的新的"make <board>_config"
5. Type "make", and you should get a working "u-boot.srec" file to be installed on your target system.
5. 输入make, 一会你将得到可以安装到你目标系统中的"u-boot.srec"。
6. Debug and solve any problems that might arise.

[Of course, this last step is much harder than it sounds.]

6. 调试解决可能遇到的任何问题。当然这个步骤要比想象中困难。

Testing of U-Boot Modifications, Ports to New Hardware, etc.:

=====

测试修改uboot, 移植到新的硬件

If you have modified U-Boot sources (for instance added a newboard or support for new devices, a new CPU, etc.) you are expected to provide feedback to the other developers. The feedback normally takes the form of a "patch", i. e. a context diff against a certain (latest official or latest in CVS) version of U-Boot sources.

如果你修改了uboot的源码(比如给新的设备添加board级支持, 移植到新的cpu等), 我们期望你能给其他的开发者提供反馈。反馈的形式通常是提供一个补丁patch, 或者针对正式或者最新CVS的uboot源代码的diff文本。

But before you submit such a patch, please verify that your modification did not break existing code. At least make sure that *ALL* of the supported boards compile WITHOUT ANY compiler warnings. To do so, just run the "MAKEALL" script, which will configure and build U-Boot for ALL supported system. Be warned, this will take a while. You can select which (cross) compiler to use by passing a 'CROSS_COMPILE' environment variable to the script, i. e. to use the cross tools from MontaVista's Hard Hat Linux you can type

但是在你提交这样的patch之前, 请确认你的修改不会破坏现行的代码。至少确定所有支持的boards编译时候不会有任何编译警告。要做这个测试, 运行MAKEALL脚本, 它会为uboot支持的所有系统配置和构建。当然这会很耗时间。你可以选择哪一个交叉编译器传递给脚本的CROSS_COMPILE环境变量。对于使用MontaVista's Hard Hat Linux的交叉工具的, 可以输入

```
CROSS_COMPILE=ppc_8xx- MAKEALL
```

or to build on a native PowerPC system you can type

或者构建本地powerpc系统你可以输入

```
CROSS_COMPILE=' ' MAKEALL
```

When using the MAKEALL script, the default behaviour is to build U-Boot in the source directory. This location can be changed by setting the BUILD_DIR environment variable. Also, for each target built, the MAKEALL script saves two log files (<target>.ERR and <target>.MAKEALL) in the <source dir>/LOG directory. This default location can be changed by setting the MAKEALL_LOGDIR environment variable. For example:

当使用MAKEALL脚本时候, 默认是在当前源码目录构建uboot。这可以通过设置BUILD_DIR环境变量来改变构建目录。当然, 对于每一个目标构建, MAKEALL脚本会在<source dir>/LOG 目录保存两个日记文件(<target>.ERR and <target>.MAKEALL)。这也可以通过设置环境变量MAKEALL_LOGDIR来改变保存目录。

```
export BUILD_DIR=/tmp/build
export MAKEALL_LOGDIR=/tmp/log
CROSS_COMPILE=ppc_8xx- MAKEALL
```

With the above settings build objects are saved in the /tmp/build, log files are saved in the /tmp/log and the source tree remains clean during the whole build process.

上面的设定中, 构建目标保存在 /tmp/build, 日记文件保存在 /tmp/log, 源代码树在整个构建过程中依然保持干净。

See also "U-Boot Porting Guide" below.

Monitor Commands - Overview:

=====

Monitor命令—概述

```
go      - start application at address 'addr'
          运行addr处的应用程序
run     - run commands in an environment variable
          在环境变量里面运行命令
bootm   - boot application image from memory
          从内存启动映像
bootp   - boot image via network using BootP/TFTP protocol
          用BootP/TFTP协议通过网络启动映像
tftpboot- boot image via network using TFTP protocol
          and env variables "ipaddr" and "serverip"
          (and eventually "gatewayip")
          使用TFTP协议和ipaddr以及serverip环境变量通过网络启动映像
```

rarpboot- boot image via network using RARP/TFTP protocol
使用RARP/TFTP协议通过网络启动映像

diskboot- boot from IDE devicebootd - boot default, i.e., run 'bootcmd'
从IDE设备启动

loads - load S-Record file over serial line
通过串口加载S-Record文件

loadb - load binary file over serial line (kermit mode)
通过串口使用kermit模式加载二进制文件

md - memory display
显示内存

mm - memory modify (auto-incrementing)
修改内存, 自动递增

nm - memory modify (constant address)
修改内存, 固定地址

mw - memory write (fill)
写内存, 填充

cp - memory copy
内存拷贝

cmp - memory compare
内存比较

crc32 - checksum calculation
校验和计算

imd - i2c memory display
i2c内存显示

imm - i2c memory modify (auto-incrementing)
i2c内存修改, 自动递增

inm - i2c memory modify (constant address)
i2c内存修改, 固定地址

imw - i2c memory write (fill)
i2c写内存, 填充

icrc32 - i2c checksum calculation
i2c校验和计算

iprobe - probe to discover valid I2C chip addresses
探测是否存在i2c芯片地址

iloop - infinite loop on address range
在地址范围内的无限循环?

isdram - print SDRAM configuration information
打印SDRAM配置信息

sspi - SPI utility commands
SPI应用命令

base - print or set address offset
打印设置地址偏移

printenv- print environment variables
打印环境变量

setenv - set environment variables
设置环境变量

saveenv - save environment variables to persistent storage
保存环境变量到非易失存储器

protect - enable or disable FLASH write protection
开启或者禁止FLASH写保护

erase - erase FLASH memory

flinfo - print FLASH memory information
打印flash内存信息

bdinfo - print Board Info structure
打印board的结构信息

iminfo - print header information for application image
打印映像头信息

coninfo - print console devices and informations
打印控制台设备和信息

ide - IDE sub-system
IDE子系统

loop - infinite loop on address range
地址范围内的无限循环?

loopw - infinite write loop on address range
在地址范围内无限循环写?

mtest - simple RAM test
简单RAM测试

icache - enable or disable instruction cache
开启或者禁止指令cache

dcache - enable or disable data cache
开启或者禁止数据cache

```

reset - Perform RESET of the CPU
        复位cpu
echo - echo args to console
        回显参数到控制台
version - print monitor version
        打印monitor版本信息
help - print online help
        打印在线帮助
? - alias for 'help'
        帮助

```

Monitor Commands - Detailed Description:

=====

TODO.

For now: just type "help <command>".

Environment Variables:

=====

环境变量

U-Boot supports user configuration using Environment Variables which can be made persistent by saving to Flash memory.
uboot支持用户使用环境变量来配置，它可以永久保存在flash内存中。

Environment Variables are set using "setenv", printed using "printenv", and saved to Flash using "saveenv". Using "setenv" without a value can be used to delete a variable from the environment. As long as you don't save the environment you are working with an in-memory copy. In case the Flash area containing the environment is erased by accident, a default environment is provided.
环境变量使用setenv来设置，printenv打印出来，saveenv保存到flash。使用不带值的setenv命令删除一个环境变量。在你保存环境变量之前你都是在使用内存的拷贝的环境变量。当flash中保存环境变量的区域不慎被擦除了，uboot提供一个默认的环境变量。

Some configuration options can be set using Environment Variables:
用环境变量可以设定某些配置选项

```

baudrate - see CONFIG_BAUDRATE
        波特率
bootdelay - see CONFIG_BOOTDELAY
        启动延时
bootcmd - see CONFIG_BOOTCOMMAND
        启动命令
bootargs - Boot arguments when booting an RTOS image
        启动参数
bootfile - Name of the image to load with TFTP
        启动文件
autoload - if set to "no" (any string beginning with 'n'),
        "bootp" will just load perform a lookup of the
        configuration from the BOOTP server, but not try to
        load any image using TFTP
        自动加载，如果设置为no，bootp仅会执行从bootp服务器查询配置，但不会用TFTP加载任何映像。

autostart - if set to "yes", an image loaded using the "bootp",
        "rarpboot", "tftpboot" or "diskboot" commands will
        be automatically started (by internally calling
        "bootm")
        自动启动，如果设置为yes，使用"bootp"或者"rarpboot", "tftpboot" or "diskboot"会自动加载一个映像。
        如果设置为no，一个独立的映像会传递给bootm命令然后拷贝到加载地址甚至解压，但是不会启动。这可以被用来加载解压任意
        数据。

        If set to "no", a standalone image passed to the
        "bootm" command will be copied to the load address
        (and eventually uncompressed), but NOT be started.
        This can be used to load and uncompress arbitrary
        data.

i2cfast - (PPC405GP|PPC405EP only)

```

if set to 'y' configures Linux I2C driver for fast mode (400KHZ). This environment variable is used in initialization code. So, for changes to be effective it must be saved and board must be reset.

initrd_high - restrict positioning of initrd images:
If this variable is not set, initrd images will be copied to the highest possible address in RAM; this is usually what you want since it allows for maximum initrd size. If for some reason you want to make sure that the initrd image is loaded below the CFG_BOOTMAPSZ limit, you can set this environment variable to a value of "no" or "off" or "0". Alternatively, you can set it to a maximum upper address to use (U-Boot will still check that it does not overwrite the U-Boot stack and data).

你想让initrd映
下, 你可以设
盖了uboot堆

限制了initrd映像的位置: 如果没有设置这个变量, initrd映像会尽可能拷贝到RAM的最高地址; 这可能在像可以保持最大尺寸的时候有用。出于某种原因你可能想一定要initrd映像加载到CFG_BOOTMAPSZ 限制之
置此环境变量为no或者off或者0。或者, 你可以设置它到一个最高的地址来使用, uboot仍然会检查它是否覆
栈和数据。

For instance, when you have a system with 16 MB RAM, and want to reserve 4 MB from use by Linux, you can do this by adding "mem=12M" to the value of the "bootargs" variable. However, now you must make sure that the initrd image is placed in the first 12 MB as well - this can be done with

须确定initrd

比如, 你的系统有16MB的RAM, 想保留其中4MB给linux, 你可以添加mem=12M到bootargs参数中。但是你必

映像是保存在12MB地址空间里面, 这可以通过设置环境变量initrd_high来实现 (0x00c00000=12M)
setenv initrd_high 00c00000

括flash内存
这个特性。

如果你设置initrd_high是0xffffffff, 这告诉uboot所有的地址对于linux kernel来说都是合法的, 包
。这种情况下uboot不会拷贝任何ramdisk的。这可能可以节省启动时间, 但是需要你的linux kernel支持

If you set initrd_high to 0xFFFFFFFF, this is an indication to U-Boot that all addresses are legal for the Linux kernel, including addresses in flash memory. In this case U-Boot will NOT COPY the ramdisk at all. This may be useful to reduce the boot time on your system, but requires that this feature is supported by your Linux kernel.

ipaddr - IP address; needed for tftpboot command
ip地址; tftpboot命令需要

loadaddr - Default load address for commands like "bootp",
"rarpboot", "tftpboot", "loadb" or "diskboot"
"bootp" "rarpboot" "tftpboot" "loadb" "diskboot"默认加载地址

loads_echo - see CONFIG_LOADS_ECHO
加载回显

serverip - TFTP server IP address; needed for tftpboot command
TFTP服务器IP地址; tftpboot命令需要

bootretry - see CONFIG_BOOT_RETRY_TIME
启动重试次数

bootdelaykey - see CONFIG_AUTOBOOT_DELAY_STR

bootstopkey - see CONFIG_AUTOBOOT_STOP_STR

ethprime - When CONFIG_NET_MULTI is enabled controls which interface is used first.
那个eth最先使用, CONFIG_NET_MULTI要有效。

ethact - When CONFIG_NET_MULTI is enabled controls which interface is currently active. For example you

can do the following

激活那个eth为当前接口, 前提是CONFIG_NET_MULTI要有效。

```
=> setenv ethact FEC ETHERNET
=> ping 192.168.0.1 # traffic sent on FEC ETHERNET
=> setenv ethact SCC ETHERNET
=> ping 10.0.0.1 # traffic sent on SCC ETHERNET
```

netretry - When set to "no" each network operation will either succeed or fail without retrying. When set to "once" the network operation will fail when all the available network interfaces are tried once without success. Useful on scripts which control the retry operation themselves.

当设置为no的时候, 网络操作成功或者失败都不会重试。当设置为once时候, 所有网络接口在失败时候会尝试重操作一次。

tftpsrcport - If this is set, the value is used for TFTP's UDP source port.
TFTP的UDP源端口号

tftpdstport - If this is set, the value is used for TFTP's UDP destination port instead of the Well Know Port 69.
TFTP的UDP目标端口号, 设置这个以代替已知的69号端口

vlan - When set to a value < 4095 the traffic over ethernet is encapsulated/received over 802.1q VLAN tagged frames.

当设置一个<4095的值, 以太网传输通过802.1q VLAN帧格式封装和接收。

The following environment variables may be used and automatically updated by the network boot commands ("bootp" and "rarpboot"), depending the information provided by your boot server:

可以使用的环境变量如下, 它们可以自动通过网络启动命令bootp and rarpboot来更新, 依赖于你的启动服务器提供的信息:

```
bootfile - see above
dnsip - IP address of your Domain Name Server
dnsip2 - IP address of your secondary Domain Name Server
gatewayip - IP address of the Gateway (Router) to use
hostname - Target hostname
ipaddr - see above
netmask - Subnet Mask
rootpath - Pathname of the root filesystem on the NFS server
serverip - see above
```

There are two special Environment Variables:

这里有两个特别的环境变量

serial# - contains hardware identification information such as type string and/or serial number

包含硬件标志信息如类型字符串或者序列号

ethaddr - Ethernet address

以太网地址

These variables can be set only once (usually during manufacturing of the board). U-Boot refuses to delete or overwrite these variables once they have been set once.

这些变量只能设置一次(通常在制造board的时候)。当设置后, uboot拒绝删除或者覆盖这些变量。

Further special Environment Variables:

只读的环境变量

ver - Contains the U-Boot version string as printed with the "version" command. This variable is readonly (see CONFIG_VERSION_VARIABLE).

包含uboot版本, 使用ersion命令打印。只读。

Please note that changes to some configuration parameters may take only effect after the next boot (yes, that's just like Windoze :-).

请注意某些配置参数可能重启过后才起作用(yes, 就像windoze一样);

Command Line Parsing:

=====

命令行解析器

There are two different command line parsers available with U-Boot:

the old "simple" one, and the much more powerful "hush" shell:

uboot存在两种不同的命令行解析器: 老旧简单的, 强大的hush shell:

Old, simple command line parser:

旧的简单的命令行解析器

- supports environment variables (through setenv / saveenv commands)
支持环境变量操作
- several commands on one line, separated by ';'
 - 一行可以有多个命令, 用; 隔开
- variable substitution using "... \${name} ..." syntax
变量引用
- special characters ('\$ ', ';') can be escaped by prefixing with '\',
特殊转义字符
for example:
setenv bootcmd bootm \\${address}
- You can also escape text by enclosing in single apostrophes, for example:
setenv addip 'setenv bootargs \$bootargs ip=\$ipaddr:\$serverip:\$gatewayip:\$netmask:\$hostname::off'
你可以用单撇号封闭字符串

Hush shell:

-
- similar to Bourne shell, with control structures like
if...then...else...fi, for...do...done; while...do...done,
until...do...done, ...
和Bourne shell类似, 可以带控制结构如if...then...else...fi, for...do...done; while...do...done,
until...do...done, ...
 - supports environment ("global") variables (through setenv / saveenv
commands) and local shell variables (through standard shell syntax
"name=value"); only environment variables can be used with "run"
command
支持环境变量 (全局) 和本地局部shell变量 (name=value), 仅环境变量可以用run命令。

General rules:

-
- (1) If a command line (or an environment variable executed by a "run"
command) contains several commands separated by semicolon, and
one of these commands fails, then the remaining commands will be
executed anyway.
如果一个命令行包含几个用分号分隔的命令, 当其中一个命令失败了, 其余的命令不受影响。
 - (2) If you execute several variables with one call to run (i. e.
calling run with a list of variables as arguments), any failing
command will cause "run" to terminate, i. e. the remaining
variables are not executed.
如果你用run调用了几个变量, 任何失败的命令都会导致run命令终止。

Note for Redundant Ethernet Interfaces:

冗余以太网接口注意事项

Some boards come with redundant ethernet interfaces; U-Boot supports
such configurations and is capable of automatic selection of a
"working" interface when needed. MAC assignment works as follows:
某些board有冗余以太网接口; uboot支持这样的配置, 而且它可以在需要时候选择一个工作的接口。MAC分配工作如下: 网络接口的编号
为eth0, eth1, eth2...对应的MAC地址可以存储在环境变量如ethaddr(=>eth0), "eth1addr" (=>eth1), "eth2addr", ...
Network interfaces are numbered eth0, eth1, eth2, ... Corresponding
MAC addresses can be stored in the environment as "ethaddr" (=>eth0),
"eth1addr" (=>eth1), "eth2addr", ...

If the network interface stores some valid MAC address (for instance
in SRAM), this is used as default address if there is NO correspon-
ding setting in the environment; if the corresponding environment
variable is set, this overrides the settings in the card; that means:
如果网络接口保存了有效的MAC地址 (如在SRAM), 这会用作默认值如果没有在环境中设置对应的设置; 如果设置了, 那么会覆盖card的
设定; 这意味着:

- o If the SRAM has a valid MAC address, and there is no address in the

environment, the SR0M's address is used.

如果SR0M有有效的MAC地址, 环境中没有对应的地址设定, 那么会用SR0M的。

- o If there is no valid address in the SR0M, and a definition in the environment exists, then the value from the environment variable is used.

如果SR0M中没有保存有效的地址, 而且在环境中存在定义, 那么会用环境中的。

- o If both the SR0M and the environment contain a MAC address, and both addresses are the same, this MAC address is used.

如果SR0M和环境中都定义了MAC地址, 而且一样, 那就使用这个MAC地址。

- o If both the SR0M and the environment contain a MAC address, and the addresses differ, the value from the environment is used and a warning is printed.

如果SR0M和环境中都定义了MAC地址, 而且是不同的, 那么环境中的会用到, 并且会打印警告。

- o If neither SR0M nor the environment contain a MAC address, an error is raised.

如果SR0M和环境都没有MAC地址, 会引发一个错误。

Image Formats:

=====

映像格式

The "boot" commands of this monitor operate on "image" files which can be basicly anything, preceeded by a special header; see the definitions in include/image.h for details; basicly, the header defines the following image properties:

monitor的boot命令可以对任何前面加了特殊文件头的映像文件操作; 可以查看include/image.h了解详细的定义; 一般来说, 文件头定义了如下映像属性:

- * Target Operating System (Provisions for OpenBSD, NetBSD, FreeBSD, 4.4BSD, Linux, SVR4, Esix, Solaris, Irix, SCO, Dell, NCR, VxWorks, LynxOS, pSOS, QNX, RTEMS, ARTOS;
Currently supported: Linux, NetBSD, VxWorks, QNX, RTEMS, ARTOS, LynxOS).
目标操作系统 (目前支持Linux, NetBSD, VxWorks, QNX, RTEMS, ARTOS, LynxOS)
- * Target CPU Architecture (Provisions for Alpha, ARM, AVR32, Intel x86, IA64, MIPS, NIOS, PowerPC, IBM S390, SuperH, Sparc, Sparc 64 Bit;
Currently supported: ARM, AVR32, Intel x86, MIPS, NIOS, PowerPC).
目标cpu体系 (目前支持ARM, AVR32, Intel x86, MIPS, NIOS, PowerPC)
- * Compression Type (uncompressed, gzip, bzip2)
压缩格式
- * Load Address
加载地址
- * Entry Point
入口
- * Image Name
映像名字
- * Image Timestamp
映像时间戳

The header is marked by a special Magic Number, and both the header and the data portions of the image are secured against corruption by CRC32 checksums.

文件头被特殊的魔数标志, 而且文件头和映像的数据都被加上了对应的crc32校验和。

Linux Support:

=====

linux支持

Although U-Boot should support any OS or standalone application easily, the main focus has always been on Linux during the design of U-Boot.

虽然uboot应该很容易支持任何os或者独立的应用程序, 设计uboot的主要的焦点总是集中在linux上

U-Boot includes many features that so far have been part of some

special "boot loader" code within the Linux kernel. Also, any "initrd" images to be used are no longer part of one big Linux image; instead, kernel and "initrd" are separate images. This implementation serves several purposes:

因为uboot包含很多功能，目前为止已经成为linux kernel部分特殊的boot loader了。当然，任何使用的initrd映像已经不是庞大的linux映像的一部分了；取而代之的是kernel和initrd是独立的映像。这是有几个目的的：

- the same features can be used for other OS or standalone applications (for instance: using compressed images to reduce the Flash memory footprint)
同样的功能可以用给其他os或者独立应用程序（比如使用压缩映像减少flash需求）
- it becomes much easier to port new Linux kernel versions because lots of low-level, hardware dependent stuff are done by U-Boot
移植新版本的linux kernel变得很容易，因为很多底层的硬件相关的工作已经交给uboot了。
- the same Linux kernel image can now be used with different "initrd" images; of course this also means that different kernel images can be run with the same "initrd". This makes testing easier (you don't have to build a new "zImage.initrd" Linux image when you just change a file in your "initrd"). Also, a field-upgrade of the software is easier now.

同样的linux kernel映像可以使用不同的initrd映像；这同样意味着不同的linux kernel可以用一样的initrd来运行。这也使得测试更容易些（当你仅仅是更改initrd的一个文件时候你不用重新构建一个新的linux 映像）。当然，文件层次的软件更新也很容易了。

Linux HOWTO:

=====

Porting Linux to U-Boot based systems:

移植linux到基于boot的系统:

U-Boot cannot save you from doing all the necessary modifications to configure the Linux device drivers for use with your target hardware (no, we don't intend to provide a full virtual machine interface to Linux :-).

uboot不会节省你使用你的目标硬件而进行的一切必要的配置修改linux设备驱动的工作量（no，我们不想为linux提供完全的虚拟机器接口）。

But now you can ignore ALL boot loader code (in arch/ppc/mbxboot).
但是现在你可以忽略所有的底层启动代码。

Just make sure your machine specific header file (for instance include/asm-ppc/tqm8xx.h) includes the same definition of the Board Information structure as we define in include/u-boot.h, and make sure that your definition of IMAP_ADDR uses the same value as your U-Boot configuration in CFG_IMMR.

仅需确认你的机器特定的头文件包含和我们在include/u-boot.h一样的板级信息结构定义，确认你的IMAP_ADDR和uboot中配置一样。

Configuring the Linux kernel:

linux kernel 配置

No specific requirements for U-Boot. Make sure you have some root device (initial ramdisk, NFS) for your target system.

对uboot 来说没有特殊的要求。请确认你的目标系统有一个可以启动的设备（initial ramdisk, NFS）。

Building a Linux Image:

构建linux 映像

With U-Boot, "normal" build targets like "zImage" or "bzImage" are not used. If you use recent kernel source, a new build target "uImage" will exist which automatically builds an image usable by U-Boot. Most older kernels also have support for a "pImage" target, which was introduced for our predecessor project PPCBoot and uses a 100% compatible format.

对于uboot，正常的构建目标比如zimage，bzimage是没用的。如果你使用的是近来的内核源码，一个叫uimage的新的构建目标会自动

为uboot构建一个映像。

Example:

```
make TQM850L_config
make oldconfig
make dep
make uImage
```

The "uImage" build target uses a special tool (in 'tools/mkimage') to encapsulate a compressed Linux kernel image with header information, CRC32 checksum etc. for use with U-Boot. This is what we are doing: uimage构建目标使用特殊的工具(in 'tools/mkimage')对linux kernel映像封装了文件头信息, crc32校验和信息。为了能使用uboot这是我们的步骤:

* build a standard "vmlinux" kernel image (in ELF binary format):

构建标准的vmlinux内核映像 (elf二进制格式)

* convert the kernel into a raw binary image:

转换内核到raw的二进制格式映像

```
${CROSS_COMPILE}-objcopy -O binary \
-R .note -R .comment \
-S vmlinux linux.bin
```

* compress the binary image:

压缩二进制映像

```
gzip -9 linux.bin
```

* package compressed binary image for U-Boot:

为uboot打包压缩的二进制映像

```
mkimage -A ppc -O linux -T kernel -C gzip \
-a 0 -e 0 -n "Linux Kernel Image" \
-d linux.bin.gz uImage
```

The "mkimage" tool can also be used to create ramdisk images for use with U-Boot, either separated from the Linux kernel image, or combined into one file. "mkimage" encapsulates the images with a 64 byte header containing information about target architecture, operating system, image type, compression method, entry points, time stamp, CRC32 checksums, etc.

"mkimage"工具也可以用来创建ramdisk映像给uboot使用, 不管是和linux kernel映像分开还是复合成一个文件。"mkimage"把映像和64字节文件头封装在一起。

"mkimage" can be called in two ways: to verify existing images and print the header information, or to build new images.

"mkimage"可以用在两个方面: 验证已有的映像并打印文件头信息, 或者构建一个新的映像。

In the first form (with "-l" option) mkimage lists the information contained in the header of an existing U-Boot image; this includes checksum verification:

第一个方面 (-l选项) 的mkimage列举了已有的uboot映像的文件头信息, 包括校验和

```
tools/mkimage -l image
-l ==> list image header information
```

The second form (with "-d" option) is used to build a U-Boot image from a "data file" which is used as image payload:

第二个方面 (-d选项) 用来构建uboot映像

```
tools/mkimage -A arch -O os -T type -C comp -a addr -e ep \
-n name -d data_file image
-A ==> set architecture to 'arch'
           设置体系结构
-O ==> set operating system to 'os'
           设置操作系统
-T ==> set image type to 'type'
           设置映像类型
-C ==> set compression type 'comp'
           设置压缩类型
-a ==> set load address to 'addr' (hex)
           设置加载地址 (hex)
-e ==> set entry point to 'ep' (hex)
```

```

        设置入口点
-n ==> set image name to 'name'
        设置映像名字
-d ==> use image data from 'datafile'
        用来做映像文件的数据file

```

Right now, all Linux kernels for PowerPC systems use the same load address (0x00000000), but the entry point address depends on the kernel version:

目前, 所有的powerpc系统使用的linux kernel都是相同的加载地址 (0x00000000), 但是入口地址取决于不同的linux版本

- 2.2.x kernels have the entry point at 0x0000000C,
- 2.3.x and later kernels have the entry point at 0x00000000.

So a typical call to build a U-Boot image would read:

下面是一个典型的构建uboot用的映像步骤

```

-> tools/mkimage -n '2.4.4 kernel for TQM850L' \
> -A ppc -O linux -T kernel -C gzip -a 0 -e 0 \
> -d /opt/elsk/ppc_8xx/usr/src/linux-2.4.4/arch/ppc/coffboot/vmlinux.gz \
> examples/uImage.TQM850L
Image Name:      2.4.4 kernel for TQM850L
Created:         Wed Jul 19 02:34:59 2000
Image Type:      PowerPC Linux Kernel Image (gzip compressed)
Data Size:       335725 Bytes = 327.86 kB = 0.32 MB
Load Address:    0x00000000
Entry Point:     0x00000000

```

To verify the contents of the image (or check for corruption):

校验映像内容

```

-> tools/mkimage -l examples/uImage.TQM850L
Image Name:      2.4.4 kernel for TQM850L
Created:         Wed Jul 19 02:34:59 2000
Image Type:      PowerPC Linux Kernel Image (gzip compressed)
Data Size:       335725 Bytes = 327.86 kB = 0.32 MB
Load Address:    0x00000000
Entry Point:     0x00000000

```

NOTE: for embedded systems where boot time is critical you can trade speed for memory and install an UNCOMPRESSED image instead: this needs more space in Flash, but boots much faster since it does not need to be uncompressed:

注意: 对于那些启动时间很严格的嵌入式系统, 你可以加快内存速度然后安装没有压缩的映像: 这可能需要更多的flash空间, 但是因为不用解压所以启动可能会快很多。

```

-> gunzip /opt/elsk/ppc_8xx/usr/src/linux-2.4.4/arch/ppc/coffboot/vmlinux.gz
-> tools/mkimage -n '2.4.4 kernel for TQM850L' \
> -A ppc -O linux -T kernel -C none -a 0 -e 0 \
> -d /opt/elsk/ppc_8xx/usr/src/linux-2.4.4/arch/ppc/coffboot/vmlinux \
> examples/uImage.TQM850L-uncompressed
Image Name:      2.4.4 kernel for TQM850L
Created:         Wed Jul 19 02:34:59 2000
Image Type:      PowerPC Linux Kernel Image (uncompressed)
Data Size:       792160 Bytes = 773.59 kB = 0.76 MB
Load Address:    0x00000000
Entry Point:     0x00000000

```

Similar you can build U-Boot images from a 'ramdisk.image.gz' file when your kernel is intended to use an initial ramdisk:

类似的你可以构建uboot用的'ramdisk.image.gz'文件, 当你的kernel使用初始化ramdisk时

```

-> tools/mkimage -n 'Simple Ramdisk Image' \
> -A ppc -O linux -T ramdisk -C gzip \
> -d /LinuxPPC/images/SIMPLE-ramdisk.image.gz examples/simple-initrd
Image Name:      Simple Ramdisk Image
Created:         Wed Jan 12 14:01:50 2000
Image Type:      PowerPC Linux RAMDisk Image (gzip compressed)
Data Size:       566530 Bytes = 553.25 kB = 0.54 MB
Load Address:    0x00000000
Entry Point:     0x00000000

```

Installing a Linux Image:

安装linux 映像

To downloading a U-Boot image over the serial (console) interface, you must convert the image to S-Record format:

如果要通过串口控制台接口下载uboot映像，你需要把image转换成S-Record格式:

```
objcopy -I binary -O srec examples/image examples/image.srec
```

The 'objcopy' does not understand the information in the U-Boot image header, so the resulting S-Record file will be relative to address 0x00000000. To load it to a given address, you need to specify the target address as 'offset' parameter with the 'loads' command.

'objcopy'不清楚uboot映像文件头的信息，所以S-Record文件的参考地址会是0x00000000。为了加载到指定地址，你需要使用带offset参数指定目标地址的loads命令。

Example: install the image to address 0x40100000 (which on the TQM8xxL is in the first Flash bank):

```
=> erase 40100000 401FFFFF

..... done
Erased 8 sectors

=> loads 40100000
## Ready for S-Record download ...
~>examples/image.srec
1 2 3 4 5 6 7 8 9 10 11 12 13 ...
...
15989 15990 15991 15992
[file transfer complete]
[connected]
## Start Addr = 0x00000000
```

You can check the success of the download using the 'iminfo' command; this includes a checksum verification so you can be sure no data corruption happened:

你可以用iminfo命令检查那些成功下载的映像；这包含了校验和信息这样你可以确定数据完整性。

```
=> imi 40100000

## Checking Image at 40100000 ...
Image Name:      2.2.13 for initrd on TQM850L
Image Type:      PowerPC Linux Kernel Image (gzip compressed)
Data Size: 335725 Bytes = 327 kB = 0 MB
Load Address: 00000000
Entry Point:     0000000c
Verifying Checksum ... OK
```

Boot Linux:

启动linux

The "bootm" command is used to boot an application that is stored in memory (RAM or Flash). In case of a Linux kernel image, the contents of the "bootargs" environment variable is passed to the kernel as parameters. You can check and modify this variable using the "printenv" and "setenv" commands:

bootm命令用来启动存储在内存中的应用程序。对于linux 内核映像，bootargs环境变量会作为参数传递给kernel，你可以用"printenv" and "setenv"检查和修改这些变量。

```
=> printenv bootargs
bootargs=root=/dev/ram
```

```
=> setenv bootargs root=/dev/nfs rw nfsroot=10.0.0.2:/LinuxPPC nfsaddr=10.0.0.99:10.0.0.2

=> printenv bootargs
bootargs=root=/dev/nfs rw nfsroot=10.0.0.2:/LinuxPPC nfsaddr=10.0.0.99:10.0.0.2

=> bootm 40020000
## Booting Linux kernel at 40020000 ...
Image Name:      2.2.13 for NFS on TQM850L
Image Type:      PowerPC Linux Kernel Image (gzip compressed)
Data Size: 381681 Bytes = 372 kB = 0 MB
Load Address: 00000000
Entry Point:     0000000c
Verifying Checksum ... OK
Uncompressing Kernel Image ... OK
Linux version 2.2.13 (wd@denx.local.net) (gcc version 2.95.2 19991024 (release)) #1 Wed Jul 19
02:35:17 MEST 2000
Boot arguments: root=/dev/nfs rw nfsroot=10.0.0.2:/LinuxPPC nfsaddr=10.0.0.99:10.0.0.2
time_init: decremter frequency = 187500000/60
Calibrating delay loop... 49.77 BogoMIPS
Memory: 15208k available (700k kernel code, 444k data, 32k init) [c0000000,c1000000]
...
```

If you want to boot a Linux kernel with initial ram disk, you pass the memory addresses of both the kernel and the initrd image (PPBC00T format!) to the "bootm" command:

如果你需要initial ram disk的linux kernel启动, 你可以传递两者的内存地址给bootm命令:

```
=> imi 40100000 40200000

## Checking Image at 40100000 ...
Image Name:      2.2.13 for initrd on TQM850L
Image Type:      PowerPC Linux Kernel Image (gzip compressed)
Data Size: 335725 Bytes = 327 kB = 0 MB
Load Address: 00000000
Entry Point:     0000000c
Verifying Checksum ... OK

## Checking Image at 40200000 ...
Image Name:      Simple Ramdisk Image
Image Type:      PowerPC Linux RAMDisk Image (gzip compressed)
Data Size: 566530 Bytes = 553 kB = 0 MB
Load Address: 00000000
Entry Point:     00000000
Verifying Checksum ... OK

=> bootm 40100000 40200000
## Booting Linux kernel at 40100000 ...
Image Name:      2.2.13 for initrd on TQM850L
Image Type:      PowerPC Linux Kernel Image (gzip compressed)
Data Size: 335725 Bytes = 327 kB = 0 MB
Load Address: 00000000
Entry Point:     0000000c
Verifying Checksum ... OK
Uncompressing Kernel Image ... OK
## Loading RAMDisk Image at 40200000 ...
Image Name:      Simple Ramdisk Image
Image Type:      PowerPC Linux RAMDisk Image (gzip compressed)
Data Size: 566530 Bytes = 553 kB = 0 MB
Load Address: 00000000
Entry Point:     00000000
Verifying Checksum ... OK
Loading Ramdisk ... OK
Linux version 2.2.13 (wd@denx.local.net) (gcc version 2.95.2 19991024 (release)) #1 Wed Jul 19
02:32:08 MEST 2000
Boot arguments: root=/dev/ram
time_init: decremter frequency = 187500000/60
Calibrating delay loop... 49.77 BogoMIPS
...
RAMDISK: Compressed image found at block 0
VFS: Mounted root (ext2 filesystem).

bash#
```

Boot Linux and pass a flat device tree:

启动linux, 传递一个flat设备树

First, U-Boot must be compiled with the appropriate defines. See the section titled "Linux Kernel Interface" above for a more in depth explanation. The following is an example of how to start a kernel and pass an updated flat device tree:

首先, uboot必须配置相应的定义。见上面的"Linux Kernel Interface"或者更多信息。下面这个例子展示了怎样启动一个kernel和传递一个更新的flat设备树

```
=> print oftaddr
oftaddr=0x300000
=> print oft
oft=oftrees/mpc8540ads.dtb
=> tftp $oftaddr $oft
Speed: 1000, full duplex
Using TSEC0 device
TFTP from server 192.168.1.1; our IP address is 192.168.1.101
Filename 'oftrees/mpc8540ads.dtb'.
Load address: 0x300000
Loading: #
done
Bytes transferred = 4106 (100a hex)
=> tftp $loadaddr $bootfile
Speed: 1000, full duplex
Using TSEC0 device
TFTP from server 192.168.1.1; our IP address is 192.168.1.2
Filename 'uImage'.
Load address: 0x200000
Loading:#####
done
Bytes transferred = 1029407 (fb51f hex)
=> print loadaddr
loadaddr=200000
=> print oftaddr
oftaddr=0x300000
=> bootm $loadaddr - $oftaddr
## Booting image at 00200000 ...
   Image Name:   Linux-2.6.17-dirty
   Image Type:   PowerPC Linux Kernel Image (gzip compressed)
   Data Size:    1029343 Bytes = 1005.2 kB
   Load Address: 00000000
   Entry Point:  00000000
   Verifying Checksum ... OK
   Uncompressing Kernel Image ... OK
Booting using flat device tree at 0x300000
Using MPC85xx ADS machine description
Memory CAM mapping: CAM0=256Mb, CAM1=256Mb, CAM2=0Mb residual: 0Mb
[snip]
```

More About U-Boot Image Types:

更多uboot映像的类型信息

U-Boot supports the following image types:

uboot支持一下映像类型

"Standalone Programs" are directly runnable in the environment provided by U-Boot; it is expected that (if they behave well) you can continue to work in U-Boot after return from the Standalone Program.

标准裸机程序可以在uboot环境中直接运行; 如果可能uboot可以在运行完应用程序后返回。

"OS Kernel Images" are usually images of some Embedded OS which will take over control completely. Usually these programs will install their own set of exception handlers, device drivers, set up the MMU, etc. - this means, that you cannot expect to re-enter U-Boot except by resetting the CPU.

os内核映像通常是某些嵌入式OS，可以取得完全的控制权。通常这些程序会安装他们自己的异常句柄，设备驱动，设置MMU等，这意味着你不可能返回uboot，除非重启。

"RAMDisk Images" are more or less just data blocks, and their parameters (address, size) are passed to an OS kernel that is being started.
RAMDisk映像多多少少仅仅是数据块，他们的参数（地址，尺寸）都会在开始时候传递给kernel

"Multi-File Images" contain several images, typically an OS (Linux) kernel image and one or more data images like RAMDisks. This construct is useful for instance when you want to boot over the network using BOOTP etc., where the boot server provides just a single image file, but you want to get for instance an OS kernel and a RAMDisk image.
多文件格式的映像包含了几个映像，典型的是linux内核映像和一个或者几个数据映像如ramdisk。这种结构很有用当你需要通过网络用bootp协议启动的时候，boot服务器仅能提供一个映像文件，而你需要得到kernel和ramdisk的映像。

"Multi-File Images" start with a list of image sizes, each image size (in bytes) specified by an "uint32_t" in network byte order. This list is terminated by an "(uint32_t)0". Immediately after the terminating 0 follow the images, one by one, all aligned on "uint32_t" boundaries (size rounded up to a multiple of 4 bytes).
多映像格式的映像，开头通常是一个映像大小的列表，每个映像大小用一个"uint32_t"形式的网络字节顺序表示。列表最后"(uint32_t)0"表示列表结束。紧接着是映像，一个接一个，都对齐到"uint32_t"的边界。

"Firmware Images" are binary images containing firmware (like U-Boot or FPGA images) which usually will be programmed to flash memory.
固件映像包含固件的二进制映像，通常会写入flash内存

"Script files" are command sequences that will be executed by U-Boot's command interpreter; this feature is especially useful when you configure U-Boot to use a real shell (hush) as command interpreter.
脚本文件是会被uboot命令行解析执行的命令序列；这特别有用当你配置uboot使用hush为命令行解析器时。

Standalone HOWTO:

=====
裸奔程序howto

One of the features of U-Boot is that you can dynamically load and run "standalone" applications, which can use some resources of U-Boot like console I/O functions or interrupt services.
uboot的其中一个功能是你动态的加载运行应用程序，这些程序可以使用某些uboot的资源比如控制IO和中断服务功能。

Two simple examples are included with the sources:
源码中包含两个简单的程序

"Hello World" Demo:

'examples/hello_world.c' contains a small "Hello World" Demo application; it is automatically compiled when you build U-Boot. It's configured to run at address 0x00040004, so you can play with it like that:
'examples/hello_world.c'包含一个hello world的小演示程序；当你构建uboot时候他自动编译进去了。它被配置成运行地址是0x00040004，你可以这样来运行他：

```
=> loads
## Ready for S-Record download ...
~>examples/hello_world.srec
1 2 3 4 5 6 7 8 9 10 11 ...
[file transfer complete]
[connected]
## Start Addr = 0x00040004

=> go 40004 Hello World! This is a test.
```

```
## Starting application at 0x00040004 ...
Hello World
argc = 7
argv[0] = "40004"
argv[1] = "Hello"
argv[2] = "World!"
argv[3] = "This"
argv[4] = "is"
argv[5] = "a"
argv[6] = "test."
argv[7] = "<NULL>"
Hit any key to exit ...
```

```
## Application terminated, rc = 0x0
```

Another example, which demonstrates how to register a CPM interrupt handler with the U-Boot code, can be found in 'examples/timer.c'. Here, a CPM timer is set up to generate an interrupt every second. The interrupt service routine is trivial, just printing a '.' character, but this is just a demo program. The application can be controlled by the following keys:

另外一个，展示了如何用uboot代码注册CPM中断句柄，可以在'examples/timer.c'找到他。这里，CPM定时器设置成每秒产生一个中断，中断服务程序很简单，仅仅是打印一个字符，但这仅是演示用程序。这个程序可以用下面key控制

```
? - print current values og the CPM Timer registers
b - enable interrupts and start timer
e - stop timer and disable interrupts
q - quit application
```

```
=> loads
```

```
## Ready for S-Record download ...
```

```
~>examples/timer.srec
```

```
1 2 3 4 5 6 7 8 9 10 11 ...
```

```
[file transfer complete]
```

```
[connected]
```

```
## Start Addr = 0x00040004
```

```
=> go 40004
```

```
## Starting application at 0x00040004 ...
```

```
TIMERS=0xffff00980
```

```
Using timer 1
```

```
tgcr @ 0xffff00980, tmr @ 0xffff00990, trr @ 0xffff00994, tcr @ 0xffff00998, tcn @ 0xffff0099c,
ter @ 0xffff009b0
```

```
Hit 'b':
```

```
[q, b, e, ?] Set interval 1000000 us
Enabling timer
```

```
Hit '?':
```

```
[q, b, e, ?] .....
tgcr=0x1, tmr=0xff1c, trr=0x3d09, tcr=0x0, tcn=0xef6, ter=0x0
```

```
Hit '?':
```

```
[q, b, e, ?] .
tgcr=0x1, tmr=0xff1c, trr=0x3d09, tcr=0x0, tcn=0x2ad4, ter=0x0
```

```
Hit '?':
```

```
[q, b, e, ?] .
tgcr=0x1, tmr=0xff1c, trr=0x3d09, tcr=0x0, tcn=0x1efc, ter=0x0
```

```
Hit '?':
```

```
[q, b, e, ?] .
tgcr=0x1, tmr=0xff1c, trr=0x3d09, tcr=0x0, tcn=0x169d, ter=0x0
```

```
Hit 'e':
```

```
[q, b, e, ?] ...Stopping timer
```

```
Hit 'q':
```

```
[q, b, e, ?] ## Application terminated, rc = 0x0
```

Minicom warning:

```
=====
```

minicom注意事项

Over time, many people have reported problems when trying to use the "minicom" terminal emulation program for serial download. I (wd)

consider minicom to be broken, and recommend not to use it. Under Unix, I recommend to use C-Kermit for general purpose use (and especially for kermit binary protocol download ("loadb" command), and use "cu" for S-Record download ("loads" command).

在过去,很多人在尝试使用minicom终端模拟器的串口下载功能的时候都报告有问题,我认为是minicom的问题,并且建议不要使用它。在unix中,我建议使用c-kermit作为一般应用,特别是在kermit二进制协议下载和使用cu下载s-record格式文件的时候。

Nevertheless, if you absolutely want to use it try adding this configuration to your "File transfer protocols" section:

如果你坚持一定要使用minicom,你可以尝试添加这个配置到你的"File transfer protocols"段

	Name	Program	Name	U/D	FullScr	IO-Red.	Multi
X	kermit	/usr/bin/kermit -i -l %l -s	Y	U		Y	N
Y	kermit	/usr/bin/kermit -i -l %l -r	N	D		Y	N

NetBSD Notes:

=====

NetBSD注意:

Starting at version 0.9.2, U-Boot supports NetBSD both as host (build U-Boot) and target system (boots NetBSD/mpc8xx).

Building requires a cross environment; it is known to work on NetBSD/i386 with the cross-powerpc-netbsd-1.3 package (you will also need gmake since the Makefiles are not compatible with BSD make). Note that the cross-powerpc package does not install include files; attempting to build U-Boot will fail because <machine/ansi.h> is missing. This file has to be installed and patched manually:

```
# cd /usr/pkg/cross/powerpc-netbsd/include
# mkdir powerpc
# ln -s powerpc machine
# cp /usr/src/sys/arch/powerpc/include/ansi.h powerpc/ansi.h
# ${EDIT} powerpc/ansi.h ## must remove __va_list, _BSD_VA_LIST
```

Native builds *don't* work due to incompatibilities between native and U-Boot include files.

Bootimg assumes that (the first part of) the image booted is a stage-2 loader which in turn loads and then invokes the kernel proper. Loader sources will eventually appear in the NetBSD source tree (probably in sys/arch/mpc8xx/stand/u-boot_stage2/); in the meantime, see ftp://ftp.denx.de/pub/u-boot/ppcboot_stage2.tar.gz

Implementation Internals:

=====

内部实现原理

The following is not intended to be a complete description of every implementation detail. However, it should help to understand the inner workings of U-Boot and make it easier to port it to custom hardware.

接下来不可能完全描述每一个实现细节。但是,它对明白uboot内部是如何工作的是有帮助的,对移植到定制的硬件的工作也更容易些。

Initial Stack, Global Data:

=====

内部堆栈, 全局数据

The implementation of U-Boot is complicated by the fact that U-Boot starts running out of ROM (flash memory), usually without access to system RAM (because the memory controller is not initialized yet). This means that we don't have writable Data or BSS segments, and BSS is not initialized as zero. To be able to get a C environment working at all, we have to allocate at least a minimal stack. Implementation options for this are defined and restricted by the CPU used: Some CPU models provide on-chip memory (like the IMMR area on MPC8xx and MPC826x processors), on others (parts of) the data cache can be locked as (mis-) used as memory, etc.

uboot执行的复杂事实是uboot在flash ROM里面开始执行，通常访问不了系统RAM，因为此时内存控制器还没有初始化。这意味着我们没有可写的数据段和BSS段，而且BSS段也没有初始化为0。为了得到完整的可以工作的c环境，我们必须重定位到一个最小化的堆栈。这通常通过使用CPU来定义和限制：某些CPU提供芯片内置的内存（比如MPC8XX处理器的IMMR区域），另外数据cache也可以锁定或者复用为内存。

Chris Hallinan posted a good summary of these issues to the u-boot-users mailing list:

Chris Hallinan发给uboot users 邮件列表上的邮件很好的总结了这个问题:

Subject: RE: [U-Boot-Users] RE: More On Memory Bank x (nothingness)?

From: "Chris Hallinan" <clh@net1plus.com>

Date: Mon, 10 Feb 2003 16:43:46 -0500 (22:43 MET)

...

Correct me if I'm wrong, folks, but the way I understand it is this: Using DCACHE as initial RAM for Stack, etc, does not require any physical RAM backing up the cache. The cleverness is that the cache is being used as a temporary supply of necessary storage before the SDRAM controller is setup. It's beyond the scope of this list to explain the details, but you can see how this works by studying the cache architecture and operation in the architecture and processor-specific manuals.

伙计，如果发现我错了，请纠正，但是我是这样理解它的：使用DCACHE作为堆栈的初始化RAM，不需要任何物理内存备份cache。应该

清楚的是在设置SDRAM控制器之前，cache可以用作存储需要的临时供给。在这里讨论的细节之外，你可以从特定的体系和处理器手册

上通过学习cache的结构和操作明白这是怎么工作的。

OCM is On Chip Memory, which I believe the 405GP has 4K. It is another option for the system designer to use as an initial stack/ram area prior to SDRAM being available. Either option should work for you. Using CS 4 should be fine if your board designers haven't used it for something that would cause you grief during the initial boot! It is frequently not used.

OCM是芯片内内存，我相信405G里面是4K大小。它是系统设计者在SDRAM可用之前拿来做初始化堆栈ram区域的另外一条途径。对你来

会给你

说这通常也是可行的。使用cs4应该没问题，如果你的board设计者还没有使用它做某用途时候，否则，在初始化启动的时候这带来痛苦！不过通常cs4都没有使用到。

CFG_INIT_RAM_ADDR should be somewhere that won't interfere with your processor/board/system design. The default value you will find in any recent u-boot distribution in walnut.h should work for you. I'd set it to a value larger than your SDRAM module. If you have a 64MB SDRAM module, set it above 400_0000. Just make sure your board has no resources that are supposed to respond to that address! That code in start.S has been around a while and should work as is when you get the config right.

CFG_INIT_RAM_ADDR应该是一个不会干扰你的处理器board系统设计的值。在比较新的uboot源码中你可以找到walnut.h里面

的默

请确认

认值，它应该是没问题的。我会把它设置一个比你的SDRAM模组大的值。如果你有64MB的SDRAM，设置它在400_0000之上。不过你的board在对应的地址上面没有其他的资源。这个代码在start.S里面，当你配置的当那么它应该是没有问题的。

-Chris Hallinan
DS4.COM, Inc.

It is essential to remember this, since it has some impact on the C code for the initialization procedures:

很有必要牢记这些，因为在初始化流程中对c代码有很大影响:

* Initialized global data (data segment) is read-only. Do not attempt to write it.

初始化后的全局数据段是只读的，不要试图对它写入。

* Do not use any uninitialized global data (or implicitly initialized as zero data - BSS segment) at all - this is undefined, initialization is performed later (when relocating to RAM).

不要使用没有初始化的全局数据或者没有完全清0的BSS段数据，这是没定义的，当重定位到RAM后会执行初始化。

* Stack space is very limited. Avoid big data buffers or things like that.

堆栈空间非常有限。避免使用类似于很大的数据缓存之类的数据。

Having only the stack as writable memory limits means we cannot use normal global data to share information between the code. But it turned out that the implementation of U-Boot can be greatly simplified by making a global data structure (gd_t) available to all functions. We could pass a pointer to this data as argument to `_all_` functions, but this would bloat the code. Instead we use a feature of the GCC compiler (Global Register Variables) to share the data: we place a pointer (gd) to the global data into a register which we reserve for this purpose.

只有一个可写内存的堆栈限制意味着我们不能在代码之间通过全局变量来共享信息。但是uboot却是能通过构造能对所有函数所见的全局数据结构来非常简单的突破这个限制。我们可以给所有函数的这些数据传递一个指针作为参数，但是可能这会导致代码冗肿。取而代之的我们使用了一个gcc编译器的一个特性（全局寄存器变量）来共享数据：我们在一个寄存器里面放置一个指向全局数据的指针来达到这个目的。

When choosing a register for such a purpose we are restricted by the relevant (E)ABI specifications for the current architecture, and by GCC's implementation.

当选择一个寄存器作此目的的时候，我们受当前体系的有关EABI相关定义和GCC的实现限制。

For PowerPC, the following registers have specific use:

对于PowerPC，下列寄存器有特殊用途

```
R1:    stack pointer
        堆栈指针
R2:    TOC pointer
        TOC指针
R3-R4: parameter passing and return values
        参数传递和返回值
R5-R10: parameter passing
        参数传递
R13:   small data area pointer
        少量数据区域指针
R30:   GOT pointer
        GOT指针
R31:   frame pointer
        帧指针
```

(U-Boot also uses R14 as internal GOT pointer.)

uboot使用R14作内部GOT指针

==> U-Boot will use R29 to hold a pointer to the global data

uboot会使用R29保存一个指向全局数据的指针

Note: on PPC, we could use a static initializer (since the address of the global data structure is known at compile time), but it turned out that reserving a register results in somewhat smaller code - although the code savings are not that big (on average for all boards 752 bytes for the whole U-Boot image, 624 text + 127 data).

注意：在PPC，我们可以使用静态的初始化（因为全局数据结构的地址在编译的时候就已经知道），但是结果是保留一个寄存器以达

到更小的代码，虽然保存的代码不是特别大（对所有的boards整个uboot映像平均是752字节，624 text + 127 data）。

到更小的代码，虽然保存的代码不是特别大（对所有的boards整个uboot映像平均是752字节，624 text + 127 data）。

On ARM, the following registers are used:

ARM平台，下列寄存器会用作：

```
R0:    function argument word/integer result
        函数参数 字/整数 结果
R1-R3: function argument word
        函数参数字
R9:    GOT pointer
        GOT指针
R10:   stack limit (used only if stack checking is enabled)
        堆栈限制（仅在堆栈检查允许的时候）
R11:   argument (frame) pointer
        参数（帧）指针
R12:   temporary workspace
```

```

        临时工作空间
R13:   stack pointer
        堆栈指针
R14:   link register
        连接寄存器
R15:   program counter
        程序计数器

```

==> U-Boot will use R8 to hold a pointer to the global data

uboot会使用R8保存全局数据的指针

NOTE: DECLARE_GLOBAL_DATA_PTR must be used with file-global scope, or current versions of GCC may "optimize" the code too much.

Memory Management:

内存管理

U-Boot runs in system state and uses physical addresses, i.e. the MMU is not used either for address mapping nor for memory protection. uboot运行在系统态，并且使用物理内存。MMU的地址转换或者内存保护都没有用到。

The available memory is mapped to fixed addresses using the memory controller. In this process, a contiguous block is formed for each memory type (Flash, SDRAM, SRAM), even when it consists of several physical memory banks.

可用的内存是那些使用内存控制器布局的固定地址的内存。在这处理过程中，每一种内存（flash, sdram, sram）都要求有一个连续的块，即使它有几个物理的内存banks。

U-Boot is installed in the first 128 kB of the first Flash bank (on TQM8xxL modules this is the range 0x40000000 ... 0x4001FFFF). After booting and sizing and initializing DRAM, the code relocates itself to the upper end of DRAM. Immediately below the U-Boot code some memory is reserved for use by malloc() [see CFG_MALLOC_LEN configuration setting]. Below that, a structure with global Board Info data is placed, followed by the stack (growing downward).

uboot被安装到第一个flash bank的开始128kb处（对TQM8XXL来说这是0x40000000 ... 0x4001FFFF）。在启动初始化DRAM后，uboot把自己复制重定位到DRAM的高处。紧接着uboot代码的下面保留给malloc（）函数使用（见CFG_MALLOC_LEN配置选项）。然后紧接着这的下面是全局board信息的结构，然后是向下生长的堆栈。

Additionally, some exception handler code is copied to the low 8 kB of DRAM (0x00000000 ... 0x00001FFF).

另外，某些异常句柄代码被拷贝到DRAM的最低8kb处(0x00000000 ... 0x00001FFF)

So a typical memory configuration with 16 MB of DRAM could look like this:

所以一个16MB内存大小的典型布局可能像下面这样:

```

0x0000 0000      异常向量表
:
0x0000 1FFF
0x0000 2000      应用程序自由使用的区域
:
:
:
:
0x00FB FF20      Monitor 堆栈 (往下生长)
0x00FB FFAC      Board Info 数据 和全局数据的拷贝
0x00FC 0000      Malloc 用
:
0x00FD FFFF
0x00FE 0000      Monitor在RAM中拷贝
...eventually: LCD or video 帧缓存
...eventually: 受保护的RAM
0x00FF FFFF      RAM结束处

```

System Initialization:

系统初始化

In the reset configuration, U-Boot starts at the reset entry point (on most PowerPC systems at address 0x00000100). Because of the reset configuration for CS0# this is a mirror of the onboard Flash memory. To be able to re-map memory U-Boot then jumps to its link address. To be able to implement the initialization code in C, a (small!) initial stack is set up in the internal Dual Ported RAM (in case CPUs which provide such a feature like MPC8xx or MPC8260), or in a locked part of the data cache. After that, U-Boot initializes the CPU core, the caches and the SIU.

在复位配置中，uboot进入复位入口点开始启动（大多数PowerPC系统在地址0x00000100）。因为在复位配置中，CS0是板载flash的映像。为了能重映射内存，uboot然后跳转到它的连接地址。为了能实现用c代码来初始化，需要一个内部在dual port RAM中设置一个非常小的初始化堆栈（MPC8XX或者MPC8260提供此类功能），或者是一个锁定的数据cache。然后uboot开始初始化cpu核心，cache，和SIU。

Next, all (potentially) available memory banks are mapped using a preliminary mapping. For example, we put them on 512 MB boundaries (multiples of 0x20000000: SDRAM on 0x00000000 and 0x20000000, Flash on 0x40000000 and 0x60000000, SRAM on 0x80000000). Then UPM A is programmed for SDRAM access. Using the temporary configuration, a simple memory test is run that determines the size of the SDRAM banks.

接着，使用初步的重定位使得所有（潜在的）内存banks都被重映射。比如我们把它们放在512MB的边界（0x20000000的整数倍SDRAM在 0x00000000和 0x20000000，Flash在 0x40000000 和 0x60000000，SRAM 在 0x80000000）。UPM A被编程以便访问SDRAM。使用临时配置，一个简单的内存测试会运行以检测SDRAM banks的大小。

When there is more than one SDRAM bank, and the banks are of different size, the largest is mapped first. For equal size, the first bank (CS2#) is mapped first. The first mapping is always for address 0x00000000, with any additional banks following immediately to create contiguous memory starting from 0.

当SDRAM有超过一个数量的bank时候，并且这些bank是不同大小的，最大的那个会首先重映射。对于相等尺寸的bank，CS2会首先映射。第一个映射的地址当然是0x00000000，其他的banks紧接着，这样就构建了从0连续开始的内存。

Then, the monitor installs itself at the upper end of the SDRAM area and allocates memory for use by malloc() and for the global Board Info data; also, the exception vector code is copied to the low RAM pages, and the final stack is set up.

然后，monitor会在SDRAM区域的最高端安装自己并且会分配内存给malloc函数用，以及全局board信息数据用；当然异常向量表代码会拷贝到RAM的最低端，最后设置堆栈。

Only after this relocation will you have a "normal" C environment; until that you are restricted in several ways, mostly because you are running from ROM, and because the code will have to be relocated to a new address in RAM.

当这些重定位完成后你才会有一个正常的c环境；在这之前你都是被几个因素限制住的，大部分都是因为你是在rom中运行，代码需要重新定位到RAM一个新的地址。

U-Boot Porting Guide:

uboot移植指南

[Based on messages by Jerry Van Baren in the U-Boot-Users mailing list, October 2002]

```
int main (int argc, char *argv[])
{
    sighandler_t no_more_time;

    signal (SIGALRM, no_more_time);
    alarm (PROJECT_DEADLINE - toSec (3 * WEEK));

    if (available_money > available_manpower) {
        pay consultant to port U-Boot;
        return 0;
    }
}
```

```

Download latest U-Boot source;

Subscribe to u-boot-users mailing list;

if (clueless) {
    email ("Hi, I am new to U-Boot, how do I get started?");
}

while (learning) {
    Read the README file in the top level directory;
    Read http://www.denx.de/twiki/bin/view/DULG/Manual ;
    Read the source, Luke;
}

if (available_money > toLocalCurrency ($2500)) {
    Buy a BDI2000;
} else {
    Add a lot of aggravation and time;
}

Create your own board support subdirectory;

Create your own board config file;

while (!running) {
    do {
        Add / modify source code;
    } until (compiles);
    Debug;
    if (clueless)
        email ("Hi, I am having problems...");
}
Send patch file to Wolfgang;

return 0;
}

void no_more_time (int sig)
{
    hire_a_guru();
}

```

Coding Standards:

代码标准

All contributions to U-Boot should conform to the Linux kernel coding style; see the file "Documentation/CodingStyle" and the script "scripts/Lindent" in your Linux kernel source directory. In sources originating from U-Boot a style corresponding to "Lindent -pcs" (adding spaces before parameters to function calls) is actually used.

Source files originating from a different project (for example the MTD subsystem) are generally exempt from these guidelines and are not reformatted to ease subsequent migration to newer versions of those sources.

Please note that U-Boot is implemented in C (and to some small parts in Assembler); no C++ is used, so please do not use C++ style comments (//) in your code.

Please also stick to the following formatting rules:

- remove any trailing white space
- use TAB characters for indentation, not spaces
- make sure NOT to use DOS '\r\n' line feeds
- do not add more than 2 empty lines to source files
- do not add trailing empty lines to source files

Submissions which do not conform to the standards may be returned with a request to reformat the changes.

Submitting Patches:

提交补丁

Since the number of patches for U-Boot is growing, we need to establish some rules. Submissions which do not conform to these rules may be rejected, even when they contain important and valuable stuff.

Patches shall be sent to the u-boot-users mailing list.

When you send a patch, please include the following information with it:

- * For bug fixes: a description of the bug and how your patch fixes this bug. Please try to include a way of demonstrating that the patch actually fixes something.
- * For new features: a description of the feature and your implementation.
- * A CHANGELOG entry as plaintext (separate from the patch)
- * For major contributions, your entry to the CREDITS file
- * When you add support for a new board, don't forget to add this board to the MAKEALL script, too.
- * If your patch adds new configuration options, don't forget to document these in the README file.
- * The patch itself. If you are accessing the CVS repository use "cvs update; cvs diff -puRN"; else, use "diff -puN OLD NEW". If your version of diff does not support these options, then get the latest version of GNU diff.

The current directory when running this command shall be the top level directory of the U-Boot source tree, or it's parent directory (i. e. please make sure that your patch includes sufficient directory information for the affected files).

We accept patches as plain text, MIME attachments or as uuencoded gzipped text.

- * If one logical set of modifications affects or creates several files, all these changes shall be submitted in a SINGLE patch file.
- * Changesets that contain different, unrelated modifications shall be submitted as SEPARATE patches, one patch per changeset.

Notes:

- * Before sending the patch, run the MAKEALL script on your patched source tree and make sure that no errors or warnings are reported for any of the boards.
- * Keep your modifications to the necessary minimum: A patch containing several unrelated changes or arbitrary reforms will be returned with a request to re-formatting / split it.
- * If you modify existing code, make sure that your new code does not add to the memory footprint of the code ;-) Small is beautiful! When adding new features, these should compile conditionally only (using #ifdef), and the resulting code with the new feature disabled must not need more memory than the old code without your modification.
- * Remember that there is a size limit of 40 kB per message on the u-boot-users mailing list. Compression may help.