

SBC-Klammer 2
Layer 1

SBC-Klammer 2
Layer 1

SBC-Klammer 2
Layer 1

SBC-Klammer 2
Layer 1

SBC-Klammer 2
Layer 2

SBC-Klammer 2
Layer 2

SBC-Klammer 2
Layer 2

SBC-Klammer 2
Layer 2

Grannophone-Rückwand

Nur für Lautsprecher vom Typ Visaton SC 5.9 ND
ausschneiden/bohren

The diagram shows a rectangular back panel for a Grannophone. It features two identical speaker cutouts, each represented by an elongated octagon with a central circular hole. There are 12 drill points marked with a crosshair symbol: 4 on the left edge, 4 on the right edge, and 4 on the top edge. A pink crosshair is located at the top left corner of the panel.

Grannophone-Rückwand

Nur für Lautsprecher vom Typ Visaton SC 5.9 ND
ausschneiden/bohren

The diagram shows a rectangular back panel for a Grannophone. It features two identical speaker cutouts, each represented by an elongated octagon with a central circular hole. There are 12 drill points marked with a crosshair symbol: 4 on the left edge, 4 on the right edge, and 4 on the top edge. A pink crosshair is located at the top left corner of the panel.

Grannophone-Rückwand

Nur für Lautsprecher vom Typ Visaton SC 5.9 ND
ausschneiden/bohren

The diagram shows a rectangular back panel for a Grannophone. It features two identical speaker cutouts, each represented by an elongated octagon with a central circular hole. There are 12 drill points marked with a crosshair symbol: 4 on the left edge, 4 on the right edge, and 4 on the top edge. A pink crosshair is located at the top left corner of the panel.

Grannophone-Rückwand

Nur für Lautsprecher vom Typ Visaton SC 5.9 ND
ausschneiden/bohren

The diagram shows a rectangular back panel for a Grannophone. It features two identical speaker cutouts, each represented by an elongated octagon with a central circular hole. There are 12 drill points marked with a crosshair symbol: 4 on the left edge, 4 on the right edge, and 4 on the top edge. A pink crosshair is located at the top left corner of the panel.

