

## RX Family

R01AN2025EJ0122

Rev.1.22

Sep 30, 2017

### USB Basic Host and Peripheral Driver using Firmware Integration Technology

#### Introduction

This application note describes the USB basic firmware, which utilizes Firmware Integration Technology (FIT). This module performs hardware control of USB communication. It is referred to below as the USB-BASIC-F/W FIT module.

#### Target Device

RX63N/RX631 Group  
RX65N/RX651 Group  
RX64M Group  
RX71M Group

When using this application note with other Renesas MCUs, careful evaluation is recommended after making modifications to comply with the alternate MCU.

#### Related Documents

1. Universal Serial Bus Revision 2.0 specification  
【<http://www.usb.org/developers/docs/>】
2. RX63N/RX631 Group User's Manual: Hardware (Document number. R01UH0041EJ)
3. RX64M Group User's Manual: Hardware (Document number. R01UH0377EJ)
4. RX71M Group User's Manual: Hardware (Document number. R01UH0493EJ)
5. RX65N/RX651 User's Manual: Hardware (Document number. R01UH0590EJ)
6. RX65N/RX651-2M User's Manual: Hardware (Document number. R01UH0659EJ)

Renesas Electronics Website  
【<http://www.renesas.com/>】

USB Devices Page  
【<http://www.renesas.com/prod/usb/>】

## Contents

1. Overview .....	3
2. Peripheral .....	7
3. Host .....	14
4. API Functions .....	21
5. Return Value of R_USB_GetEvent Function .....	50
6. Device Class Types.....	54
7. Configuration (r_usb_basic_config.h) .....	55
8. Structures .....	60
9. USB Class Requests.....	64
10. DTC/DMA Transfer.....	68
11. Additional Notes .....	70
12. Creating an Application Program .....	71
13. Program Sample .....	75

## 1. Overview

The USB-BASIC-F/W FIT module performs USB hardware control. The USB-BASIC-F/W FIT module operates in combination with one type of sample device class drivers provided by Renesas.

This module supports the following functions.

### <Overall>

- Supporting USB Host or USB Peripheral.
- Device connect/disconnect, suspend/resume, and USB bus reset processing.
- Control transfer on pipe 0.
- Data transfer on pipes 1 to 9. (Bulk or Interrupt transfer)

### <Host mode>

- In host mode, enumeration as Low-speed/Full-speed/Hi-speed device (However, operating speed is different by devices ability.)
- Transfer error determination and transfer retry.

### <Peripheral mode>

- In peripheral mode, enumeration as USB Host of USB1.1/2.0/3.0.

## 1.1 Note

1. This application note is not guaranteed to provide USB communication operations. The customer should verify operations when utilizing the USB device module in a system and confirm the ability to connect to a variety of different types of devices.
2. The terms “USB0 module” and “USB1 module” used in this document refer to different modules for each MCU. The following is a reference.

	MCU	USB Module Name
USB0 module (Start address: 0xA0000)	RX63N/RX631	USBa module
	RX65N/RX651	USBb module
	RX64M	USBb module
	RX71M	USBb module
USB1 module (Start address: 0xA0200/0xD0400)	RX63N/RX631	USBa module
	RX64M	USBA module
	RX71M	USBAa module

Note:

The RX65N/RX651 MCU does not support the USB1 module.

## 1.2 Limitations

This driver is subject to the following limitations.

1. In USB host mode, the module does not support suspend/resume of the connected hub or devices connected to the hub's down ports.
2. In USB host mode, the module does not support suspend during data transfer. Execute suspend only after confirming that data transfer is complete.
3. Multiconfigurations are not supported.
4. The USB host and USB peripheral modes cannot operate at the same time.
5. DMA/DTC is not supported when using RX63N/RX631.
6. When using the USB hub for DTC/DMA transfer, only the first USB device connected to the USB hub will be able to send data using DTC/DMA transfer. All subsequent data transfers will be implemented with the CPU transfer function.
7. This USB driver does not support the error processing when the out of specification values are specified to the arguments of each function in the driver.
8. In the case of Vendor class, the user can not use the USB Hub.
9. This driver does not support the CPU transfer using D0FIFO/D1FIFO register.

### 1.3 Terms and Abbreviations

APL	:	Application program
CDP	:	Charging Downstream Port
DCP	:	Dedicated Charging Port
HBC	:	Host Battery Charging control
HCD	:	Host control driver of USB-BASIC-F/W
HDCCD	:	Host device class driver (device driver and USB class driver)
HUBCD	:	Hub class sample driver
H/W	:	Renesas USB deviceRX Family
MGR	:	Peripheral device state manager of HCD
PBC	:	Peripheral Battery Charging control
PCD	:	Peripheral control driver of USB-BASIC-F/W
PDCD	:	Peripheral device class driver (device driver and USB class driver)
RSK	:	Renesas Starter Kits
STD	:	USB-BASIC-F/W
USB	:	Universal Serial Bus
USB-BASIC-F/W	:	USB Basic Host and Peripheral firmware for RX Family
Scheduler	:	Used to schedule functions, like a simplified OS.
Task	:	Processing unit

### 1.4 USB-BASIC-F/W FIT module

User needs to integrate this module to the project using `r_bsp`. User can control USB H/W by using this module API after integrating to the project.

### 1.5 Software Configuration

In peripheral mode, USB-BASIC-F/W comprises the peripheral driver (PCD), and the application (APL). PDCD is the class driver and not part of the USB-BASIC-F/W. See Table 1-1. In host mode, USB-BASIC-F/W comprises the host driver (HCD), the manager (MGR), the hub class driver (HUBCD) and the application (APL). HDD and HDCCD are not part of the USB-BASIC-F/W, see Table 1-1

The peripheral driver (PCD) and host driver (HCD) initiate hardware control through the hardware access layer according to messages from the various tasks or interrupt handler. They also notify the appropriate task when hardware control ends, of processing results, and of hardware requests.

Manager manages the connection state of USB peripherals and performs enumeration. In addition, manager issues a message to host driver or hub class driver when the application changes the device state. Hub class driver is sample program code for managing the states of devices connected to the down ports of the USB hub and performing enumeration.

The customer will need to make a variety of customizations, for example designating classes, issuing vendor-specific requests, making settings with regard to the communication speed or program capacity, or making individual settings that affect the user interface.

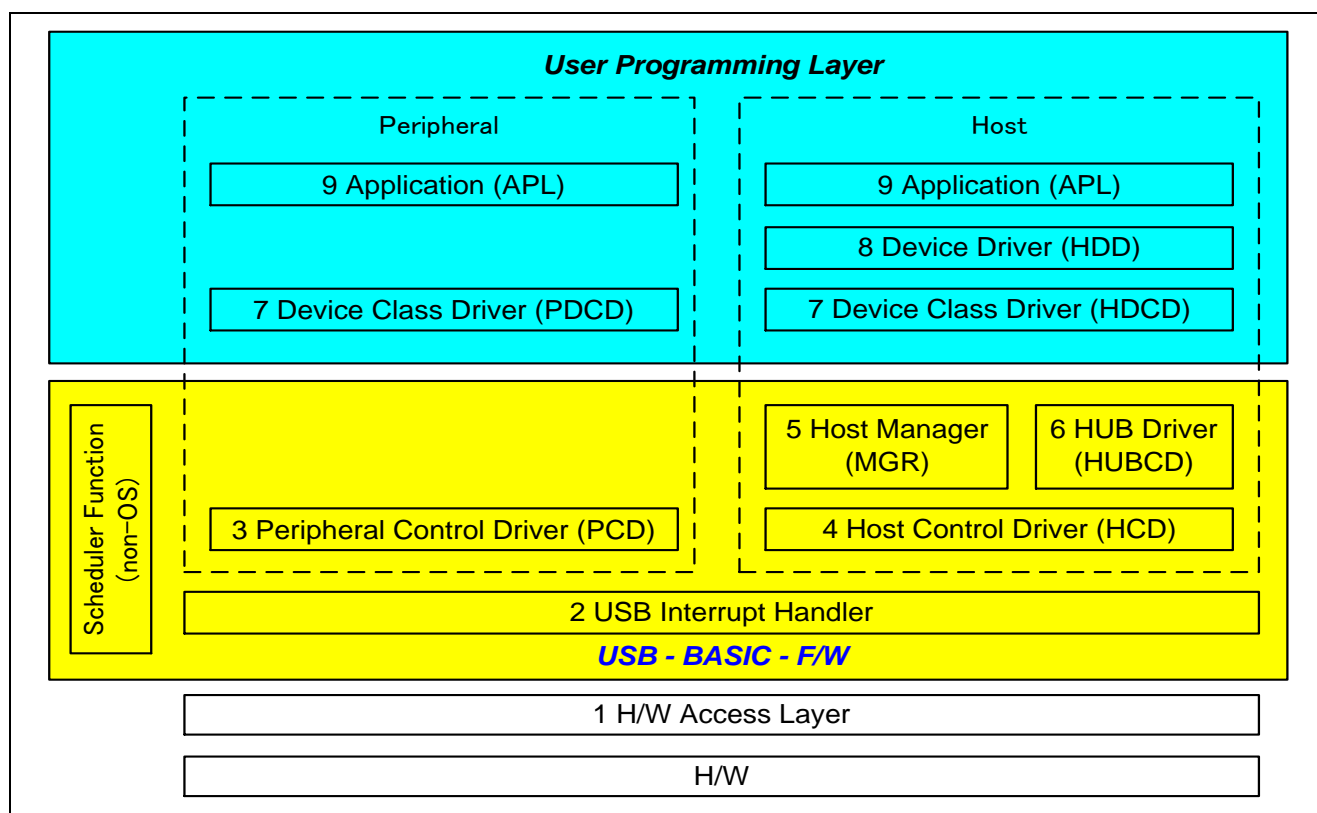


Figure 1-1 Task Configuration of USB-BASIC-F/W

Table 1-1 Software function overview

No	Module Name	Function
1	H/W Access Layer	Hardware control
2	USB Interrupt Handler	USB interrupt handler (USB packet transmit/receive end and special signal detection)
3	Peripheral Control Driver (PCD)	Hardware control in peripheral mode Peripheral transaction management
4	Host control driver (HCD)	Hardware control in host mode Host transaction management
5	Host Manager (MGR)	Device state management Enumeration HCD/HUBCD control message determination
6	HUB Driver (HUBCD)	HUB down port device state management HUB down port enumeration
7	Device Class Driver	Provided by the customer as appropriate for the system.
8	Device Driver	Provided by the customer as appropriate for the system.
9	Application	Provided by the customer as appropriate for the system.

## 1.6 Scheduler Function and Tasks

When using the non-OS version of the source code, a scheduler function manages requests generated by tasks and hardware according to their relative priority. When multiple task requests are generated with the same priority, they are executed using a FIFO configuration. To assure commonality with non-OS firmware, requests between tasks are implemented by transmitting and receiving messages.

## 1.7 Pin Setting

To use the USB FIT module, input/output signals of the peripheral function has to be allocated to pins with the multi-function pin controller (MPC). Do the pin setting used in this module before calling *R\_USB\_Open* function.

## 2. Peripheral

### 2.1 Peripheral Control Driver (PCD)

#### 2.1.1 Basic functions

PCD is a program for controlling the hardware. PCD analyzes requests from PDCD (not part of the USB-BASIC-F/W FIT module) and controls the hardware accordingly. It also sends notification of control results using a user provided call-back function. PCD also analyzes requests from hardware and notifies PDCD accordingly.

PCD accomplishes the following:

1. Control transfers. (Control Read, Control Write, and control commands without data stage.)
2. Data transfers. (Bulk, interrupt) and result notification.
3. Data transfer suspensions. (All pipes.)
4. USB bus reset signal detection and reset handshake result notifications.
5. Suspend/resume detections.
6. Attach/detach detection using the VBUS interrupt.
7. Hardware control when entering and returning from the clock stopped (low-power sleep mode) state.

#### 2.1.2 Issuing requests to PCD

API functions are used when hardware control requests are issued to the PCD and when performing data transfers. Refer to chapter 4, **API Functions** for the API function.

#### 2.1.3 USB requests

This driver supports the following standard requests.

1. GET\_STATUS
2. GET\_DESCRIPTOR
3. GET\_CONFIGURATION
4. GET\_INTERFACE
5. CLEAR\_FEATURE
6. SET\_FEATURE
7. SET\_ADDRESS
8. SET\_CONFIGURATION
9. SET\_INTERFACE

This driver answers requests other than the above with a STALL response.

Note that, refer to chapter 9, **USB Class Requests** for the processing method when this driver receives the class request or vendor request.

## 2.2 API Information

This Driver API follows the Renesas API naming standards.

### 2.2.1 Hardware Requirements

This driver requires your MCU support the following features:

- USB

### 2.2.2 Software Requirements

This driver is dependent upon the following packages:

- r\_bsp
- r\_dtc\_rx (using DTC transfer)
- r\_dmaca\_rx (using DMA transfer)

### 2.2.3 Operating Confirmation Environment

Table 2-1 shows the operating confirmation environment of this driver.

Table 2-1 Operation Confirmation Environment

Item	Contents
Integrated Development Environment	Renesas Electronics e <sup>2</sup> studio V.6.0.0
C compiler	Renesas Electronics C/C++ compiler for RX Family V.2.07.00 Compile Option : -lang = c99
Endian	Little Endian, Big Endian
USB Driver Revision Number	Rev.1.22
Using Board	Renesas Starter Kit for RX63N Renesas Starter Kit for RX64M Renesas Starter Kit for RX71M Renesas Starter Kit for RX65N, Renesas Starter Kit for RX65N-2MB
Host Environment	The operation of this USB Driver module connected to the following OSes has been confirmed. <ol style="list-style-type: none"> <li>1. Windows® 7</li> <li>2. Windows® 8.1</li> <li>3. Windows® 10</li> </ol>

### 2.2.4 Usage of Interrupt Vector

Table 2-2 shows the interrupt vector which this driver uses.

Table 2-2 List of Usage Interrupt Vectors

Device	Contents
RX63N RX631	USBIO Interrupt (Vector number: 35) / USBR0 Interrupt (Vector number: 90) USB D0FIFO0 Interrupt (Vector number: 33) / USB D1FIFO0 Interrupt (Vector number: 34) USBIO1 Interrupt (Vector number: 38) / USBR1 Interrupt (Vector number: 91) USB D0FIFO1 Interrupt (Vector number: 36) / USB D1FIFO1 Interrupt (Vector number: 37)
RX64M RX71M	USBIO(GROUPB) Interrupt (Vector number: 189, Group interrupt source number : 62) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35) USBR0 Interrupt (Vector number: 90)



	USBAR Interrupt (Vector number: 94) USB D0FIFO2 Interrupt (Vector number: 32) / USB D1FIFO2 Interrupt (Vector number: 33)
RX65N RX651	USBIO(GROUPB) Interrupt (Vector number: 185, Group interrupt source number : 62) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35) USBR0 Interrupt (Vector number: 90)

### 2.2.5 Header Files

All API calls and their supporting interface definitions are located in `r_usb_basic_if.h`.

### 2.2.6 Integer Types

This project uses ANSI C99 “Exact width integer types” in order to make the code clearer and more portable. These types are defined in `stdint.h`.

### 2.2.7 Compile Setting

For compile settings, refer to chapter 7, **Configuration**.

### 2.2.8 ROM / RAM Size

The follows show ROM/RAM size of this driver.

#### 1. RX64M, RX71M, RX65N/RX651

	Checks arguments	Does not check arguments
ROM size	19.4K bytes (Note 3)	19K bytes (Note 4)
RAM size	8.9K bytes	8.9K bytes

#### 2. RX63N/RX631

	Checks arguments	Does not check arguments
ROM size	15.9K bytes (Note 3)	15.4K bytes (Note 4)
RAM size	8.6K bytes	8.6K bytes

Note:

1. ROM/RAM size for BSP is included in the above size.
2. The default option is specified in the compiler optimization option.
3. The ROM size of “Checks arguments” is the value when `USB_CFG_ENABLE` is specified to `USB_CFG_PARAM_CHECKING` definition in `r_usb_basic_config.h` file.
4. The ROM size of “Does not check arguments” is the value when `USB_CFG_DISABLE` is specified to `USB_CFG_PARAM_CHECKING` definition in `r_usb_basic_config.h` file.

### 2.2.9 Argument

For the structure used in the argument of API function, refer to chapter 8, **Structures**.

### 2.2.10 Adding the FIT Module to Your Project

This module must be added to each project in which it is used. Renesas recommends using “Smart Configurator” described at (1) or (3). However, “Smart Configurator” supports some RX devices. Please use the methods of (2) or (4) for unsupported RX devices.

- (1) Adding the FIT module to your project using “Smart Configurator” on e<sup>2</sup> studio

By using the “Smart Configurator” in e<sup>2</sup> studio, FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)”.

- (2) Adding the FIT module to your project using “FIT Configurator” on e<sup>2</sup> studio

By using the “FIT Configurator” in e<sup>2</sup> studio, FIT module is automatically added to your project. Refer to “Adding Firmware Integration Technology Modules to Projects (R01AN1723)”.

- (3) Adding the FIT module to your project using “Smart Configurator” on CS+

By using the “Smart Configurator Standalone version” on CS+, FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)”.

- (4) Adding the FIT module to your project on CS+

In CS+, please manually add FIT module to your project. Refer to “Adding Firmware Integration Technology Modules to CS+ Projects (R01AN1826)”

## 2.3 API (Application Programming Interface)

For the detail of the API function, refer to chapter 4, **API Functions**.

## 2.4 Class Request

For the processing method when this driver receives the class request, refer to chapter 9, **USB Class Requests**.

## 2.5 Descriptor

### 2.5.1 String Descriptor

This USB driver requires each string descriptor that is constructed to be registered in the string descriptor table. The following describes how to register a string descriptor.

1. First construct each string descriptor. Then, define the variable of each string descriptor in `uint8_t*` type.

#### Example descriptor construction)

```
uint8_t smp_str_descriptor0[] {
    0x04, /* Length */
    0x03, /* Descriptor type */
    0x09, 0x04 /* Language ID */
};
uint8_t smp_str_descriptor1[] =
{
    0x10, /* Length */
    0x03, /* Descriptor type */
    'R', 0x00,
    'E', 0x00,
    'N', 0x00,
    'E', 0x00,
    'S', 0x00,
    'A', 0x00,
    'S', 0x00
};
uint8_t smp_str_descriptor2[] =
{
    0x12, /* Length */
    0x03, /* Descriptor type */
    'C', 0x00,
    'D', 0x00,
    'C', 0x00,
    '_', 0x00,
    'D', 0x00,
    'E', 0x00,
    'M', 0x00,
    'O', 0x00
};
```

2. Set the top address of each string descriptor constructed above in the string descriptor table. Define the variables of the string descriptor table as `uint8_t*` type.

#### Note:

The position set for each string descriptor in the string descriptor table is determined by the index values set in the descriptor itself (`iManufacturer`, `iConfiguration`, etc.).

For example, in the table below, the manufacturer is described in `smp_str_descriptor1` and the value of `iManufacturer` in the device descriptor is "1". Therefore, the top address "smp\_str\_descriptor1" is set at Index "1" in the string descriptor table.

```
/* String Descriptor table */
uint8_t *smp_str_table[] =
{
```

```
smp_str_descriptor0, /* Index: 0 */  
smp_str_descriptor1, /* Index: 1 */  
smp_str_descriptor2, /* Index: 2 */  
};
```

3. Set the top address of the string descriptor table in the *usb\_descriptor\_t* structure member (*string*). Refer to chapter **8.4, usb\_descriptor\_t structure** for more details concerning the *usb\_descriptor\_t* structure.

### 2.5.2 Other Descriptors

1. Please construct the device descriptor, configuration descriptor, and qualifier descriptor based on instructions provided in the **Universal Serial Bus Revision 2.0 specification**(<http://www.usb.org/developers/docs/>) Each descriptor variable should be defined as `uint8_t*` type.
2. The top address of each descriptor should be registered in the corresponding *usb\_descriptor\_t* function member. For more details, refer to chapter **8.4, usb\_descriptor\_t structure**.

## 2.6 Peripheral Battery Charging (PBC)

This driver supports PBC.

PBC is the H/W control program for the target device that operates the Charging Port Detection (CPD) defined by the USB Battery Charging Specification (Revision 1.2).

You can get the result of CPD by calling *R\_USB\_GetInformation* function. For *R\_USB\_GetInformation* function, refer to chapter **4.11**.

Note:

RX63N/RX631 does not support PBC.

The processing flow of PBC is shown in Figure 2-1.

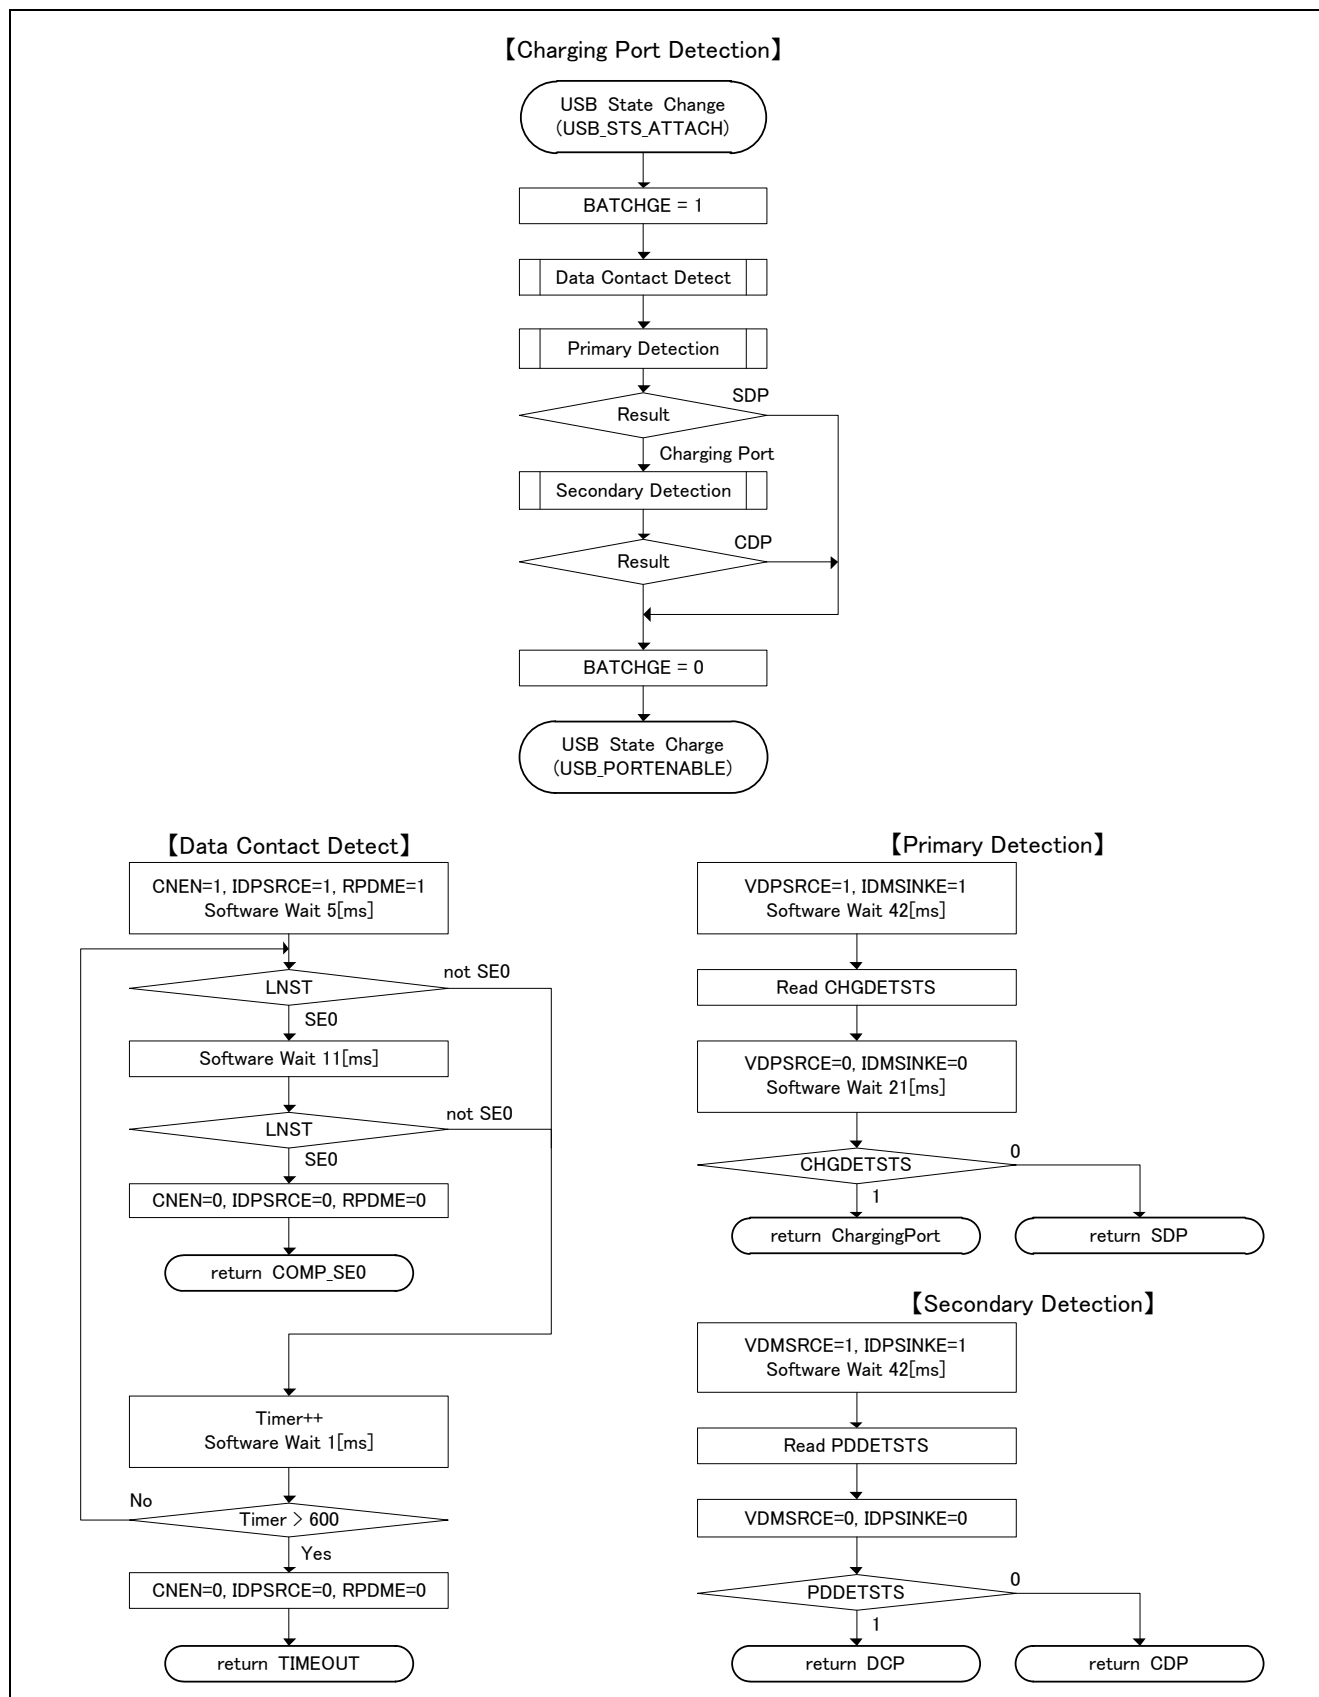


Figure 2-1 PBC processing flow

### 3. Host

#### 3.1 Host Control Driver (HCD)

##### 3.1.1 Basic function

HCD is a program for controlling the hardware. The functions of HCD are shown below.

1. Control transfer (Control Read, Control Write, No-data Control) and result notification.
2. Data transfer (bulk, interrupt) and result notification.
3. Data transfer suspension (all pipes).
4. USB communication error detection and automatic transfer retry
5. USB bus reset signal transmission and reset handshake result notification.
6. Suspend signal and resume signal transmission.
7. Attach/detach detection using ATCH and DTCH interrupts.

#### 3.2 Host Manager (MGR)

##### 3.2.1 Basic function

The functions of MGR are shown below.

1. Registration of HDCCD.
2. State management for connected devices.
3. Enumeration of connected devices.
4. Searching for endpoint information from descriptors.

##### 3.2.2 USB Standard Requests

MGR enumerates connected devices. The USB standard requests issued by MGR are listed below. The descriptor information obtained from a device is stored temporarily, and this information can be fetched by using the HCD API function.

GET\_DESCRIPTOR (Device Descriptor)  
SET\_ADDRESS  
GET\_DESCRIPTOR (Configuration Descriptor)  
SET\_CONFIGURATION

### 3.3 API Information

This Driver API follows the Renesas API naming standards.

#### 3.3.1 Hardware Requirements

This driver requires your MCU support the following features:

- USB

#### 3.3.2 Software Requirements

This driver is dependent upon the following packages:

- r\_bsp
- r\_dtc\_rx (using DTC transfer)
- r\_dmaca\_rx (using DMA transfer)

#### 3.3.3 Operating Confirmation Environment

Table 3-1 shows the operating confirmation environment of this driver.

Table 3-1 Operation Confirmation Environment

Item	Contents
Integrated Development Environment	Renesas Electronics e <sup>2</sup> studio V.6.0.0
C compiler	Renesas Electronics C/C++ compiler for RX Family V.2.07.00 Compile Option : -lang = c99
Endian	Little Endian, Big Endian
USB Driver Revision Number	Rev.1.22
Using Board	Renesas Starter Kit for RX63N Renesas Starter Kit for RX64M Renesas Starter Kit for RX71M Renesas Starter Kit for RX65N, Renesas Starter Kit for RX65N-2MB

#### 3.3.4 Usage of Interrupt Vector

Table 3-2 shows the interrupt vector which this driver uses.

Table 3-2 List of Usage Interrupt Vectors

Device	Contents
RX63N RX631	USBIO Interrupt (Vector number: 35) / USBR0 Interrupt (Vector number: 90) USB D0FIFO0 Interrupt (Vector number: 33) / USB D1FIFO0 Interrupt (Vector number: 34)
RX64M RX71M	USBIO(GROUPB) Interrupt (Vector number: 189, Group interrupt source number : 62) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35) USBR0 Interrupt (Vector number:90) USBAR Interrupt (Vector number: 94) USB D0FIFO2 Interrupt (Vector number: 32) / USB D1FIFO2 Interrupt (Vector number: 33)
RX65N RX651	USBIO(GROUPB) Interrupt (Vector number: 185, Group interrupt source number : 62) USB D0FIFO0 Interrupt (Vector number: 34) / USB D1FIFO0 Interrupt (Vector number: 35) USBR0 Interrupt (Vector number:90)

### 3.3.5 Header Files

All API calls and their supporting interface definitions are located in *r\_usb\_basic\_if.h*.

### 3.3.6 Integer Types

This project uses ANSI C99 “Exact width integer types” in order to make the code clearer and more portable. These types are defined in *stdint.h*.

### 3.3.7 Compile Setting

For compile settings, refer to chapter 7, **Configuration**.

### 3.3.8 ROM / RAM Size

The follows show ROM/RAM size of this driver.

1. RX64M, RX71M, RX65N/RX651

	Checks arguments	Does not check arguments
ROM size	34.6K bytes (Note 3)	34.2K bytes (Note 4)
RAM size	15.5K bytes	15.5K bytes

2. RX63N/RX631

	Checks arguments	Does not check arguments
ROM size	31.6K bytes (Note 3)	29.1K bytes (Note 4)
RAM size	15.2K bytes	15.2K bytes

Note:

1. ROM/RAM size for BSP is included in the above size.
2. The default option is specified in the compiler optimization option.
3. The ROM size of “Checks arguments” is the value when *USB\_CFG\_ENABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition in *r\_usb\_basic\_config.h* file.
4. The ROM size of “Does not check arguments” is the value when *USB\_CFG\_DISABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition in *r\_usb\_basic\_config.h* file.

### 3.3.9 Argument

For the structure used in the argument of API function, refer to chapter 8, **Structures**.

### 3.3.10 Adding the FIT Module to Your Project

This module must be added to each project in which it is used. Renesas recommends using “Smart Configurator” described at (1) or (3). However, “Smart Configurator” supports some RX devices. Please use the methods of (2) or (4) for unsupported RX devices.

- (1) Adding the FIT module to your project using “Smart Configurator” on e<sup>2</sup> studio

By using the “Smart Configurator” in e<sup>2</sup> studio, FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)”.

- (2) Adding the FIT module to your project using “FIT Configurator” on e<sup>2</sup> studio

By using the “FIT Configurator” in e<sup>2</sup> studio, FIT module is automatically added to your project. Refer to “Adding Firmware Integration Technology Modules to Projects (R01AN1723)”.



- (3) Adding the FIT module to your project using “Smart Configurator” on CS+

By using the “Smart Configurator Standalone version” on CS+, FIT module is automatically added to your project. Refer to “Renesas e<sup>2</sup> studio Smart Configurator User Guide (R20AN0451)”.

- (4) Adding the FIT module to your project on CS+

In CS+, please manually add FIT module to your project. Refer to “Adding Firmware Integration Technology Modules to CS+ Projects (R01AN1826)”

### 3.4 API (Application Programming Interface)

For the detail of the API function, refer to chapter 4, **API Functions**.

### 3.5 Class Request

For the processing method when this driver receives the class request, refer to **9, USB Class Requests**.

### 3.6 How to Set the Target Peripheral List (TPL)

By registering the Vendor ID (VID) and Product ID (PID) in the USB host, USB communication will only be enabled for the USB device identified with a registered VID and PID.

To register a USB device in the TPL, specify the VID and PID as a set to the macro definitions listed in Table 3-3 in the configuration file (*r\_usb\_basic\_config.h* file). The USB driver checks the TPL to make sure the VID and PID of the connected USB device are registered. If registration is confirmed, USB communication with the USB device is enabled. If the VID and PID are not registered in the TPL, USB communication is disabled.

If it is not necessary to register VID and PID in TPL, specify *USB\_NOVENDOR* and *USB\_NOPRODUCT* for the TPL definitions listed in Table 3-3. When *USB\_NOVENDOR* and *USB\_NOPRODUCT* are specified, the USB driver performs on TPL registration check, and this prevents situations from occurring in which USB communication is prevented because of the check.

**Table 3-3 TPL Definition**

Macro definition name	Description
USB_TPL_CNT	Specify the number of USB devices to be supported.
USB_TPL	Specify a VID/PID set for each USB device to be supported. (Always specify in the order of VID first, PID second.)
USB_HUB_TPL_CNT	Specify the number of USB hubs to be supported.
USB_HUB_TPL	Specify a VID/PID set for each USB hub to be supported. (Always specify in the order of VID first, PID second.)

#### == How to specify VID/PID in USB\_TPL / USB\_HUB\_TP ==

```
#define      USB_TPL      0x0011, 0x0022, 0x0033, 0x0044, 0x0055, 0x0066
                        VID      PID      VID      PID      VID      PID
                        └──┬──┘ └──┬──┘ └──┬──┘
                        USB device 1  USB device 2  USB device 3

#define      USB_HUB_TPL 0x1111, 0x2222, 0x3333, 0x4444
                        VID      PID      VID      PID
                        └──┬──┘ └──┬──┘
                        USB Hub1   USB Hub2
```

#### Example 1) Register 3 USB devices and 2 USB hubs in the TPL

```
#define      USB_CFG_TPLCNT      3
#define      USB_CFG_TPL        0x0011, 0x0022, 0x0033, 0x0044, 0x0055, 0x0066
#define      USB_CFG_HUB_TPLCNT  2
#define      USB_CFG_HUB_TPL    0x1111, 0x2222, 0x3333, 0x4444
```

#### Example 2) Register 3 USB devices (no USB hubs) in the TPL

```
#define      USB_CFG_TPLCNT      3
#define      USB_CFG_TPL        0x0011, 0x0022, 0x0033, 0x0044, 0x0055, 0x0066
#define      USB_CFG_HUB_TPLCNT  1
#define      USB_CFG_HUB_TPL    USB_NOVENDOR,USB_NOPRODUCT
```

#### Example 3) VID and PID registration not required

```
#define      USB_CFG_TPLCNT      1
#define      USB_CFG_TPL        USB_NOVENDOR,USB_NOPRODUCT
#define      USB_CFG_HUB_TPLCNT  1
```

```
#define USB_CFG_HUB_TPL USB_NOVENDOR,USB_NOPRODUCT
```

Note:

1. Set *USB\_CFG\_TPLCNT* and *USB\_CFG\_HUB\_TPLCNT* to 1, even if *USB\_NOVENDOR* and *USB\_NOPRODUCT* are specified for the TPL definitions in Table 3-3.
2. For the configuration file (*r\_usb\_basic\_config.h*), refer to chapter 7.

### 3.7 Allocation of Device Addresses

In USB Host mode, the USB driver allocates device addresses to the connected USB devices.

1. When a USB Hub is used

Device address value 1 is allocated to a USB Hub, and device address values 2 and thereafter are allocated to USB devices connected to the Hub.

2. When a USB Hub is not used

Device address value 1 is allocated to the USB device.

Note:

Device addresses are allocated in USB module units. For example, in the case of an MCU that supports multiple USBs such as RX64M, if both the USB0 module and the USB1 module are connected to USB devices, device address value 1 is allocated to each USB device.

### 3.8 Host Battery Charging (HBC)

This driver supports HBC.

HBC is the H/W control program for the target device that operates the CDP or the DCP as defined by the USB Battery Charging Specification Revision 1.2.

Processing is executed as follows according to the timing of this driver. Refer to Figure 3-1.

VBUS is driven  
Attach processing  
Detach processing

Moreover, processing is executed in coordination with the PDDETINT interrupt.

There is no necessity for control from the upper layer.

You can get the result of Change Port Detection (CPD) by calling *R\_USB\_GetInformation* function. For *R\_USB\_GetInformation* function, refer to chapter.

Note:

RX63N/RX631 does not support HBC.

The processing flow of HBC is shown Figure 3-1.

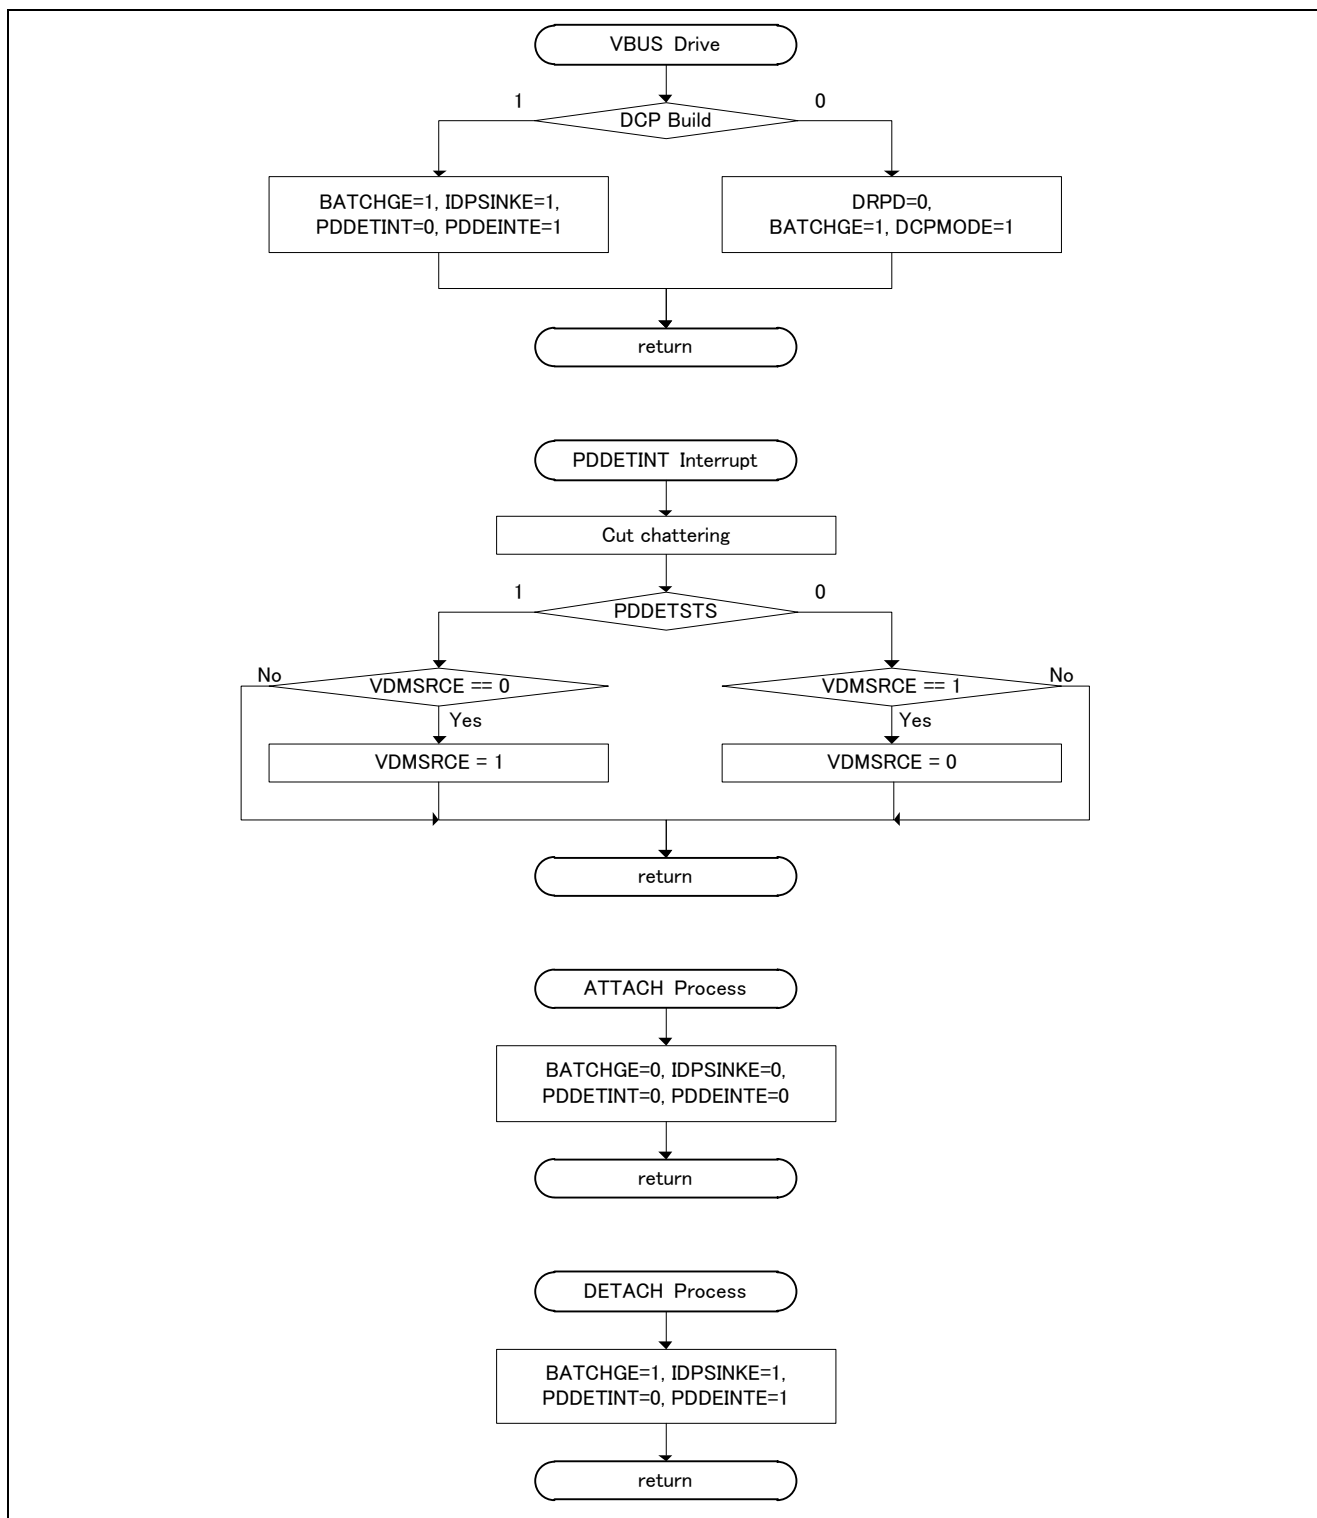


Figure 3-1 HBC processing flow

## 4. API Functions

**Table 4-1** provides a list of API functions. These APIs can be used in common for all the classes. Use the APIs below in application programs.

**Table 4-1 List of API Functions**

API	Description
R_USB_Open() (Note1)	Start the USB module
R_USB_Close() (Note1)	Stop the USB module
R_USB_GetVersion()	Get the driver version
R_USB_Read() (Note1)	Request USB data read
R_USB_Write() (Note1)	Request USB data write
R_USB_Stop() (Note1)	Stop USB data read/write processing
R_USB_Suspend() (Note1)	Request suspend
R_USB_Resume() (Note1)	Request resume
R_USB_GetEvent() (Note1)	Return USB-related completed events
R_USB_VbusSetting() (Note1)	Sets VBUS supply start/stop.
R_USB_GetInformation()	Get information on USB device.
R_USB_PipeRead() (Note1)	Request data read from specified pipe
R_USB_PipeWrite() (Note1)	Request data write to specified pipe
R_USB_PipeStop() (Note1)	Stop USB data read/write processing to specified pipe
R_USB_GetUsePipe()	Get pipe number
R_USB_GetPipeInfo()	Get pipe information

**Note:**

1. If the API of (Note 1) is executed on the same USB module by interrupt handling etc while the API of (Note 1) is executing, this USB driver may not work properly.
2. The class-specific API function other than the above API is supported in Host Mass Storage Class. Refer to the document (Document number: R01AN2026) for the class-specific API.
3. The class-specific API function other than the above API is supported in Host Human Interface Device Class. Refer to the document (Document number: R01AN2028) for the class-specific API.
4. When *USB\_CFG\_DISABLE* is specified to *USB\_CFG\_PARAM\_CHECKING* definition, the return value *USB\_ERR\_PARA* is not returned since this driver does not check the argument. Refer to chapter 7, **Configuration** for *USB\_CFG\_PARAM\_CHECKING* definition.

## 4.1 R\_USB\_Open

**Power on the USB module and initialize the USB driver. (This is a function to be used first when using the USB module.)**

### Format

```
usb_err_t      R_USB_Open(usb_ctrl_t *p_ctrl, usb_cfg_t *p_cfg)
```

### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_cfg	Pointer to usb_cfg_t structure area

### Return Value

USB_SUCCESS	Success
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Specified USB module now in use

### Description

This function applies power to the USB module specified in the argument (*p\_ctrl*).

### Reentrant

This API is only reentrant for different USB module.

### Note

1. For details concerning the *usb\_ctrl\_t* structure, see chapter **8.1, usb\_ctrl\_t structure**, and for the *usb\_cfg\_t* structure, see chapter **8.3, usb\_cfg\_t structure**.
2. Specify the number of the module (*USB\_IP0/USB\_IP1*) to be started up in member (*module*) of the *usb\_ctrl\_t* structure. Specify “*USB\_IP0*” to start up the USB0 module and “*USB\_IP1*” to start up the USB1 module. If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
3. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. Assign the device class type (see chapter **6, Device Class Types**) to the member (*type*) of the *usb\_ctrl\_t* structure. Does not assign *USB\_HCDCC* and *USB\_PCDCC* to this member (*type*).
5. In the *usb\_cfg\_t* structure member (*usb\_mode*), specify “*USB\_HOST*” to start up USB host operations and “*USB\_PERI*” to start up USB peripheral operations. If these settings are not supported by the USB module, *USB\_ERR\_PARA* will be returned.
6. Specify the USB speed (*USB\_HS / USB\_FS*) in the *usb\_ctrl\_t* structure member (*usb\_speed*). If the speed set in the member is not supported by the USB module, *USB\_ERR\_PARA* will be returned.
7. Assign a pointer to the *usb\_descriptor\_t* structure to the member (*p\_usb\_reg*) of the *usb\_cfg\_t* structure. This assignment is only effective if “*USB\_PERI*” is assigned to the member (*usb\_mode*). If “*USB\_HOST*” is assigned, then assignment to the member (*p\_usb\_reg*) is ignored.

**Examples****1. In the case of USB Host mode**

```
void usb_host_application(void)
{
    usb_err_t    err;
    usb_ctrl_t    ctrl;
    usb_cfg_t     cfg;
    :
    ctrl.module = USB_IP0;
    ctrl.type = USB_HCDC;
    cfg.usb_mode = USB_HOST;
    cfg.usb_speed = USB_HS;
    err = R_USB_Open(&ctrl, &cfg); /* Start USB module */
    if (USB_SUCCESS != err)
    {
        :
    }
    :
}
```

**2. In the case of USB Peripheral**

```
usb_descriptor_t smp_descriptor =
{
    g_device,
    g_config_f,
    g_config_h,
    g_qualifier,
    g_string
};
void usb_peri_application(void)
{
    usb_err_t    err;
    usb_ctrl_t    ctrl;
    usb_cfg_t     cfg;
    :
    ctrl.module = USB_IP1;
    ctrl.type = USB_PCDC;
    cfg.usb_mode = USB_PERI;
    cfg.usb_speed = USB_HS;
    cfg.p_usb_reg = &smp_descriptor;
    err = R_USB_Open(&ctrl, &cfg ); /* Start USB module */
    if (USB_SUCCESS != err)
    {
        :
    }
    :
}
```

## 4.2 R\_USB\_Close

### Power off USB module.

#### Format

```
usb_err_t      R_USB_Close(usb_ctrl_t *p_ctrl)
```

#### Arguments

p\_ctrl                      Pointer to usb\_ctrl\_t structure area

#### Return Value

USB_SUCCESS	Success
USB_ERR_PARA	Parameter error
USB_ERR_NOT_OPEN	USB module is not open.
USB_ERR_NG	USB module close processing failed.

#### Description

This function terminates power to the USB module specified in argument (*p\_ctrl*). USB0 module stops when *USB\_IP0* is specified to the member (*module*), USB1 module stops when *USB\_IP1* is specified to the member (*module*).

#### Reentrant

This API is only reentrant for different USB module.

#### Note

1. Specify the number of the USB module (*USB\_IP0/USB\_IP1*) to be stopped in the *usb\_ctrl\_t* structure member (*module*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
2. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.

#### Example

```
void    usr_application(void)
{
    usb_err_t    err;
    usb_ctrl_t    ctrl;
    :
    ctrl.module = USB_IP0
    err = R_USB_Close(&ctrl);
    if (USB_SUCCESS != err)
    {
        :
    }
    :
}
```



---

### 4.3 R\_USB\_GetVersion

---

#### Return API version number

##### Format

usb\_err\_t R\_USB\_GetVersion()

##### Arguments

— —

##### Return Value

Version number

##### Description

The version number of the USB driver is returned.

##### Reentrant

This API is reentrant.

##### Note

--

##### Example

```
void    usr_application( void )
{
    uint32_t    version;
    :
    version = R_USB_GetVersion();
    :
}
```

## 4.4 R\_USB\_Read

### USB data read request

#### Format

```
usb_err_t      R_USB_Read(usb_ctrl_t *p_ctrl, uint8_t *p_buf, uint32_t size)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_buf	Pointer to area that stores read data
size	Read request size

#### Return Value

USB_SUCCESS	Successfully completed (Data read request completed)
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Data receive request already in process for USB device with same device address.
USB_ERR_NG	Other error

#### Description

1. Bulk/interrupt data transfer

Requests USB data read (bulk/interrupt transfer).

The read data is stored in the area specified by argument (*p\_buf*).

After data read is completed, confirm the operation by checking the return value

(*USB\_STS\_READ\_COMPLETE*) of the *R\_USB\_GetEvent* function. The received data size is set in member (*size*) of the *usb\_ctrl\_t* structure. To figure out the size of the data when a read is complete, check the return value (*USB\_STS\_READ\_COMPLETE*) of the *R\_USB\_GetEvent* function, and then refer to the member (*size*) of the *usb\_ctrl\_t* structure.

2. Control data transfer

Refer to chapter 9, **USB Class Requests** for details.

#### Reentrant

This API is only reentrant for different USB module.

#### Note

1. This API only performs data read request processing. An application program does not wait for data read completion by using this API.
2. When *USB\_SUCCESS* is returned for the return value, it only means that a data read request was performed to the USB driver, not that the data read processing has completed. The completion of the data read can be checked by reading the return value (*USB\_STS\_READ\_COMPLETE*) of the *R\_USB\_GetEvent* function.
3. When the read data is *n* times the maximum packet size and does not meet the read request size, the USB driver assumes the data transfer is still in process and *USB\_STS\_READ\_COMPLETE* is not set as the return value of the *R\_USB\_GetEvent* function.
4. Before calling this API, assign the device class type (see chapter 6, **Device Class Types**) to the member (*type*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*) or if an unsupported device class type is assigned to the member (*type*), then *USB\_ERR\_PARA* will be the return value.
5. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
6. Do not assign a pointer to the auto variable (stack) area to the second argument (*p\_buf*). Allocate the area of the following size when using DTC/DMA transfer.
  - (1). When *USB\_CFG\_CNTMDON* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h* (When using USB/USBAA module.)

Allocate the area more than n times FIFO buffer size. For FIFO buffer size, refer to the chapter **11.4, Reference or Change of PIPEBUF Register**

- (2). When `USB_CFG_CNTMDOFF` is specified for `USB_CFG_CNTMD` definition in `r_usb_basic_config.h`.

Allocate the area n times the max packet size.

7. The size of area assigned to the second argument (`p_buf`) must be at least as large as the size specified for the third argument (`size`).
8. If 0 (zero) is assigned to one of the arguments, `USB_ERR_PARA` will be the return value.
9. In USB Host mode it is not possible to repeatedly call the `R_USB_Read` function with the same values assigned to the member (`type`) of the `usb_ctrl_t` structure. If the `R_USB_Read` function is called repeatedly, then `USB_ERR_BUSY` will be the return value. To call the `R_USB_Read` function more than once with the same values assigned to the members (`type`), first check the `USB_STS_READ_COMPLETE` return value from the `R_USB_GetEvent` function, and then call the `R_USB_Read` function.
10. In USB Peripheral mode it is not possible to repeatedly call the `R_USB_Read` function with the same value assigned to the member (`type`) of the `usb_ctrl_t` structure. If the `R_USB_Read` function is called repeatedly, then `USB_ERR_BUSY` will be the return value. To call the `R_USB_Read` function more than once with the same value assigned to the member (`type`), first check the `USB_STS_READ_COMPLETE` return value from the `R_USB_GetEvent` function, and then call the `R_USB_Read` function.
11. In Vendor Class, use the `R_USB_PipeRead` function.
12. If this API is called after assigning `USB_PCDCC`, `USB_HMSC`, `USB_PMSC`, `USB_HVND` or `USB_PVND` to the member (`type`) of the `usb_ctrl_t` structure, then `USB_ERR_PARA` will be the return value.
13. In Host Mass Storage Class, to access storage media, use the FAT (File Allocation Table) API rather than this API.
14. In the USB device is in the CONFIGURED state, this API can be called. If this API is called when the USB device is in other than the CONFIGURED state, then `USB_ERR_NG` will be the return value.

### Example

```
void usb_application( void )
{
    usb_ctrl_t    ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_WRITE_COMPLETE:
                :
                ctrl.module = USB_IP1
                ctrl.addrs = adr;
                ctrl.type = USB_HCDC;
                R_USB_Read(&ctrl, g_buf, DATA_LEN);
                :
            break;
            case USB_STS_READ_COMPLETE:
                :
            break;
            :
        }
    }
}
```

## 4.5 R\_USB\_Write

### USB data write request

#### Format

```
usb_err_t      R_USB_Write(usb_ctrl_t *p_ctrl, uint8_t *p_buf, uint32_t size)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_buf	Pointer to area that stores write data
size	Write size

#### Return Value

USB_SUCCESS	Successfully completed (Data write request completed)
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Data write request already in process for USB device with same device address.
USB_ERR_NG	Other error

#### Description

1. Bulk/Interrupt data transfer  
Requests USB data write (bulk/interrupt transfer).  
Stores write data in area specified by argument (*p\_buf*).  
Set the device class type in *usb\_ctrl\_t* structure member (*type*).  
Confirm after data write is completed by checking the return value (*USB\_STS\_WRITE\_COMPLETE*) of the *R\_USB\_GetEvent* function.  
To request the transmission of a NULL packet, assign *USB\_NULL(0)* to the third argument (*size*).
2. Control data transfer  
Refer to chapter 9, **USB Class Requests** for details.

#### Reentrant

This API is only reentrant for different USB module.

#### Note

1. This API only performs data write request processing. An application program does not wait for data write completion by using this API.
2. When *USB\_SUCCESS* is returned for the return value, it only means that a data write request was performed to the USB driver, not that the data write processing has completed. The completion of the data write can be checked by reading the return value (*USB\_STS\_WRITE\_COMPLETE*) of the *R\_USB\_GetEvent* function.
3. Before calling this API, assign the device class type (see chapter 6, Device Class Types) to the member (*type*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*) or if an unsupported device class type is assigned to the member (*type*), then *USB\_ERR\_PARA* will be the return value.
4. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
5. Do not assign a pointer to the auto variable (stack) area to the second argument (*p\_buf*).
6. If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
7. If a value other than 0 (zero) is set for the argument (*size*) and *USB\_NULL* is assigned to the argument (*p\_buf*), then *USB\_ERR\_PARA* will be the return value.
8. In USB Host mode it is not possible to repeatedly call the *R\_USB\_Write* function with the same values assigned to the member (*address*) of the *usb\_ctrl\_t* structure. If the *R\_USB\_Write* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_Write* function more than once with the same

values assigned to the members (*address*), first check the *USB\_STS\_WRITE\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_Write* function.

9. In USB Peripheral mode it is not possible to repeatedly call the *R\_USB\_Write* function with the same value assigned to the member (*type*) of the *usb\_ctrl\_t* structure. If the *R\_USB\_Write* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_Write* function more than once with the same value assigned to the member (*type*), first check the *USB\_STS\_WRITE\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_Write* function.
10. In Vendor Class, use the *R\_USB\_PipeWrite* function.
11. If this API is called after assigning *USB\_HCDC*, *USB\_HMSC*, *USB\_PMSC*, *USB\_HVND* or *USB\_PVND* to the member (*type*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
12. In Host Mass Storage Class, to access storage media, use the FAT (File Allocation Table) API rather than this API.
13. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

### Example

```
void usb_application( void )
{
    usb_ctrl_t    ctrl;
                :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_READ_COMPLETE:
                :
                ctrl.module = USB_IP0;
                ctrl.address = adr;
                ctrl.type = USB_HCDC;
                R_USB_Write(&ctrl, g_buf, size);
                :
            break;
            case USB_STS_WRITE_COMPLETE:
                :
            break;
                :
        }
    }
}
```

## 4.6 R\_USB\_Stop

### USB data read/write stop request

#### Format

usb\_err\_t                    R\_USB\_Stop(usb\_ctrl\_t \*p\_ctrl, uint16\_t type)

#### Arguments

p\_ctrl                    Pointer to usb\_ctrl\_t structure area  
type                    Receive (USB\_READ) or send (USB\_WRITE)

#### Return Value

USB\_SUCCESS    Successfully completed (stop completed)  
USB\_ERR\_PARA    Parameter error  
USB\_ERR\_NG    Other error

#### Description

This function is used to request a data read/write transfer be terminated when a data read/write transfer is performing.

To stop a data read, set *USB\_READ* as the argument (*type*); to stop a data write, specify *USB\_WRITE* as the argument (*type*).

#### Reentrant

This API is only reentrant for different USB module.

#### Note

- Before calling this API, assign the device class type to the member (*type*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*) or if an unsupported device class type is assigned to the member (*type*), then *USB\_ERR\_PARA* will be the return value.
- If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
- If *USB\_NULL* is assigned to the argument (*p\_ctrl*), then *USB\_ERR\_PARA* will be the return value.
- If *USB\_HCDCC* is assigned to the member (*type*) and *USB\_WRITE* is assigned to the 2nd argument (*type*), then *USB\_ERR\_PARA* will be the return value.
- If *USB\_PCDCC* is assigned to the member (*type*) and *USB\_READ* is assigned to the 2nd argument (*type*), then *USB\_ERR\_PARA* will be the return value.
- If something other than *USB\_READ* or *USB\_WRITE* is assigned to the third argument (*type*), then *USB\_ERR\_PARA* will be the return value.
- In USB Host mode, *USB\_ERR\_NG* will be the return value when this API can not stop the data read/write request.
- When the *R\_USB\_GetEvent* function is called after a data read/write stopping has been completed, the return value *USB\_STS\_READ\_COMPLETE/USB\_STS\_WRITE\_COMPLETE* is returned.
- If this API is called after assigning *USB\_HMSC*, *USB\_PMSC*, *USB\_HVND* or *USB\_PVND* to the member (*type*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
- In Vendor Class, use the *R\_USB\_PipeStop* function.
- Do not use this API for the Host Mass Storage Class.
- This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

**Example**

```
void usb_application( void )
{
    usb_ctrl_t    ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_DETACH:
                :
                ctrl.module = USB_IP1;
                ctrl.address = adr;
                ctrl.type = USB_HCDC;
                R_USB_Stop(&ctrl, USB_READ );    /* Receive stop */
                R_USB_Stop(&ctrl, USB_WRITE );   /* Send stop */
                :
            break;
            :
        }
    }
}
```

---

## 4.7 R\_USB\_Suspend

---

### Suspend signal transmission

#### Format

usb\_err\_t                    R\_USB\_Suspend(usb\_ctrl\_t \*p\_ctrl)

#### Arguments

p\_ctrl                    Pointer to usb\_ctrl\_t structure area

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	During a suspend request to the specified USB module, or when the USB module is already in the suspended state
USB_ERR_NG	Other error

#### Description

Sends a SUSPEND signal from the USB module assigned to the member (*module*) of the *usb\_ctrl\_t* structure.

#### Reentrant

This API is only reentrant for different USB module.

#### Note

1. This API only performs a Suspend signal transmission. An application program does not wait for Suspend signal transmission completion by using this API.
2. This API can only be used in USB host mode. If this API is used in USB Peripheral mode, then *USB\_ERR\_NG* will be the return value.
3. This API does not support the Selective Suspend function.
4. Assign the USB module to which a SUSPEND signal is transmitted to the member (*module*) of the *usb\_ctrl\_t* structure. *USB\_IP0* or *USB\_IP1* should be assigned to the member (*module*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*) or if an unsupported device class type is assigned to the member (*type*), then *USB\_ERR\_PARA* will be the return value.
5. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
6. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.



**Example**

```
void usb_host_application( void )
{
    usb_ctrl_t ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_NONE:
                :
                ctrl.module = USB_IP0;
                R_USB_Suspend(&ctrl);
                break;
            case USB_STS_SUSPEND:
                :
                break;
            :
        }
    }
}
```

---

## 4.8 R\_USB\_Resume

---

### Resume signal transmission

#### Format

usb\_err\_t                    R\_USB\_Resume(usb\_ctrl\_t \*p\_ctrl)

#### Arguments

p\_ctrl                    Pointer to usb\_ctrl\_t structure area

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Resume already requested for same device address (USB host mode only)
USB_ERR_NOT_SUSPEND	USB device is not in the SUSPEND state.

#### Description

This function sends a RESUME signal from the USB module assigned to the member (*module*) of the *usb\_ctrl\_t* structure.

After the resume request is completed, confirm the operation with the return value (*USB\_STS\_RESUME*) of the *R\_USB\_GetEvent* function

#### Reentrant

This API is only reentrant for different USB module.

#### Note

1. This API only performs a Resume signal transmission request. An application program does not wait for Resume signal transmission completion by using this API.
2. Please call this API after calling the *R\_USB\_Open* function (and before calling the *R\_USB\_Close* function).
3. This API can be used for RemoteWakeup only with HID Class in USB Peripheral mode. In this case, the USB module number is not required to be assigned to the member (*module*) of the *usb\_ctrl\_t* structure. If the peripheral device class other than *USB\_PHID* is assigned to the member (*type*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
4. Assign the USB module to which the RESUME signal is transmitted to the member (*module*) of the *usb\_ctrl\_t* structure. *USB\_IP0* or *USB\_IP1* should be assigned to the member (*module*). If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
5. This API can be called when the USB device is in the suspend state. When the API is called in any other state, *USB\_ERR\_NOT\_SUSPEND* is returned.

**Example****1. In the case of USB Host mode**

```
void    usb_host_application( void )
{
    usb_ctrl_t ctrl;
        :
    while (1)
    {
        switch (R_USB_GetEvent( &ctrl ))
        {
            :
            case USB_STS_NONE:
                :
                ctrl.module = USB_IP0;
                R_USB_Resume( &ctrl );
                :
            break;
            case USB_STS_RESUME:
                :
            break;
                :
        }
    }
}
```

**2. In the case of HID device(USB Peripheral)**

```
void    usb_peri_application( void )
{
    usb_ctrl_t ctrl;
        :
    while (1)
    {
        switch (R_USB_GetEvent( &ctrl ))
        {
            :
            case USB_STS_NONE:
                :
                R_USB_Resume(&ctrl);
                :
            break;
            case USB_STS_RESUME:
                :
            break;
                :
        }
    }
}
```

## 4.9 R\_USB\_GetEvent

### Get completed USB-related events

#### Format

usb\_err\_t R\_USB\_GetEvent(usb\_ctrl\_t \*p\_ctrl)

#### Arguments

p\_ctrl Pointer to usb\_ctrl\_t structure area

#### Return Value

-- Value of completed USB-related events

#### Description

This function obtains completed USB-related events.

In USB host mode, the device address value of the USB device that completed an event is specified in the *usb\_ctrl\_t* structure member (*address*) specified by the event's argument. In USB peripheral mode, *USB\_NULL* is specified in member (*address*).

#### Reentrant

This API is not reentrant.

#### Note

1. Please call this API after calling the *R\_USB\_Open* function (and before calling the *R\_USB\_Close* function).
2. Refer to chapter 5, **Return Value of R\_USB\_GetEvent Function** for details on the completed event value used as the API return value.
3. If there is no completed event when calling this API, then *USB\_STS\_NONE* will be the return value.
4. Please call this API in the main loop of the user application program.

#### Example

```
void usb_host_application( void )
{
    usb_ctrl_t    ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_CONFIGURED:
                :
                break;
            :
        }
    }
}
```

## 4.10 R\_USB\_VbusSetting

### VBUS Supply Start/Stop Specification

#### Format

usb\_err\_t                    R\_USB\_VbusSetting( usb\_ctrl\_t \*p\_ctrl, uint16\_t state )

#### Arguments

p\_ctrl                    Pointer to usb\_ctrl\_t structure area  
state                    VBUS supply start/stop specification

#### Return Value

USB\_SUCCESS            Successful completion (VBUS supply start/stop completed)  
USB\_ERR\_PARA           Parameter error  
USB\_ERR\_NG            Other error

#### Description

Specifies starting or stopping the VBUS supply.

#### Reentrant

This API is only reentrant for different USB module.

#### Note

1. For information on setting the VBUS output of the power source IC for the USB Host to either Low Assert or High Assert, see the setting of the *USB\_CFG\_VBUS* definition described in chapter 7, **Configuration (r\_usb\_basic\_config.h)**.
2. Assign the module number (*USB\_IP0/USB\_IP1*) to specify starting or stopping the VBUS supply to the member (*module*) of the first argument (*p\_ctrl*). If "USB\_IP0" is assigned, setting is applied to the USB0 module. If "USB\_IP1" is assigned, setting is applied to the USB1 module. If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
3. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. Assign "USB\_ON" or "USB\_OFF" to the second argument. Assign "USB\_ON" in order to start the VBUS supply, and assign "USB\_OFF" in order to stop the VBUS supply. If the value other than *USB\_ON* or *USB\_OFF* is assigned, then *USB\_ERR\_PARA* will be the return value.
5. This API is processed only in USB Host mode. If this API is called in USB Peripheral mode, then *USB\_ERR\_NG* will be the return value.

#### Example

```
void usb_host_application( void )
{
    usb_ctrl_t ctrl;
    :
    :
    ctrl.module = USB_IP0;
    R_USB_VbusSetting( &ctrl, USB_ON ); /* Start VBUS supply */
    :
    :
    ctrl.module = USB_IP0;
    R_USB_VbusSetting( &ctrl, USB_OFF ); /* Stop VBUS supply */
    :
    :
}
```

## 4.11 R\_USB\_GetInformation

### Get USB device information

#### Format

```
usb_err_t      R_USB_GetInformation(usb_ctrl_t *p_ctrl, usb_info_t *p_info)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_info	Pointer to usb_info_t structure area

#### Return Value

USB_SUCCESS	Successful completion (VBUS supply start/stop completed)
USB_ERR_PARA	Parameter error

#### Description

This function obtains completed USB-related events.

For information to be obtained, see chapter 8.6, **usb\_info\_t structure**.

#### Reentrant

This API is reentrant.

#### Note

1. Call this API after calling the *R\_USB\_Open* function (and before calling the *R\_USB\_Close* function).
2. In USB Host mode, in order to identify the USB device to obtain information, assign the USB module number (*USB\_IP0/USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
3. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. In USB Peripheral mode, assign *USB\_NULL* to the first argument (*p\_ctrl*).
5. In USB Host mode, do not assign *USB\_NULL* to the first argument (*p\_ctrl*). If *USB\_NULL* is assigned, then *USB\_ERR\_PARA* will be the return value.
6. Do not assign *USB\_NULL* to the second argument (*p\_info*). If *USB\_NULL* is assigned, then *USB\_ERR\_PARA* will be the return value.

#### Example

##### 1. In the case of USB Host mode

```
void usb_host_application( void )
{
    usb_ctrl_t ctrl;
    usb_info_t info;

    :
    ctrl.module = USB_IP0;
    ctrl.address = adr;
    R_USB_GetInformation( &ctrl, &info );
    :
}
```

##### 2. In the case of USB Peripheral mode

```
void usb_peri_application( void )
{
```

```
usb_ctrl_t ctrl;  
usb_info_t info;  
:  
R_USB_GetInformation( (usb_ctrl_t *)USB_NULL, &info );  
:  
}
```

## 4.12 R\_USB\_PipeRead

### Request data read via specified pipe

#### Format

```
usb_err_t      R_USB_PipeRead(usb_ctrl_t *p_ctrl, uint8_t *p_buf, uint32_t size)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_buf	Pointer to area that stores data
size	Read request size

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Specified pipe now handling data receive/send request
USB_ERR_NG	Other error

#### Description

This function requests a data read (bulk/interrupt transfer) via the pipe specified in the argument.

The read data is stored in the area specified in the argument (*p\_buf*).

After the data read is completed, confirm the operation with the *R\_USB\_GetEvent* function return value (*USB\_STS\_READ\_COMPLETE*). To figure out the size of the data when a read is complete, check the return value (*USB\_STS\_READ\_COMPLETE*) of the *R\_USB\_GetEvent* function, and then refer to the member (*size*) of the *usb\_ctrl\_t* structure.

#### Reentrant

This API is reentrant for different USB PIPE

#### Note

1. This API only performs data read request processing. An application program does not wait for data read completion by using this API.
2. When *USB\_SUCCESS* is returned for the return value, it only means that a data read request was performed to the USB driver, not that the data read processing has completed. The completion of the data read can be checked by reading the return value (*USB\_STS\_READ\_COMPLETE*) of the *R\_USB\_GetEvent* function.
3. When the read data is *n* times the max packet size and does not meet the read request size, the USB driver assumes the data transfer is still in process and *USB\_STS\_READ\_COMPLETE* is not set as the return value of the *R\_USB\_GetEvent* function.
4. Before calling this API, assign the PIPE number (*USB\_PIPE1* to *USB\_PIPE9*) to be used to the member (*pipe*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
5. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
6. If something other than *USB\_PIPE1* through *USB\_PIPE9* is assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
7. Do not assign a pointer to the auto variable (stack) area to the second argument (*p\_buf*).
8. The size of area assigned to the second argument (*p\_buf*) must be at least as large as the size specified for the third argument (*size*). Allocate the area of the following size when using DTC/DMA transfer.
  - (1). When *USB\_CFG\_CNTMDON* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h* (When using USB/USBAA module.)



Allocate the area more than n times FIFO buffer size. For FIFO buffer size, refer to the chapter **11.4, Reference or Change of PIPEBUF Register**

- (2). When *USB\_CFG\_CNTMDOFF* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h*.

Allocate the area n times the max packet size.

9. If 0 (zero) is assigned to one of the arguments, then *USB\_ERR\_PARA* will be the return value.
10. It is not possible to repeatedly call the *R\_USB\_PipeRead* function with the same value assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure. If the *R\_USB\_PipeRead* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_PipeRead* function more than once with the same value assigned to the member (*pipe*), first check the *USB\_STS\_READ\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_PipeRead* function.
11. In CDC/HID Class, to perform a Bulk/Interrupt transfer, use the *R\_USB\_Read* function rather than this API. With Host Mass Storage Class, to perform data access to the MSC device, use the FAT (File Allocation Table) API rather than this API.
12. Assign nothing to the member (*type*) of the *usb\_ctrl\_t* structure. Even if the device class type or something is assigned to the member (*type*), it is ignored.
13. To transfer the data for a Control transfer, use the *R\_USB\_Read* function rather than this API.
14. Enable one of *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition when using this API. If this API is used when these definitions are not enabled, *USB\_ERR\_NG* is returned. For *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition, refer to chapter **7, Configuration**.
15. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

### Example

```
void usb_application( void )
{
    usb_ctrl_t ctrl;
        :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_WRITE_COMPLETE:
                :
                ctrl.module = USB_IP1;
                ctrl.pipe = USB_PIPE1;
                R_USB_PipeRead(&ctrl, buf, size);
                :
            break;
            case USB_STS_READ_COMPLETE:
                :
            break;
                :
        }
    }
}
```

## 4.13 R\_USB\_PipeWrite

### Request data write to specified pipe

#### Format

```
usb_err_t      R_USB_PipeWrite(usb_ctrl_t *p_ctrl, uint8_t *p_buf, uint32_t size)
```

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_buf	Pointer to area that stores data
size	Write request size

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Specified pipe now handling data receive/send request
USB_ERR_NG	Other error

#### Description

This function requests a data write (bulk/interrupt transfer).

The write data is stored in the area specified in the argument (*p\_buf*).

After data write is completed, confirm the operation with the return value (*USB\_STS\_WRITE\_COMPLETE*) of the *R\_USB\_GetEvent* function.

To request the transmission of a NULL packet, assign *USB\_NULL* (0) to the third argument (*size*).

#### Reentrant

This API is reentrant for different USB PIPE

#### Note

1. This API only performs data write request processing. An application program does not wait for data write completion by using this API.
2. When *USB\_SUCCESS* is returned for the return value, it only means that a data write request was performed to the USB driver, not that the data write processing has completed. The completion of the data write can be checked by reading the return value (*USB\_STS\_WRITE\_COMPLETE*) of the *R\_USB\_GetEvent* function.
3. Before calling this API, assign the PIPE number (*USB\_PIPE1* to *USB\_PIPE9*) to be used to the member (*pipe*) of the *usb\_ctrl\_t* structure. In USB Host mode, in order to identify the USB device to be accessed, assign the USB module number (*USB\_IP0* or *USB\_IP1*) to the member (*module*), and assign the device address to the member (*address*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
4. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
5. If something other than *USB\_PIPE1* through *USB\_PIPE9* is assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
6. Do not assign a pointer to the auto variable (stack) area to the second argument (*p\_buf*).
7. If 0 (zero) is assigned to the argument (*p\_ctrl* or *p\_buf*), then *USB\_ERR\_PARA* will be the return value.
8. It is not possible to repeatedly call the *R\_USB\_PipeWrite* function with the same value assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure. If the *R\_USB\_PipeWrite* function is called repeatedly, then *USB\_ERR\_BUSY* will be the return value. To call the *R\_USB\_PipeWrite* function more than once with the same value assigned to the member (*pipe*), first check the *USB\_STS\_WRITE\_COMPLETE* return value from the *R\_USB\_GetEvent* function, and then call the *R\_USB\_PipeWrite* function.

9. In CDC/HID Class, to perform a Bulk/Interrupt transfer, use the *R\_USB\_Write* function rather than this API. In Host Mass Storage Class, to perform data access to the MSC device, use the FAT (File Allocation Table) API rather than this API.
10. Assign nothing to the member (*type*) of the *usb\_ctrl\_t* structure. Even if the device class type or something is assigned to the member (*type*), it is ignored.
11. To transfer the data for a Control transfer, use the *R\_USB\_Write* function rather than this API.
12. Enable one of *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition when using this API. If this API is used when these definitions are not enabled, *USB\_ERR\_NG* is returned. For *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition, refer to chapter 7, **Configuration**.
13. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

**Example**

```
void usb_application( void )
{
    usb_ctrl_t ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_READ_COMPLETE:
                :
                ctrl.moudle = USB_IP0;
                ctrl.pipe = USB_PIPE2;
                R_USB_PipeWrite(&ctrl, g_buf, size);
                :
            break;
            case USB_STS_WRITE_COMPLETE:
                :
            break;
            :
        }
    }
}
```

---

## 4.14 R\_USB\_PipeStop

---

### Stop data read/write via specified pipe

#### Format

usb\_err\_t                    R\_USB\_PipeStop(usb\_ctrl\_t \*p\_ctrl)

#### Arguments

p\_ctrl                    Pointer to usb\_ctrl\_t structure area

#### Return Value

USB_SUCCESS	Successfully completed (stop request completed)
USB_ERR_PARA	Parameter error
USB_ERR_BUSY	Stop request already in process for USB device with same device address.
USB_ERR_NG	Other error

#### Description

This function is used to terminate a data read/write operation.

#### Reentrant

This API is reentrant for different USB PIPE

#### Note

1. Before calling this API, specify the selected pipe number (*USB\_PIPE0* to *USB\_PIPE9*) in the *usb\_ctrl\_t* member (*pipe*). When using two USB modules in the USB host mode, also specify the number of the selected USB module (*USB\_IP0/USB\_IP1*) in the member (*module*). If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value. In USB Peripheral mode, no assignment to the members (*address* and *module*) is required. If assignment is performed, it is ignored.
2. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
3. If something other than *USB\_PIPE1* through *USB\_PIPE9* is assigned to the member (*pipe*) of the *usb\_ctrl\_t* structure, then *USB\_ERR\_PARA* will be the return value.
4. In USB Host mode, *USB\_ERR\_NG* will be the return value when this API can not stop the data read/write request.
5. When the *R\_USB\_GetEvent* function is called after a data read/write stopping has been completed, the return value *USB\_STS\_READ\_COMPLETE/USB\_STS\_WRITE\_COMPLETE* is returned.
6. Assign nothing to the member (*type*) of the *usb\_ctrl\_t* structure. Even if the device class type or something is assigned to the member (*type*), it is ignored.
7. Enable one of *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition when using this API. If this API is used when these definitions are not enabled, *USB\_ERR\_NG* is returned. For *USB\_CFG\_HVND\_USB* or *USB\_CFG\_PVND\_USE* definition, refer to chapter 7, **Configuration**.
8. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

**Example**

```
void usb_application( void )
{
    usb_ctrl_t ctrl;
    :
    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_DETACH:
                :
                ctrl.module = USB_IP0;
                ctrl.pipe = USB_PIPE1;
                R_USB_PipeStop( &ctrl );
                :
            break;
            :
        }
    }
}
```

## 4.15 R\_USB\_GetUsePipe

### Get used pipe number from bit map

#### Format

```
usb_err_t      R_USB_GetUsePipe(usb_ctrl_t *p_ctrl, uint16_t *p_pipe)
```

#### Arguments

p\_ctrl                      Pointer to usb\_ctrl\_t structure area  
p\_pipe                      Pointer to area that stores the selected pipe number (bit map information)

#### Return Value

USB\_SUCCESS      Successfully completed  
USB\_ERR\_PARA      Parameter error  
USB\_ERR\_NG        Other error

#### Description

Get the selected pipe number (number of the pipe that has completed initialization) via bit map information. The bit map information is stored in the area specified in argument (*p\_pipe*). Based on the information (*module* member and *address* member) assigned to the *usb\_ctrl\_t* structure, obtains the PIPE information of that USB device.

The relationship between the pipe number specified in the bit map information and the bit position is shown below.

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
—	—	—	—	—	—	PIPE9	PIPE8	PIPE7	PIPE6	PIPE5	PIPE4	PIPE3	PIPE2	PIPE1	PIPE0
0	0	0	0	0	0	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1	1

0:Not used, 1: Used

For example, when PIPE1, PIPE2, and PIPE8 are used, the value “0x0107” is set in the area specified in argument (*p\_pipe*).

#### Reentrant

This API is reentrant.

#### Note

1. In USB Host mode, before calling this API, assign the device address of the USB device whose Pipe information is to be obtained, and the USB module number (*USB\_IP0/USB\_IP1*) connected to that USB device, to the module (*address* and *module*) of the *usb\_ctrl\_t* structure. If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
2. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
3. In USB Peripheral mode, assign *USB\_NULL* to the first argument (*p\_ctrl*). In USB Host mode, does not assign *USB\_NULL* to the first argument (*p\_ctrl*). If *USB\_NULL* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. Bit map information b0(PIPE0) is always set to "1".
5. This API can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.

**Example****1. In the case of USB Host mode**

```

void usb_application( void )
{
    uint16_t usepipe;
    usb_ctrl_t ctrl;

    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_CONFIGURED:
                :
                ctrl.module = USB_IP0;
                ctrl.address = adr;
                R_USB_GetUsePipe(&ctrl, &usepipe);
                :
            break;
            :
        }
    }
}

```

**2. In the case of USB Peripheral mode**

```

void usb_application( void )
{
    uint16_t usepipe;
    usb_ctrl_t ctrl;

    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_CONFIGURED:
                :
                R_USB_GetUsePipe((usb_ctrl_t *)USB_NULL, &usepipe);
                :
            break;
            :
        }
    }
}

```

---

## 4.16 R\_USB\_GetPipeInfo

---

### Get pipe information for specified pipe

#### Format

usb\_err\_t                    R\_USB\_GetPipeInfo(usb\_ctrl\_t \*p\_ctrl, usb\_pipe\_t \*p\_info)

#### Arguments

p_ctrl	Pointer to usb_ctrl_t structure area
p_info	Pointer to usb_pipe_t structure area

#### Return Value

USB_SUCCESS	Successfully completed
USB_ERR_PARA	Parameter error
USB_ERR_NG	Other error

#### Description

This function gets the following pipe information regarding the pipe specified in the argument (*p\_ctrl*) member (*pipe*): endpoint number, transfer type, transfer direction and maximum packet size. The obtained pipe information is stored in the area specified in the argument (*p\_info*).

#### Reentrant

This API is reentrant.

#### Note

1. Before calling this API, specify the pipe number (*USB\_PIPE1* to *USB\_PIPE9*) in the *usb\_ctrl\_t* structure member (*pipe*). When using two USB modules in the USB host mode, also specify the USB module number in the member (*module*).
2. In USB Host mode, before calling this API, assign the device address of the USB device whose Pipe information is to be obtained, and the USB module number (*USB\_IP0/USB\_IP1*) connected to that USB device, to the members (*address* and *module*) of the *usb\_ctrl\_t* structure. If something other than *USB\_IP0* or *USB\_IP1* is assigned to the member (*module*), then *USB\_ERR\_PARA* will be the return value.
3. If the MCU being used only supports one USB module, then do not assign *USB\_IP1* to the member (*module*). If *USB\_IP1* is assigned, then *USB\_ERR\_PARA* will be the return value.
4. In USB Peripheral mode, no assignment to the members (*address* and *module*) is required.
5. Refer to chapter 8.5, **usb\_pipe\_t structure** for details on the *usb\_pipe\_t* structure.
6. This function can be called when the USB device is in the configured state. When the API is called in any other state, *USB\_ERR\_NG* is returned.



**Example**

```
void usb_host_application( void )
{
    usb_pipe_t info;
    usb_ctrl_t ctrl;

    while (1)
    {
        switch (R_USB_GetEvent(&ctrl))
        {
            :
            case USB_STS_CONFIGURED:
                :
                ctrl.pipe = USB_PIPE3;
                ctrl.module = USB_IP1;
                ctrl.address= address;
                R_USB_GetPipeInfo( &ctrl, &info );
                :
            break;
            :
        }
    }
}
```

## 5. Return Value of R\_USB\_GetEvent Function

The return values for the *R\_USB\_GetEvent* function are listed below. Make sure you describe a program in the application program to be triggered by each return value from the *R\_USB\_GetEvent* function.

Return Value	Description	Host	Peri
USB_STS_DEFAULT	USB device has transitioned to default state.	×	○
USB_STS_CONFIGURED	USB device has transitioned to configured state.	○	○
USB_STS_SUSPEND	USB device has transitioned to suspend state.	×	○
USB_STS_RESUME	USB device has returned from suspend state.	○	○
USB_STS_DETACH	USB device has been detached from USB host.	○	○
USB_STS_REQUEST	USB device received USB request (Setup).	×	○
USB_STS_REQUEST_COMPLETE	USB request data transfer/receive is complete; device has transitioned to status stage.	○	○
USB_STS_READ_COMPLETE	USB data read processing is complete.	○	○
USB_STS_WRITE_COMPLETE	USB data write processing is complete.	○	○
USB_STS_BC	Attachment of USB device that supports battery charging function detected.	○	×
USB_STS_OVERCURRENT	Overcurrent detected.	○	×
USB_STS_NOT_SUPPORT	Unsupported USB device has been connected.	○	×
USB_STS_NONE	No USB-related events.	○	○

### 5.1 USB\_STS\_DEFAULT

When the *R\_USB\_GetEvent* function is called after the USB device has transitioned to the default state, the function sends *USB\_STS\_DEFAULT* as the return value.

### 5.2 USB\_STS\_CONFIGURED

When the *R\_USB\_GetEvent* function is called after the USB device has transitioned to the configured state, the function sends *USB\_STS\_CONFIGURED* as the return value. In USB host mode, information is also set in the following *usb\_ctrl\_t* structure member.

- module : The module number of the USB module that has transitioned to the Configured state (USB Host mode only).
- type : Device class type (USB host mode only) when USB device has transitioned to configured state.
- address : Device address (USB host mode only) when USB device has transitioned to configured state.

### 5.3 USB\_STS\_SUSPEND

When the *R\_USB\_GetEvent* function is called after the USB device has transitioned to the suspend state, the function sends *USB\_STS\_SUSPEND* as the return value.

### 5.4 USB\_STS\_RESUME

When the *R\_USB\_GetEvent* function is called after USB device in the suspend state resumes by the resume signal, the function sends *USB\_STS\_RESUME* as the return value.

Note:

In USB host mode, when the *R\_USB\_GetEvent* function is called after resuming by RemoteWakeUp signal from HID device, the function sends *USB\_STS\_RESUME* as the return value.

### 5.5 USB\_STS\_DETACH

When the *R\_USB\_GetEvent* function is called after the USB device has been detached from the USB host, the function sends *USB\_STS\_DETACH* as the return value. In USB host mode, information is also set in the following *usb\_ctrl\_t* structure member.

- module : USB module number of detached USB module (in USB host mode only)
- address : Device address of the detached USB device (in USB host mode only)

## 5.6 USB\_STS\_REQUEST

When the *R\_USB\_GetEvent* function is called after the USB device has received a USB request (Setup), the function sends *USB\_STS\_REQUEST* as the return value. Information is also set in the following *usb\_ctrl\_t* structure member.

setup : Received USB request information (8 bytes)

Note:

1. When a request has been received for support of the no-data control status stage, even if the *R\_USB\_GetEvent* function is called, *USB\_STS\_REQUEST\_COMPLETE* is sent as the return value instead of *USB\_STS\_REQUEST*.
2. For more details on USB request information (8 bytes) stored in member (*setup*), refer to chapter 8.2, **usb\_setup\_t structure**.

## 5.7 USB\_STS\_REQUEST\_COMPLETE

After the status stage of a control transfer is complete and transition to the idle stage has occurred, if the *R\_USB\_GetEvent* function is called, then *USB\_STS\_REQUEST\_COMPLETE* will be the return value. In addition to this, the following member of the *usb\_ctrl\_t* structure also has information.

module : USB module number of completed the request (in USB host mode only)  
 address : Device address of USB device of completed the request (in USB host mode only)  
 status : Sets either USB\_ACK / USB\_STALL

Note:

When a request has been received for support of the no-data control status stage, USB request information (8 bytes) is stored in the *usb\_ctrl\_t* structure member (*setup*). For more details on USB request information (8 bytes) stored in member (*setup*), refer to chapter 8.2, **usb\_setup\_t structure**.

## 5.8 USB\_STS\_READ\_COMPLETE

When the *R\_USB\_GetEvent* function is called after a data read has been completed in the *R\_USB\_Read* function, *USB\_STS\_READ\_COMPLETE* is sent as the return value. Information is also set in the following *usb\_ctrl\_t* structure member.

module : USB module number of completed data read (in USB host mode only)  
 address : Device address of USB device of completed data read (in USB host mode only)  
 type : Device class type of completed data read (only set when using *R\_USB\_Read* function)  
 size : Size of read data  
 pipe : Pipe number of completed data read  
 status : Read completion error information

Note:

1. In USB host mode, device address of USB device of completed data read is set in the member (*address*) and the USB module number (*USB\_IP0 / USB\_IP1*) of the connected USB device is set in the member (*module*).
2. In the case of the *R\_USB\_PipeRead* function, the member (*pipe*) has the PIPE number (*USB\_PIPE1* to *USB\_PIPE9*) for which data read is completed. In the case of the *R\_USB\_Read* function, *USB\_NULL* is set to the member (*pipe*).
3. For details on device class type, refer to chapter 6, **Device Class Types**.
4. The member (*status*) has the read completion error information. The error information set to this member is as follows.

USB\_SUCCESS : Data read successfully completed  
 USB\_ERR\_OVER : Received data size over  
 USB\_ERR\_SHORT : Received data size short  
 USB\_ERR\_NG : Data reception failed

- (1). Even if the reception request size is less than  $\text{MaxPacketSize} \times n$ , if  $\text{MaxPacketSize} \times n$  bytes of data are received, then *USB\_ERR\_OVER* is set.

For example, if `MaxPacketSize` is 64 bytes, the specified reception request size is 510 bytes (less than `MaxPacketSize × n`), and the actual received data size is 512 bytes (`MaxPacketSize × n`), then `USB_ERR_OVER` is set.

- (2). If the reception request size is less than `MaxPacketSize × n` and the actual received data size is less than this reception request size, then `USB_ERR_SHORT` is set.

For example, if `MaxPacketSize` is 64 bytes, the specified reception request size is 510 bytes, and the actual received data size is 509 bytes, then `USB_ERR_SHORT` is set.

- (3). The read data size is set in the member *size* when the read completion error information is `USB_SUCCESS` or `USB_ERR_SHORT`.

## 5.9 USB\_STS\_WRITE\_COMPLETE

When the `R_USB_GetEvent` function is called after a data write has been completed in the `R_USB_Write` function, `USB_STS_WRITE_COMPLETE` is sent as the return value. Information is also set in the following `usb_ctrl_t` structure member.

module	:	USB module number of completed data write (in USB host mode only)
address	:	Device address of USB device of completed data write (in USB host mode only)
type	:	Device class type of completed data write (only set when using <code>R_USB_Write</code> function)
pipe	:	Pipe number of completed data write
status	:	Write completion error information

Note:

- For `R_USB_Write` function: class type is set in the `usb_ctrl_t` structure member (*type*) and `USB_NULL` is set in the member (*pipe*).
- In the case of `R_USB_PipeWrite` function, the member (*pipe*) has the PIPE number (`USB_PIPE1` to `USB_PIPE9`) for which data write has been completed. In the case of the `R_USB_Write` function, `USB_NULL` is set to the member (*pipe*).
- For details on device class type, refer to chapter 6, **Device Class Types**.
- The member (*status*) has the write completion error information. The error information set to this member is as follows.

<code>USB_SUCCESS</code>	:	Data write successfully completed
<code>USB_ERR_NG</code>	:	Data transmission failed

## 5.10 USB\_STS\_BC

If the `R_USB_GetEvent` function is called after connecting to the USB device/USB Host that supports the Battery Charging function is detected, then `USB_STS_BC` will be the return value. Information is also set in the following `usb_ctrl_t` structure member.

module	:	USB module which USB device supports Battery Charging function is connected to (USB Host mode only)
--------	---	---

## 5.11 USB\_STS\_OVERCURRENT

In USB Host mode, if the `R_USB_GetEvent` function is called after overcurrent is detected, then `USB_STS_OVERCURRENT` will be the return value. Information is also set in the following `usb_ctrl_t` structure member.

module	:	USB module number of detected overcurrent ( <code>USB_IP0</code> / <code>USB_IP1</code> )
--------	---	---

## 5.12 USB\_STS\_NOT\_SUPPORT

In USB Host mode, if the `R_USB_GetEvent` function is called after an unsupported USB device is connected, then `USB_STS_NOT_SUPPORT` will be the return value.

### 5.13 USB\_STS\_NONE

When the *R\_USB\_GetEvent* function is called in the “no USB-related event” status, *USB\_STS\_NONE* is sent as the return value. Information is also set in the following *usb\_ctrl\_t* structure member.

status : USB device status

## 6. Device Class Types

The device class types assigned to the member(*type*) of the *usb\_ctrl\_t* and *usb\_info\_t* structures are as follows. Please specify the device class supported by your system.

Device class type	Description
USB_HCDC	Host Communication Device Class
USB_HCDCC	Host Communication Device Class (Control Class)
USB_HHID	Host Human Interface Device Class
USB_HMSC	Host Mass Storage Device Class
USB_PCDC	Peripheral Communication Device Class
USB_PCDCC	Peripheral Communication Device Class (Control Class)
USB_PHID	Peripheral Human Interface Device Class
USB_PMSC	Peripheral Mass Storage Device Class
USB_HVNDR	Host Vendor Class
USB_PVNDR	Peripheral Vendor Class

Note:

1. Host Communication Device Class: When transmitting data in a bulk transfer, specify *USB\_HCDC* in the *usb\_ctrl\_t* structure member (*type*). When transmitting data in an interrupt transfer, specify *USB\_HCDC* in the *usb\_ctrl\_t* structure member (*type*).
2. Peripheral Communication Device Class: When transmitting data in a bulk transfer, specify *USB\_PCDC* in the *usb\_ctrl\_t* structure member (*type*). When transmitting data in an interrupt transfer, specify *USB\_PCDCC* in the *usb\_ctrl\_t* structure member (*type*).
3. For an application program, do not assign *USB\_HMSC*, *USB\_PMSC*, *USB\_HVND*, and *USB\_PVND* to the member (*type*) of the *usb\_ctrl\_t* structure.

## 7. Configuration (r\_usb\_basic\_config.h)

### 7.1 USB Host and Peripheral Common Configurations

Perform settings for the definitions below in both USB Host and USB Peripheral modes.

#### 1. USB operating mode setting

Set the operating mode (Host/Peripheral) of the USB module for the definition of *USB\_CFG\_MODE*.

##### (1). USB Host mode

Set *USB\_CFG\_HOST* for the definition of *USB\_CFG\_MODE*.

```
#define USB_CFG_MODE USB_CFG_HOST
```

##### (2). USB Peripheral mode

Set *USB\_CFG\_PERI* for the definition of *USB\_CFG\_MODE*.

```
#define USB_CFG_MODE USB_CFG_PERI
```

#### 2. Argument check setting

Specify whether to perform argument checking for all of the APIs listed in chapter 4, **API Functions**.

```
#define USB_CFG_PARAM_CHECKING USB_CFG_ENABLE // Checks arguments.
#define USB_CFG_PARAM_CHECKING USB_CFG_DISABLE // Does not check arguments.
```

#### 3. Device class setting

Enable the definition of the USB driver to be used among the definitions below.

```
#define USB_CFG_HCDC_USE // Host Communication Device Class
#define USB_CFG_HHID_USE // Host Human Interface Device Class
#define USB_CFG_HMSC_USE // Host Mass Storage Class
#define USB_CFG_HVNDR_USE // Host Vendor Class
#define USB_CFG_PCDC_USE // Peripheral Communication Device Class
#define USB_CFG_PHID_USE // Peripheral Human Interface Device Class
#define USB_CFG_PMSC_USE // Peripheral Mass Storage Class
#define USB_CFG_PVNDR_USE // Peripheral Vendor Class
```

#### 4. DTC use setting

Specify whether to use the DTC.

```
#define USB_CFG_DTC USB_CFG_ENABLE // Uses DTC
#define USB_CFG_DTC USB_CFG_DISABLE // Does not use DTC
```

Note:

If *USB\_CFG\_ENABLE* is set for the definition of *USB\_CFG\_DTC*, be sure to set *USB\_CFG\_DISABLE* for the definition of *USB\_CFG\_DMA* in 5 below.

#### 5. DMA use setting

Specify whether to use the DMA.

```
#define USB_CFG_DMA USB_CFG_ENABLE // Uses DMA.
#define USB_CFG_DMA USB_CFG_DISABLE // Does not use DMA.
```

Note:

- (1). If *USB\_CFG\_ENABLE* is set for the definition of *USB\_CFG\_DMA*, be sure to set *USB\_CFG\_DISABLE* for the definition of *USB\_CFG\_DTC* in 4 above.
- (2). If *USB\_CFG\_ENABLE* is set for the definition of *USB\_CFG\_DMA*, set the DMA Channel number for the definition in 6 below.

#### 6. DMA Channel setting

If *USB\_CFG\_ENABLE* is set in 5 above, set the DMA Channel number to be used.

```
#define    USB_CFG_USB0_DMA_TX    DMA Channel number    // Transmission setting for
                                         USB0 module
#define    USB_CFG_USB0_DMA_RX    DMA Channel number    // Transmission setting for
                                         USB0 module
#define    USB_CFG_USB1_DMA_TX    DMA Channel number    // Transmission setting for
                                         USB1 module
#define    USB_CFG_USB1_DMA_RX    DMA Channel number    // Transmission setting for
                                         USB1 module
```

**Note:**

- (1). Set one of the DMA channel numbers from *USB\_CFG\_CH0* to *USB\_CFG\_CH7*. Do not set the same DMA Channel number.
- (2). If DMA transfer is not used, set *USB\_CFG\_NOUSE* as the DMA Channel number.
- (3). Be sure to specify the different DMA channel number to DMA sending and receiving when using USB Host Mass Storage class.

The following is the specifying example.

- a. When using the DMA transfer for DMA sending and receiving by using USB0 module

```
#define    USB_CFG_USB0_DMA_TX    USB_CFG_CH0
#define    USB_CFG_USB0_DMA_RX    USB_CFG_CH3
```

**Note:**

Be sure to specify USB PIPE1 and USB PIPE2 for DMA transfer.

- b. When using DMA for data sending and not using DMA for data receiving using USB1 module

```
#define    USB_CFG_USB1_DMA_TX    USB_CFG_CH0
```

**Note:**

Specify the one of USB PIPE1 or USB PIPE2 for the sending USB PIPE (DMA transfer) and specify the one of USB\_PIPE3, USB\_PIPE4 or USB\_PIPE5 for the receiving USB PIPE.

- c. When using DMA for data sending and not using DMA for data receiving using USB0 module, and, when using DMA for data receiving and not using DMA for data sending using USB1 module.

```
#define    USB_CFG_USB0_DMA_TX    USB_CFG_CH1
#define    USB_CFG_USB1_DMA_RX    USB_CFG_CH2
```

**Note:**

- a) In USB0 module, specify the one of USB PIPE1 or USB PIPE2 for the sending USB PIPE (DMA transfer) and specify the one of USB\_PIPE3, USB\_PIPE4 or USB\_PIPE5 for the receiving USB PIPE.
- b) In USB1 module, specify the one of USB PIPE1 or USB PIPE2 for the receiving USB PIPE (DMA transfer) and specify the one of USB\_PIPE3, USB\_PIPE4 or USB\_PIPE5 for the sending USB PIPE.

**7. Setting Battery Charging (BC) function**

Set the Battery Charging function to be enabled or disabled as the following definition. Set *USB\_CFG\_ENABLE* as the definition below in order to use the Battery Charging function.

```
#define    USB_CFG_BC    USB_CFG_ENABLE    // Uses BC function.
#define    USB_CFG_BC    USB_CFG_DISABLE    // Does not use BC function.
```

**Note:**

In the case of a USB module other than USBAA/USBA module, this definition is ignored.

**8. Endian setting**

Specify the Endian type for the definition below.

```
#define    USB_CFG_ENDIAN    USB_CFG_LITTLE    // Little Endian
#define    USB_CFG_ENDIAN    USB_CFG_BIG    // Big Endian
```

**9. PLL clock frequency setting**



Set the PLL clock source frequency for the definition below.

```
#define USB_CFG_CLKSEL USB_CFG_24MHZ // Set to 24 MHz
#define USB_CFG_CLKSEL USB_CFG_20MHZ // Set to 20 MHz
#define USB_CFG_CLKSEL USB_CFG_OTHER // Set to other than 24/20 MHz
```

Note:

- a. In the case of a USB module other than USBAA/USBA module, this definition is ignored.
- b. The USBAA or USBA module is a USB module used in the RX71M or RX64M.
- c. To input a clock other than a 24-MHz or 20-MHz clock to the XTAL pin, set *USB\_CFG\_OTHER* for the definition of *USB\_CFG\_CLKSEL*. If *USB\_CFG\_OTHER* is set, the USBAA/USBA module operates in Classic (CL) only mode. For information on CL only mode, refer to the RX71M/RX64M hardware manual.

#### 10. CPU bus wait setting

Assign the value to be set for the BUSWAIT register in the USBAA/USBA module as the definition of *USB\_CFG\_BUSWAIT*.

```
#define USB_CFG_BUSWAIT 7 // Set to 7 wait cycles
```

Note:

- (1). For the calculation of the value to be set for *USB\_CFG\_BUSWAIT*, refer to the chapter of the BUSWAIT register in the RX71M/RX64M hardware manual.
- (2). With regard to the USB module other than the USBAA/USBA module, this definition is ignored.
- (3). The USBAA or USBA module is a USB module used in the RX71M or RX64M.

#### 11. Interrupt Priority Level setting

Assign the interrupt priority level of the interrupt related to USB for *USB\_CFG\_INTERRUPT\_PRIORITY* definition.

```
#define USB_CFG_INTERRUPT_PRIORITY 3 // 1(low) – 15(high)
```

## 7.2 Settings in USB Host Mode

To make a USB module to work as a USB Host, set the definitions below according to the system to be used.

#### 1. Setting power source IC for USB Host

Set the VBUS output of the power source IC for the USB Host being used to either Low Assert or High Assert. For Low Assert, set *USB\_CFG\_LOW* as the definition below, and for High Assert, set *USB\_CFG\_HIGH* as the definition below.

```
#define USB_CFG_VBUS USB_CFG_HIGH // High Assert
#define USB_CFG_VBUS USB_CFG_LOW // Low Assert
```

#### 2. Setting USB port operation when using Battery Charging (BC) function

Set the Dedicated Charging Port (DCP) to be enabled or disabled as the following definition. If the BC function is being implemented as the Dedicated Charging Port (DCP), then set *USB\_CFG\_ENABLE* as the definition below. If *USB\_CFG\_DISABLE* is set, the BC function is implemented as the Charging Downstream Port (CDP).

```
#define USB_CFG_DCP USB_CFG_ENABLE // DCP enabled.
#define USB_CFG_DCP USB_CFG_DISABLE // DCP disabled.
```

Note:

If *USB\_CFG\_ENABLE* is set for this definition, then set *USB\_CFG\_ENABLE* for the definition of *USB\_CFG\_BC* in above.

#### 3. Setting Compliance Test mode

Set Compliance Test support for the USB Embedded Host to be enabled or disabled as the following definition. To perform the Compliance Test, set *USB\_CFG\_ENABLE* as the definition below. When not performing the Compliance Test, set *USB\_CFG\_DISABLE* as the definition below.

```
#define USB_CFG_COMPLIANCE USB_CFG_ENABLE // Compliance Test supported.
#define USB_CFG_COMPLIANCE USB_CFG_DISABLE // Compliance Test not supported.
```

#### 4. Setting a Targeted Peripheral List (TPL)

Set the number of the USB devices and the VID and PID pairs for the USB device to be connected as necessary as the following definition. For a method to set the TPL, see chapter 3.6, **How to Set the Target Peripheral List (TPL)**.

```
#define USB_CFG_TPLCNT      Number of the USB devices to be connected.
#define USB_CFG_TPL          Set the VID and PID pairs for the USB device to be
                             connected.
```

#### 5. Setting a Targeted Peripheral List (TPL) for USB Hub

Set the number of the USB Hubs and the VID and PID pairs for the USB Hubs to be connected as the following definition. For a method to set the TPL, see chapter 3.6, **How to Set the Target Peripheral List (TPL)**.

```
#define USB_CFG_HUB_TPLCNT  Set the number of the USB Hubs to be connected.
#define USB_CFG_HUB_TPL      Set the VID and PID pairs for the USB Hub to be
                             connected.
```

#### 6. Setting Hi-speed Embedded Host Electrical Test

Set Hi-speed Embedded Host Electrical Test support to be enabled or disabled as the following definition. To perform the Hi-speed Embedded Host Electrical Test, set *USB\_CFG\_ENABLE* as the definition below.

```
#define USB_CFG_ELECTRICAL USB_CFG_ENABLE // HS Electrical Test supported
#define USB_CFG_ELECTRICAL USB_CFG_DISABLE // HS Electrical Test not supported
```

Note:

- (1). If *USB\_CFG\_ENABLE* is set for this definition, then set *USB\_CFG\_ENABLE* for the definition of *USB\_CFG\_COMPLIANCE* in 3 above.
- (2). In the case of a USB module other than USBAA module, this definition is ignored.

## 7.3 Settings in USB Peripheral Mode

To make a USB module to work as a USB Peripheral, set the definitions below according to the system to be used.

#### 1. USB module selection setting

Set the USB module number to be used for the definition of *USB\_CFG\_USE\_USBIP*.

```
#define USB_CFG_USE_USBIP USB_CFG_IP0 // Uses USB0 module
#define USB_CFG_USE_USBIP USB_CFG_IP1 // Uses USB1 module
```

Note:

If the MCU being used only supports one USB module, then set *USB\_CFG\_IP0* for the definition of *USB\_CFG\_USE\_USBIP*.

#### 2. Setting class request

Set whether the received class request is supported. If *USB\_CFG\_ENABLE* (supported) is set, then the USB driver will notify the reception of the class request to the application program. If *USB\_CFG\_DISABLE* (not supported) is set, then the USB driver will respond a STALL to the class request.

```
#define USB_CFG_CLASS_REQUEST USB_CFG_ENABLE // Supported
#define USB_CFG_CLASS_REQUEST USB_CFG_DISABLE // Not supported
```

Note:

- a. Check the return value (*USB\_STS\_REQUEST*) of *R\_USB\_GetEvent* function when confirming whether USB driver receive the class request or not.
- b. Even if *USB\_CFG\_DISABLE* is set, USB driver return the value "1" to GetMaxLun class request of Mass storage class.

### 3. Setting power saving function

Set the power saving function to be enabled or disabled as the definition below. If *USB\_CFG\_ENABLE* is set as the definition below, then when there is a transition to suspend state or detach state, the USB driver will transition the MCU to power saving mode.

```
#define USB_CFG_LPW USB_CFG_ENABLE // Power saving function enabled.
#define USB_CFG_LPW USB_CFG_DISABLE // Power saving function disabled.
```

## 7.4 Other Definitions

In addition to the above, the following definitions 1 through 2 are also provided in *r\_usb\_basic\_config.h*. Recommended values have been set for these definitions, so only change them when necessary.

### 1. DBLB bit setting

Set or clear the DBLB bit in the pipe configuration register (PIPECFG) of the USB module using the following definition.

```
#define USB_CFG_DBLB USB_CFG_DBLBON // DBLB bit set.
#define USB_CFG_DBLB USB_CFG_DBLBOFF // DBLB bit cleared.
```

### 2. CNTMD bit setting (USBA/USBAa module only)

Set or clear the CNTMD bit in the pipe configuration register (PIPECFG) of the USB module using the following definition.

```
#define USB_CFG_CNTMD USB_CFG_CNTMDON // CNTMD bit set.
#define USB_CFG_CNTMD USB_CFG_CNTMDOFF // CNTMD bit cleared.
```

#### Note:

- (1). The setting of the DBLB and CNTMD bits above is performed for all the pipes being used. Therefore, in this configuration, it is not possible to perform the pipe-specific settings for these bits.
- (2). For details on the pipe configuration register (PIPECFG), refer to the MCU hardware manual.
- (3). Be sure to set SHTNAK bit.

## 8. Structures

This chapter describes the structures used in the application program.

### 8.1 usb\_ctrl\_t structure

The *usb\_ctrl\_t* structure is used for USB data transmission and other operations. The *usb\_ctrl\_t* structure can be used in all APIs listed in Table 4-1, excluding *R\_USB\_GetVersion*.

```
typedef struct usb_ctrl {
    uint8_t      module;          /* Note 1 */
    uint8_t      address;        /* Note 2 */
    uint8_t      pipe;           /* Note 3 */
    uint8_t      type;           /* Note 4 */
    uint16_t     status;         /* Note 5 */
    uint32_t     size;           /* Note 6 */
    usb_set_up   setup;         /* Note 7 */
} usb_ctrl_t;
```

Note:

1. Member (*module*) is used to specify the USB module number.
2. Member (*address*) is used to specify the USB device address.
3. Member (*pipe*) is used to specify the USB module pipe number. For example, specify the pipe number when using the *R\_USB\_PipeRead* function or *R\_USB\_PipeWrite* function.
4. Member (*type*) is used to specify the device class type.
5. The USB device state or the result of a USB request command is stored in the member (*status*). The USB driver sets in this member. Therefore, except when initializing the *usb\_ctrl\_t* structure area or processing an ACK/STALL response to a vendor class request, the application program should not write into this member. For processing an ACK/STALL response to a vendor class request, see **9.2.5, Processing ACK/STALL Response to Class Request**.
6. Member (*size*) is used to set the size of data that is read. The USB driver sets this member. Therefore, the application program should not write into this member.
7. Member (*setup*) is used to set the information about a class request.

### 8.2 usb\_setup\_t structure

The *usb\_setup\_t* structure is used when sending or receiving a USB class request. To send a class request to a USB device (in USB Host mode), assign to the members of the *usb\_setup\_t* structure the information for the class request to be sent. To obtain class request information from the USB Host (in USB Peripheral mode), refer to the members of the *usb\_setup\_t* structure.

```
typedef struct usb_setup {
    uint16_t     type;           /* Note 1 */
    uint16_t     value;         /* Note 2 */
    uint16_t     index;         /* Note 3 */
    uint16_t     length;        /* Note 4 */
} usb_setup_t;
```

Note:

1. In USB Host mode, the value assigned to the member (*type*) is set to the USBREQ register, and in USB Peripheral mode, the value of the USBREQ register is set to the member (*type*).
2. In USB Host mode, the value assigned to the member (*value*) is set to the USBVAL register, and in USB Peripheral mode, the value of the USBVAL register is set to the member (*value*).
3. In USB Host mode, the value assigned to the member (*index*) is set to the USBINDX register, and in USB Peripheral mode, the value of the USBINDX register is set to the member (*index*).
4. In USB Host mode, the value assigned to the member (*length*) is set to the USBLENG register, and in USB Peripheral mode, the value of the USBLENG register is set to the member (*length*).
5. For information on the USBREQ, USBVAL, USBINDX, and USBLENG registers, refer to the MCU user's manual.

### 8.3 usb\_cfg\_t structure

The *usb\_cfg\_t* structure is used to register essential information such as settings to indicate use of USB host or USB peripheral as the USB module and to specify USB speed. This structure can only be used for the *R\_USB\_Open* function listed in **Table 4-1**.

```
typedef struct usb_cfg {
    uint8_t      usb_mode;      /* Note 1 */
    uint8_t      usb_speed;     /* Note 2 */
    usb_descriptor_t *p_usb_reg; /* Note 3 */
} usb_cfg_t;
```

Note:

1. Specify whether to use USB host or USB peripheral mode as the USB module in member (*usb\_mode*). To select USB host, set *USB\_HOST*; to select USB peripheral, set *USB\_PERI* in the member.
2. Specify the USB speed for USB module operations. Set “*USB\_HS*” to select Hi-speed, “*USB\_FS*” to select Full-speed.
3. Specify the *usb\_descriptor\_t* type pointer for the USB device in member (*p\_usb\_reg*). Refer to chapter 8.4, **usb\_descriptor\_t structure** for details on the *usb\_descriptor\_t* type. This member can only be set in USB peripheral mode. Even if it is set in USB host mode, the settings will be ignored.

### 8.4 usb\_descriptor\_t structure

The *usb\_descriptor\_t* structure stores descriptor information such as device descriptor and configuration descriptor. The descriptor information set in this structure is sent to the USB host as response data to a standard request during enumeration of the USB host. This structure is specified in the *R\_USB\_Open* function argument.

```
typedef struct usb_descriptor {
    uint8_t      *p_device;      /* Note 1 */
    uint8_t      *p_config_f;    /* Note 2 */
    uint8_t      *p_config_h;    /* Note 3 */
    uint8_t      *p_qualifier;    /* Note 4 */
    uint8_t      **p_string;     /* Note 5 */
} usb_descriptor_t;
```

Note:

1. Specify the top address of the area that stores the device descriptor in the member (*p\_device*).
2. Specify the top address of the area that stores the Full-speed configuration descriptor in the member (*p\_config\_f*). Even when using Hi-speed, make sure you specify the top address of the area that stores the Full-speed configuration descriptor in this member.
3. Specify the top address of the area that stores the Hi-speed configuration descriptor in the member (*p\_config\_h*). For Full-speed, specify the start address of the dummy RAM area (Area of 2 bytes or more) to this member.
4. Specify the top address of the area that stores the qualifier descriptor in the member (*p\_qualifier*). For Full-speed, specify *USB\_NULL* to this member.

- Specify the top address of the string descriptor table in the member (*p\_string*). In the string descriptor table, specify the top address of the areas that store each string descriptor.

## Ex. 1) Full-speed

```
usb_descriptor_t usb_descriptor =
{
    smp_device,
    smp_config_f,
    smp_config_dummy,
    USB_NULL,
    smp_string,
};
```

## Ex. 2) Hi-speed

```
usb_descriptor_t usb_descriptor =
{
    smp_device,
    smp_config_f,
    smp_config_h,
    smp_qualifier,
    smp_string,
};
```

## 8.5 usb\_pipe\_t structure

The USB driver sets information about the USB pipe (PIPE1 to PIPE9) in the *usb\_pipe\_t* structure. Use the *R\_USB\_GetPipeInfo* function to reference the pipe information set in the structure.

```
typedef struct usb_pipe {
    uint8_t      ep;           /* Note 1 */
    uint8_t      type;        /* Note 2 */
    uint16_t     mxps;        /* Note 3 */
} usb_pipe_t;
```

Note:

- The endpoint number is set in member (*ep*). The direction (IN/OUT) is set in the highest bit. When the highest bit is "1", the direction is IN, when "0", the direction is OUT.
- The transfer type (bulk/interrupt) is set in member (*type*). For a Bulk transfer, "USB\_BULK" is set, and for an Interrupt transfer, "USB\_INT" is set.
- The maximum packet size is set in member (*mxps*).

## 8.6 usb\_info\_t structure

The following information on the USB device is set for the *usb\_info\_t* structure by calling the *R\_USB\_GetInformation* function.

```
typedef struct usb_info {
    uint8_t      type;         /* Note 1 */
    uint8_t      speed;       /* Note 2 */
    uint8_t      status;      /* Note 3 */
    uint8_t      port;        /* Note 4 */
} usb_info_t;
```

Note:

- In USB Host mode, the device class type of the connected USB device is set for the member (*type*). If the USB device is not connected, then *USB\_NOT\_CONNECT* is set. In USB Peripheral mode, the supporting device class type is set for the member (*type*). For information on the device class types, see **6, Device Class Types**. (In the case of PCDC, *USB\_PCDC* is set in this member(*type*))
- The USB speed (*USB\_HS/USB\_FS/USB\_LS*) is set for the member (*speed*). In USB Host mode, if no USB device is connected, then *USB\_NOT\_CONNECT* is set.
- One of the following states of the USB device is set for the member (*status*).

USB_STS_DEFAULT	:	Default state
USB_STS_ADDRESS	:	Address state (USB Peripheral only)
USB_STS_CONFIGURED	:	Configured state
USB_STS_SUSPEND	:	Suspend state
USB_STS_DETACH	:	Detach state

- The following information of the Battery Charging (BC) function of the device connected to the port is set to the member (*port*).

USB_SDP	:	Standard Downstream Port
USB_CDP	:	Charging Downstream Port
USB_DCP	:	Dedicated Charging Port (USB Peripheral only)

## 8.7 usb\_compliance\_t structure

This structure is used when running the USB compliance test. The structure specifies the following USB-related information:

```
typedef struct usb_compliance {
    usb_ct_status_t    status;      /* Note 1 */
    uint16_t           vid;         /* Note 2 */
    uint16_t           pid;         /* Note 3 */
} usb_compliance_t;
```

Note:

- The member status can be set to the following values to indicate the status of the connected USB device:

USB_CT_ATTACH	:	USB device attach detected
USB_CT_DETACH	:	USB device detach detected
USB_CT_TPL	:	Attach detected of USB device listed in TPL
USB_CT_NOTTPL	:	Attach detected of USB device not listed in TPL
USB_CT_HUB	:	USB hub connection detected
USB_CT_OVRCUR	:	Overcurrent detected
USB_CT_NORES	:	No response to control read transfer
USB_CT_SETUP_ERR	:	Setup transaction error occurred

- The member vid is set to a value indicating the vendor ID of the connected USB device.
- The member pid is set to a value indicating the product ID of the connected USB device.

## 9. USB Class Requests

This chapter describes how to process USB class requests. As standard requests are processed by the USB driver, they do not need to be included in the application program.

### 9.1 USB Host operations

#### 9.1.1 USB request (setup) transfer

A USB request is sent to the USB device using the *R\_USB\_Write* function. The following describes the transfer procedure.

1. Set *USB\_REQUEST* in the *usb\_ctrl\_t* structure member (*type*).
2. Set the USB request (setup: 8 bytes) in the *usb\_ctrl\_t* structure member (*setup*) area. Refer to chapter 8.2, **usb\_setup\_t structure** for details on how to set member (*setup*).
3. If the request supports the control write data stage, store the transfer data in a buffer. If the request supports the control read data stage, reserve a buffer to store the data received from the USB device. Note: do not reserve the auto-variable (stack) area of the buffer.
4. Specify the data buffer top address in the second argument of the *R\_USB\_Write* function, and the data size in the third argument. If the request supports no-data control status stage, specify *USB\_NULL* for both the second and third arguments.
5. Call the *R\_USB\_Write* function.

#### 9.1.2 USB request completion

Confirm the completion of a USB request with the return value (*USB\_STS\_REQUEST\_COMPLETE*) of the *R\_USB\_GetEvent* function. For a request that supports the control read data stage, the received data is stored in the area specified in the second argument of the *R\_USB\_Write* function.

Confirm the USB request results from the *usb\_ctrl\_t* structure member (*status*), which is set as follows.

status	Description
USB_ACK	Successfully completed
USB_STALL	Stalled

#### 9.1.3 USB request processing example

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        /* Request setting processing to ctrl.setup */
        :
        /* For request that supports control write data stage, set transfer data in g_buf area. */
        :
        ctrl.type = USB_REQUEST;
        R_USB_Write(&ctrl, g_buf, size); /* Send USB request (Setup stage). */
        break;
        case USB_STS_REQUEST_COMPLETE: /* USB request completed. */
            if(USB_ACK == ctrl.status) /* Confirm results of USB request. */
            {
                /* For request that supports control read data stage, store receive data in g_buf area. */
                :
            }
            break;
    }
}
```

## 9.2 USB Peripheral operations

### 9.2.1 USB request (Setup)



Confirm receipt of the USB request (Setup) sent by the USB host with the return value (*USB\_STS\_REQUEST*) of the *R\_USB\_GetEvent* function. The contents of the USB request (Setup: 8 bytes) are stored in the *usb\_ctrl\_t* structure member (*setup*) area. Refer to chapter 8.2, **usb\_setup\_t structure** for a description of the settings for member (*setup*).

**Note:**

The return value of the *R\_USB\_GetEvent* function when a request that supports the no-data control status stage is received is *USB\_STS\_REQUEST\_COMPLETE*, not *USB\_STS\_REQUEST*.

### 9.2.2 USB request data

The *R\_USB\_Read* function is used to receive data in the data stage and the *R\_USB\_Write* function is used to send data to the USB host. The following describes the receive and send procedures.

#### 1. Receive procedure

- (1). Set the *USB\_REQUEST* in the *usb\_ctrl\_t* structure member (*type*).
- (2). In the *R\_USB\_Read* function, specify the pointer to area that stores data in the second argument, and the requested data size in the third argument.
- (3). Call the *R\_USB\_Read* function.

**Note:**

Confirm receipt of the request data with the return value (*USB\_STS\_REQUEST\_COMPLETE*) of the *R\_USB\_GetEvent* function.

#### 2. Send procedure

- (1). Set *USB\_REQUEST* in the *usb\_ctrl\_t* structure member (*type*).
- (2). Store the data from the data stage in a buffer. In the *R\_USB\_Write* function, specify the top address of the buffer in the second argument, and the transfer data size in the third argument.
- (3). Call the *R\_USB\_Write* function.

**Note:**

Confirm receipt of the request data with the return value (*USB\_STS\_WRITE\_COMPLETE*) of the *R\_USB\_GetEvent* function. You can also confirm whether the *usb\_ctrl\_t* structure member (*type*) has been set to *USB\_REQUEST*.

### 9.2.3 USB request results

For each class, if *USB\_CFG\_ENABLE* is set as the definition of the class request setting (example: *USB\_CFG\_PCDC\_REQUEST*) in the configuration file (example: *r\_usb\_pcdc\_config.h*), then this USB driver will always respond with an ACK to a received class request.

**Note:**

For a vendor class request, the USB driver does not respond with an ACK or STALL. An application program must respond with an ACK or STALL to the vendor class request. For how to respond with an ACK or STALL, see 9.2.5, **Processing ACK/STALL Response to Class Request**.

## 9.2.4 Example USB request processing description

### 1. Request that supports control read data stage

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_REQUEST: /* Receive USB request */
            /* ctrl.setup analysis processing */
            :
            /* data setup processing */
            :
            ctrl.type = USB_REQUEST;
            R_USB_Write(&ctrl, g_buf, size); /* data (data stage) send request */
            break;
        case USB_STS_REQUEST_COMPLETE:
            if(USB_ACK == ctrl.status) /* Confirm USB request results */
            {
                :
            }
            break;
    }
}
```

### 2. Request that supports control write data stage

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_REQUEST: /* Receive USB request */
            /* ctrl.setup analysis processing */
            :
            ctrl.type = USB_REQUEST;
            R_USB_Read(&ctrl, g_buf, size); /* data (data stage) receive request */
            break;
        case USB_STS_REQUEST_COMPLETE:
            :
            break;
    }
}
```

### 3. Request that supports no-data control status stage

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_STS_REQUEST_COMPLETE:
            /* ctrl.setup analysis processing */
            :
            break;
    }
}
```

### 9.2.5 Processing ACK/STALL Response to Class Request

When it is necessary to respond with ACK or STALL to a class request, assign *USB\_REQUEST* to the member (*type*) of the *usb\_ctrl\_t* structure, and either *USB\_ACK* or *USB\_STALL* to the member (*status*), and call the *R\_USB\_Write* function. Assign *USB\_NULL* to both the second and third arguments of the *R\_USB\_Write* function. The completion of transmission of ACK/STALL can be checked by reading the *USB\_STS\_REQUEST\_COMPLETE* return value of the *R\_USB\_GetEvent* function. At this time, check also that *USB\_REQUEST* has been set for the member (*type*) of the *usb\_ctrl\_t* structure.

#### 1. Example of processing STALL response

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_STS_REQUEST:
            /* ctrl.setup analysis processing */
            :
            ctrl.type = USB_REQUEST;
            ctrl.status = USB_STALL;
            R_USB_Write(&ctrl, (uint8_t *)USB_NULL, (uint32_t)USB_NULL);
            break;
        case USB_STS_REQUEST_COMPLETE:
            if( USB_REQUEST == ctrl.type )
            {
                :
            }
            break;
    }
}
```

#### 2. Example of processing ACK response

```
void usr_application (void )
{
    usb_ctrl_t ctrl;
    switch( R_USB_GetEvent( &ctrl ) )
    {
        :
        case USB_STS_REQUEST:
            /* ctrl.setup analysis processing */
            :
            ctrl.type = USB_REQUEST;
            ctrl.status = USB_ACK;
            R_USB_Write(&ctrl, (uint8_t *)USB_NULL, (uint32_t)USB_NULL);
            break;
        case USB_STS_REQUEST_COMPLETE:
            if( USB_REQUEST == ctrl.type )
            {
                :
            }
            break;
    }
}
```

## 10. DTC/DMA Transfer

### 10.1 Basic Specification

The specifications of the DTC/DMA transfer sample program code included in USB-BASIC-F/W are listed below. USB Pipe 1 and Pipe2 can used DTC/DMA access.

**Table10-1** shows DTC/DMA Setting Specifications.

**Table10-1 DTC/DMA Setting Specifications**

Setting	Description
FIFO port used	D0FIFO and D1FIFO port
Transfer mode	Block transfer mode
Chain transfer	Disabled
Address mode	Full address mode
Read skip	Disabled
Access bit width (MBW)	4-byte transfer: 32-bit width (when using USBa/USBAa module only) 2-byte transfer: 16-bit width (when using USBb module only)
USB transfer type	BULK transfer
Transfer end	Receive direction: BRDY interrupt Transmit direction: D0FIFO/D1FIFO interrupt, BEMP interrupt

### 10.2 Notes

#### 10.2.1 DTC transfer

Refer to "Special Note" described in the chapter "R\_DTC\_Open" in the application note "RX Family DTC module" (Document No. R01AN1819).

#### 10.2.2 Data Reception Buffer Size

The user needs to allocate the buffer area for the following size to store the receiving data.

- (1). When *USB\_CFG\_CNTMDON* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h* (When using USBa/USBAa module.)

Allocate the area more than n times FIFO buffer size. For FIFO buffer size, refer to the chapter **11.4, Reference or Change of PIPEBUF Register**

- (2). When *USB\_CFG\_CNTMDOFF* is specified for *USB\_CFG\_CNTMD* definition in *r\_usb\_basic\_config.h*.

Allocate the area n times the max packet size.

#### 10.2.3 USB Pipe

USB pipe which is used by DMA/DTC transfer is only PIPE1 and PIPE2. This driver does not work properly when USB pipe except PIPE1 and PIPE2 is used for DMA/DTC transfer. When data transfer is performed by combining DMA/DTC transfer and CPU transfer, use PIPE1 or PIPE2 for DTM/DTC transfer and use PIPE3, PIPE4 or PIPE5 for CPU transfer.

#### 10.2.4 Initialization Function for DMA/DTC transfer

Call the following DMA/DTC transfer initialization function in the user application program.

Transfer Type	Initialization Function
DTC	R_DTC_Open
DMA	R_DMACA_Init R_DMACA_Open

Note:

Specify the following definition to the argument in R\_DMACA\_Open function. For the default of the following definition, refer to chapter 7, **Configuration (r\_usb\_basic\_config.h)**.

```
USB_CFG_USB0_DMA_TX,   USB_CFG_USB0_DMA_RX  
USB_CFG_USB1_DMA_TX,   USB_CFG_USB1_DMA_RX
```

Example)

```
R_DMACA_Init();  
R_DMACA_Open(USB_CFG_USB1_DMA_TX);  
R_DMACA_Open(USB_CFG_USB1_DMA_RX);
```

## 11. Additional Notes

### 11.1 Vendor ID

Be sure to use the user's own Vendor ID for the one to be provided in the Device Descriptor.

### 11.2 Compliance Test

In order to run the USB Compliance Test it is necessary to display USB device-related information on a display device such as an LCD. When the `USB_CFG_COMPLIANCE` definition in the configuration file (`r_usb_basic_config.h`) is set to `USB_CFG_ENABLE`, the USB driver calls the function (`usb_compliance_disp`) indicated below. This function should be defined within the application program, and the function should contain processing for displaying USB device-related information, etc.

Function name : `void usb_compliance_disp( usb_compliance_t *);`  
 Argument : `usb_compliance_t *` Pointer to structure for storing USB information

Note:

1. The USB driver sets the USB device-related information in an area indicated by an argument, and the `usb_compliance_disp` function is called.
2. For information on the `usb_compliance_t` structure, refer to **8.7, `usb_compliance_t` structure**.
3. When the `USB_CFG_COMPLIANCE` definition in `r_usb_basic_config.h` is set to `USB_CFG_ENABLE`, it is necessary to register the vendor ID and product ID in the TPL definitions for USB devices and USB hubs. For information on TPL definitions, refer to 10, Target Peripheral List (TPL) Settings.
4. For a program sample of the `usb_compliance_disp` function, see **13.1, `usb_compliance_disp` function**.

### 11.3 Hi-speed Embedded Host Electrical Test

The USB Protocol and Electrical Test Tool is required in order to run the Hi-speed embedded host electrical test. To run the test, define `USB_CFG_ELECTRICAL` in the `r_usb_basic_config.h` file as `USB_CFG_ENABLE`. For information on this definition, refer to chapter 7, **Configuration (`r_usb_basic_config.h`)**.

### 11.4 Reference or Change of PIPEBUF Register

Recommended values are set to the `BUFSIZE` and `BUFNMB` bits of the `PIPEBUF` register that are supported by the `USBA` and `USBAa` modules. When referring or changing to these bits, refer or change the following variables in the USB driver.

Device Class	File Name	Variable Name
Host Communication Device Class	<code>r_usb_hcdc_driver.c</code>	<code>g_usb_hcdc_eptbl</code>
Host Human I/F Device Class	<code>r_usb_hhid_driver.c</code>	<code>g_usb_hhid_eptbl</code>
Host Mass Storage Class	<code>r_usb_hmsc_driver.c</code>	<code>g_usb_hmsc_eptbl</code>
Peripheral Communication Device Class	<code>r_usb_peptable.c</code>	<code>g_usb_eptbl</code>
Peripheral Human I/F Device Class		
Peripheral Mass Storage Class		

## 12. Creating an Application Program

This chapter explains how to create an application program using the API functions described throughout this document. Please make sure you use the API functions described here when developing your application program.

### 12.1 Configuration

Set each configuration file (header file) in the `r_config` folder to meet the specifications and requirements of your system. Please refer to chapter 7, **Configuration** about setting of the configuration file.

### 12.2 Descriptor Creation

For USB peripheral operations, you will need to create descriptors to meet your system specifications. Register the created descriptors in the `usb_descriptor_t` function members. USB host operations do not require creation of special descriptors.

### 12.3 Application Program Creation

#### 12.3.1 Include

Make sure you include the following files in your application program.

1. `r_usb_basic_if.h` (Inclusion is obligatory.)
2. `r_usb_XXXXX_if.h` (I/F file provided for the USB device class to be used )
3. Include a header file for FAT when creating the application program for Host Mass Storage Class.
4. Include any other driver-related header files that are used within the application program.

#### 12.3.2 Initialization

1. MCU pin settings

USB input/output pin settings are necessary to use the USB controller. The following is a list of USB pins that need to be set. Set the following pins as necessary.

Table12-1 USB I/O Pin Settings for USB Peripheral Operation

Pin Name	I/O	Function
USB_VBUS	input	VBUS pin for USB communication
USB_DPUPE	output	Pull-up resistor control signal pin

Table12-2 USB I/O Pin Settings for USB Host Operation

Pin Name	I/O	Function
USB_VBUSEN	output	VBUS output enabled pin for USB communication
USB_OVRCURA	input	Overcurrent detection pin for USB communication

Note:

- (1). Please refer to the corresponding MCU user's manual for the pin settings in ports used for your application program.
  - (2). USB\_DPUPE pin is supported by RX63N/RX631 only.
  - (3). Make setting to DPRPD and DRPD pin as necessary when using RX63N/RX631.
2. DTC/DMA-related initialization

Call the DTC/DMA initialization function when using the DTC/DMA transfer.

Transfer	Function
DTC	R_DTC_Open
DMA	R_DMACA_Init R_DMACA_Open

Note:

- (1). The setting for DTC/DMA transfer is needed when using DTC/DMA transfer. Refer to chapter 7, **Configuration (r\_usb\_basic\_config.h)**.

- (2). You need to specify the using DMA channel number to the argument for *R\_DMACA\_Open* function when using DMA transfer. Be sure to specify one of the following definitions for the argument.

DMA Channel Number	Description
USB_CFG_USB0_DMA_TX	Transmission setting for USB0 module
USB_CFG_USB0_DMA_RX	Reception setting for USB0 module
USB_CFG_USB1_DMA_TX	Transmission setting for USB1 module
USB_CFG_USB1_DMA_RX	Reception setting for USB1 module

Example 1) DMA transmission setting of USB0 module.

```
R_DMACA_Open(USB_CFG_USB0_DMA_TX);
```

(Specify one of USB PIPE3 to USB PIPE5 for the reception USB pipe.)

Example 2) DMA reception setting of USB1 module.

```
R_DMACA_Open(USB_CFG_USB1_DMA_RX);
```

(Specify one of USB PIPE3 to USB PIPE5 for the reception USB pipe.)

Example 3) DMA transmission/reception setting of USB1 module.

```
R_DMACA_Open(USB_CFG_USB1_DMA_TX);
```

```
R_DMACA_Open(USB_CFG_USB1_DMA_RX);
```

(Don't specify USB pipe other than USB PIPE1 and USB PIPE2.)

- (3). You can use USB PIPE1 and PIPE2 when using DMA/DTC transfer. This driver does not support DMA/DTC transfer when using USB PIPE3 to PIPE5.
- (4). Specify the using USB pipe number in each USB class configuration.

### 3. USB-related initialization

Call the *R\_USB\_Open* function to initialize the USB module (hardware) and USB driver software used for your application program.

#### 12.3.3 Descriptor Creation

For USB peripheral operations please create descriptors to meet your system specifications. Refer to chapter 2.5, **Descriptor** for more details about descriptors. USB host operations do not require creation of special descriptors.

#### 12.3.4 Main routine

Please describe the main routine in the main loop format. Make sure you call the *R\_USB\_GetEvent* function in the main loop. The USB-related completed events are obtained from the return value of the *R\_USB\_GetEvent* function. Also make sure your application program has a routine for each return value. The routine is triggered by the corresponding return value

#### 12.3.5 Application program description example (CPU transfer)

```
#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"
```

```
void      usb_peri_application( void )
{
```

```
    usb_ctrl_t  ctrl;
    usb_cfg_t   cfg;
```

```
    /* MCU pin setting */
    usb_pin_setting();
```

```
    /* Initialization processing */
```

```
    ctrl.module = USB_IP1; /* Specify the selected USB module */
```

```
    cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
```

```
    cfg.usb_speed = USB_HS; /* Specify the USB speed */
```

```
    cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
```



```

R_USB_Open( &ctrl, &cfg );

/* main routine */
while(1)
{
    switch( R_USB_GetEvent( &ctrl ) )
    {
        case USB_STS_CONFIGURED:
        case USB_STS_WRITE_COMPLETE:
            ctrl.type = USB_PCDC;
            R_USB_Read( &ctrl, g_buf, 64 );
            break;
        case USB_STS_READ_COMPLETE:
            ctrl.type = USB_PCDC;
            R_USB_Write( &ctrl, g_buf, ctrl.size );
            break;
        default:
            break;
    }
}
}

```

### 12.3.6 Application program description example (DMA transfer)

```

#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"

void      usb_peri_application( void )
{
    usb_ctrl_t  ctrl;
    usb_cfg_t   cfg;

    /* MCU pin setting */
    usb_pin_setting();

    /* DMA initialization processing */
    R_DMACA_Init();
    R_DMACA_Open(USB_CFG_USB0_DMA_TX);
    R_DMACA_Open(USB_CFG_USB0_DMA_RX);

    /* Initialization processing */
    ctrl.module = USB_IP0; /* Specify the selected USB module */
    cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
    cfg.usb_speed = USB_HS; /* Specify the USB speed */
    cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
    R_USB_Open( &ctrl, &cfg );

    /* main routine */
    while(1)
    {
        switch( R_USB_GetEvent( &ctrl ) )
        {
            case USB_STS_CONFIGURED:
            case USB_STS_WRITE_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Read( &ctrl, g_buf, 64 );
                break;
            case USB_STS_READ_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Write( &ctrl, g_buf, ctrl.size );

```

```

        break;
    default:
        break;
    }
}
}

```

### 12.3.7 Application program description example (DTC transfer)

```

#include "r_usb_basic_if.h"
#include "r_usb_pcdc_if.h"

void      usb_peri_application( void )
{
    usb_ctrl_t  ctrl;
    usb_cfg_t   cfg;

    /* MCU pin setting */
    usb_pin_setting();

    /* DTC initialization processing */
    R_DTC_Open();

    /* Initialization processing */
    ctrl.module = USB_IP0; /* Specify the selected USB module */
    cfg.usb_mode = USB_PERI; /* Specify either USB host or USB peri */
    cfg.usb_speed = USB_HS; /* Specify the USB speed */
    cfg.p_usb_reg = &smp_descriptor; /* Specify the top address of the descriptor table */
    R_USB_Open( &ctrl, &cfg );

    /* main routine */
    while(1)
    {
        switch( R_USB_GetEvent( &ctrl ) )
        {
            case USB_STS_CONFIGURED:
            case USB_STS_WRITE_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Read( &ctrl, g_buf, 64 );
                break;
            case USB_STS_READ_COMPLETE:
                ctrl.type = USB_PCDC;
                R_USB_Write( &ctrl, g_buf, ctrl.size );
                break;
            default:
                break;
        }
    }
}

```

## 13. Program Sample

### 13.1 usb\_compliance\_disp function

```
void usb_compliance_disp (usb_compliance_t *p_info)
{
    uint8_t          disp_data[32];

    disp_data = (usb_comp_disp_t*)param;

    switch(p_info->status)
    {
        case USB_CT_ATTACH:                /* Device Attach Detection */
            display("ATTACH ");
            break;

        case USB_CT_DETACH:                /* Device Detach Detection */
            display("DETTACH");
            break;

        case USB_CT_TPL:                   /* TPL device connect */
            sprintf(disp_data,"TPL PID:%04x VID:%04x",p_info->pid, p_info->vid);
            display(disp_data);
            break;

        case USB_CT_NOTTPL:                /* Not TPL device connect */
            sprintf(disp_data,"NOTPL PID:%04x VID:%04x",p_info->pid, p_info->vid);
            display(disp_data);
            break;

        case USB_CT_HUB:                   /* USB Hub connect */
            display("Hub");
            break;

        case USB_CT_NOTRESP:               /* Response Time out for Control Read Transfer */
            display("Not response");
            break;

        default:
            break;
    }
}
```

**Note:**

The display function in the above function displays character strings on a display device. It must be provided by the customer.

**Website and Support**

Renesas Electronics Website

<http://www.renesas.com/>

Inquiries

<http://www.renesas.com/inquiry>

All trademarks and registered trademarks are the property of their respective owners.

## Revision Record

Rev.	Date	Page	Description
			Summary
1.00	Aug 1, 2014	—	First edition issued
1.10	Dec 26, 2014	—	RX71M is added in Target Device. The multiple connecting of USB deive is supported in Host mode.
1.11	Sep 30, 2015	—	RX63N and RX631 are added in Target Device.
1.20	Sep 30, 2016	—	<ol style="list-style-type: none"> <li>1. RX65N and RX651 are added in Target Device.</li> <li>2. Supporting DMA transfer.</li> <li>3. Supporting USB Host and Peripheral Interface Driver application note (Document No.R01AN3293EJ)</li> </ol>
1.21	Mar 31, 2017	—	<ol style="list-style-type: none"> <li>1. Supported Technical Update (Document number. TN-RX*-A172A/E)</li> <li>2. The following chapters are added in this document. <ol style="list-style-type: none"> <li>(1). 2.5 Descriptor</li> <li>(2). 3.6 How to Set the Target Peripheral List (TPL)</li> <li>(3). 3.7 Allocation of Device Addresses</li> <li>(4). 5. Return Value of R_USB_GetEvent Function</li> <li>(5). 6. Device Class Types</li> <li>(6). 7. Configuration</li> <li>(7). 8. Structures</li> <li>(8). 9. USB Class Requests</li> <li>(9). 11. Additional Notes</li> <li>(10). 13. Program Sample</li> </ol> </li> <li>3. The following chapters are deleted. "Hub Class", "non-OS Scheduler"</li> </ol>
1.22	Sep 30, 2017	—	Suppoting RX65N/RX651-2M

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

- The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

### 2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

- The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.  
In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed.  
In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

### 3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

- The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

### 4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

- When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

### 5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

- The characteristics of Microprocessing unit or Microcontroller unit products in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
  2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
  3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
  4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
  5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.

Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
  6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
  7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
  8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
  9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
  10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
  11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
  12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.



### SALES OFFICES

### Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "http://www.renesas.com/" for the latest and detailed information.

#### **Renesas Electronics America Inc.**

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.  
Tel: +1-408-588-6000, Fax: +1-408-588-6130

#### **Renesas Electronics Canada Limited**

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

#### **Renesas Electronics Europe Limited**

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K  
Tel: +44-1628-585-100, Fax: +44-1628-585-900

#### **Renesas Electronics Europe GmbH**

Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

#### **Renesas Electronics (China) Co., Ltd.**

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

#### **Renesas Electronics (Shanghai) Co., Ltd.**

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

#### **Renesas Electronics Hong Kong Limited**

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852 2886-9022

#### **Renesas Electronics Taiwan Co., Ltd.**

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

#### **Renesas Electronics Singapore Pte. Ltd.**

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

#### **Renesas Electronics Malaysia Sdn.Bhd.**

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

#### **Renesas Electronics India Pvt. Ltd.**

No.777C, 100 Feet Road, HAL II Stage, Indiranagar, Bangalore, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

#### **Renesas Electronics Korea Co., Ltd.**

12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5141