


**Software Option**

KUKA Roboter GmbH

## **KUKA Sunrise.Connectivity Servoing 1.5 KUKA Sunrise.Connectivity Rendering 1.5**

**For KUKA Sunrise.Workbench 1.5**

**For KUKA Sunrise.OS 1.5**

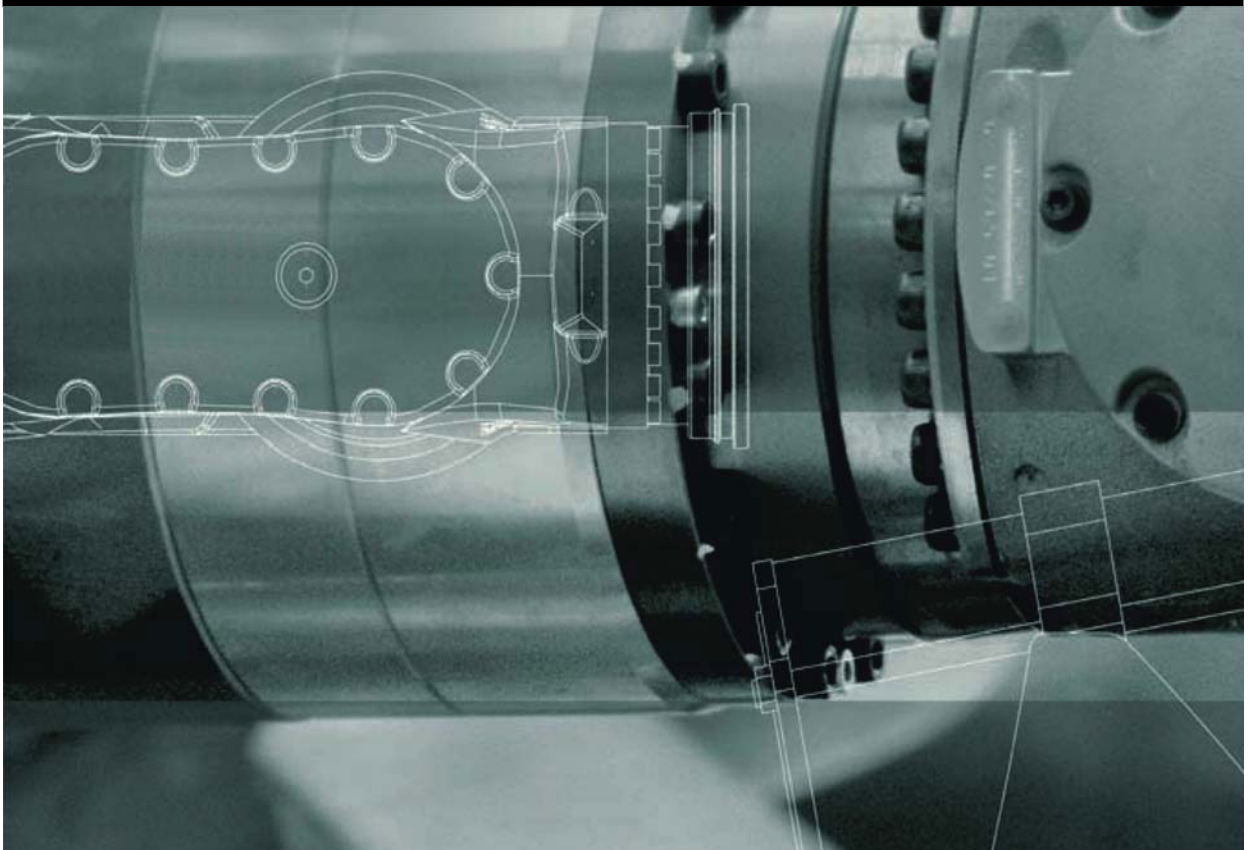

Issued: 30.01.2015

Version: KUKA Sunrise.Connectivity Servoing 1.5 Rendering 1.5 V2

© Copyright 2015

KUKA Roboter GmbH  
Zugspitzstraße 140  
D-86165 Augsburg  
Germany

This documentation or excerpts thereof may not be reproduced or disclosed to third parties without the express permission of KUKA Roboter GmbH.

Other functions not described in this documentation may be operable in the controller. The user has no claims to these functions, however, in the case of a replacement or service work.

We have checked the content of this documentation for conformity with the hardware and software described. Nevertheless, discrepancies cannot be precluded, for which reason we are not able to guarantee total conformity. The information in this documentation is checked on a regular basis, however, and necessary corrections will be incorporated in the subsequent edition.

Subject to technical alterations without an effect on the function.

Translation of the original documentation

KIM-PS5-DOC

Publication:	Pub KUKA Sunrise.Connectivity Servoing 1.5 Rendering 1.5 (PDF) en
Book structure:	KUKA Sunrise.Connectivity Servoing 1.5 Rendering 1.5 V1.1
Version:	KUKA Sunrise.Connectivity Servoing 1.5 Rendering 1.5 V2

# Contents

<b>1</b>	<b>Introduction</b>	<b>7</b>
1.1	Industrial robot documentation	7
1.2	Representation of warnings and notes	7
1.3	Terms used	8
1.4	Trademarks	8
<b>2</b>	<b>Purpose</b>	<b>9</b>
2.1	Target group	9
2.2	Intended use	9
<b>3</b>	<b>Product description</b>	<b>11</b>
3.1	Overview of KUKA Sunrise.Connectivity	11
3.1.1	Comparison of motion characteristics (PTP, SmartServo, DirectServo)	11
3.1.2	DirectServo and SmartServo in the RoboticsAPI	12
3.2	KUKA Sunrise.Connectivity Rendering (option)	13
<b>4</b>	<b>Safety</b>	<b>15</b>
<b>5</b>	<b>Installation</b>	<b>17</b>
5.1	System requirements	17
5.2	Installing the SmartServo command library	17
5.3	Installing the SmartServo catalog with application examples	17
5.4	Installing the DirectServo command library	17
5.5	Installing the DirectServo catalog with application examples	17
5.6	Installing the Rendering interface	18
5.6.1	Integrating V-REP PRO into the Rendering interface	18
<b>6</b>	<b>Operating the Rendering interface</b>	<b>21</b>
6.1	“Rendering VREP” view	21
6.2	Configuring the Rendering interface for V-REP PRO	22
6.3	Starting live view	23
6.4	Synchronizing frames	23
<b>7</b>	<b>Programming</b>	<b>25</b>
7.1	Servo motion in an application context	25
7.2	Simple destination setting with setDestination(...)	26
7.3	Cyclical destination setting with setDestination(...)	26
7.4	Seconds hand effect	27
7.5	IServoRuntime class	28
7.5.1	Handling the real-time system	28
7.5.1.1	Polling time stamps	28
7.5.1.2	Polling the state of the precision interpolator	29
7.5.1.3	Reading out and displaying debug information	29
7.5.2	Axis-specific interface	30
7.5.2.1	Specifying an axis-specific end position	30
7.5.2.2	Specifying an axis-specific end position with a target velocity	30
7.5.2.3	Reading out the axis-specific actual position	30
7.5.3	Cartesian interface	31
7.5.3.1	Setting a Cartesian destination in the robot base coordinate system	31

7.5.3.2	Specifying a Cartesian destination in the reference coordinate system .....	31
7.5.3.3	Reading out a Cartesian actual position in the robot base coordinate system .....	32
7.5.3.4	Reading out the Cartesian actual position in the reference coordinate system .....	33
7.5.4	Terminating a servo motion .....	33
7.6	Destination reached and timeouts .....	34
7.7	Receiving the GoalReached event (SmartServo only) .....	34
7.8	Changing the path parameters .....	35
7.9	Time recording .....	36
7.9.1	Measuring the application cycle time .....	36
7.10	Impedance control .....	37
7.10.1	Validating the load model for impedance control .....	37
7.10.2	Activating impedance control .....	38
7.10.3	Changing controller parameters during the runtime .....	38
7.10.4	Transition between control types .....	39
7.11	Feedback effect for servo motions .....	40
7.12	Step response of the systems .....	42
7.12.1	SmartServo vs. DirectServo – comparison of axis positions over time .....	43
7.12.1.1	Step response comparison of SmartServo vs. DirectServo, A1 .....	44
7.12.1.2	Step response comparison of SmartServo vs. DirectServo, A2 .....	45
7.12.1.3	Step response comparison of SmartServo vs. DirectServo, A3 .....	46
7.12.1.4	Step response comparison of SmartServo vs. DirectServo, A4 .....	47
7.12.1.5	Step response comparison of SmartServo vs. DirectServo, A5 .....	48
7.12.1.6	Step response comparison of SmartServo vs. DirectServo, A6 .....	49
7.12.1.7	Step response comparison of SmartServo vs. DirectServo, A7 .....	50
7.12.2	SmartServo vs. DirectServo – comparison of velocity, acceleration, jerk .....	50
7.12.2.1	Step response comparison of SmartServo vs. DirectServo, A1 (advanced) ...	52
7.12.2.2	Step response comparison of SmartServo vs. DirectServo, A2 (advanced) ...	53
7.12.2.3	Step response comparison of SmartServo vs. DirectServo, A3 (advanced) ...	54
7.12.2.4	Step response comparison of SmartServo vs. DirectServo, A4, advanced ...	55
7.12.2.5	Step response comparison of SmartServo vs. DirectServo, A5 (advanced) ...	56
7.12.2.6	Step response comparison of SmartServo vs. DirectServo, A6 (advanced) ...	57
7.12.2.7	Step response comparison of SmartServo vs. DirectServo, A7 (advanced) ..	58
<b>8</b>	<b>Application examples .....</b>	<b>59</b>
8.1	“Simple Tutorials for SmartServo” catalog .....	59
8.1.1	SmartServoSampleSimpleJointMotion application .....	59
8.1.2	SmartServoSampleSimpleCartesian application .....	59
8.1.3	SmartServoSampleInteractionControl application .....	59
8.2	“Simple Tutorials for DirectServo” catalog .....	60
8.2.1	DirectServoSampleSimpleJointMotion application .....	60
8.2.2	DirectServoSampleSimpleCartesian application .....	60
8.2.3	DirectServoSampleInteractionControl application .....	60
<b>9</b>	<b>Command reference .....</b>	<b>61</b>
9.1	SmartServo command reference .....	61
9.1.1	Motion parameters .....	61
9.1.2	Runtime parameters .....	62
9.1.3	Setting a destination .....	62
9.2	DirectServo command reference .....	63
9.2.1	Motion parameters .....	63

9.2.2	Runtime parameters .....	63
9.2.3	Setting a destination .....	64
<b>10</b>	<b>Exception handling routines .....</b>	<b>65</b>
10.1	Example of an exception handling routine .....	65
10.2	Overview of exceptions – runtime error messages .....	65
10.3	CommandInvalidException error causes .....	66
<b>11</b>	<b>Troubleshooting .....</b>	<b>69</b>
11.1	TCP/IP traffic from Windows is too slow .....	69
11.2	Robot makes jerky motions/whistles – avoiding the seconds hand effect .....	70
11.3	Impedance control cannot be activated .....	71
11.4	Feedback effect .....	71
<b>12</b>	<b>KUKA Service .....</b>	<b>73</b>
12.1	Requesting support .....	73
12.2	KUKA Customer Support .....	73
	<b>Index .....</b>	<b>81</b>



# 1 Introduction

## 1.1 Industrial robot documentation

The industrial robot documentation consists of the following parts:


- Documentation for the manipulator
- Documentation for the robot controller
- Operating and programming instructions for the System Software
- Instructions for options and accessories
- Parts catalog on storage medium


Each of these sets of instructions is a separate document.


## 1.2 Representation of warnings and notes

### Safety


These warnings are relevant to safety and **must** be observed.

 **DANGER** These warnings mean that it is certain or highly probable that death or severe injuries **will** occur, if no precautions are taken.

 **WARNING** These warnings mean that death or severe injuries **may** occur, if no precautions are taken.

 **CAUTION** These warnings mean that minor injuries **may** occur, if no precautions are taken.

**NOTICE** These warnings mean that damage to property **may** occur, if no precautions are taken.


 These warnings contain references to safety-relevant information or general safety measures.  
These warnings do not refer to individual hazards or individual precautionary measures.

This warning draws attention to procedures which serve to prevent or remedy emergencies or malfunctions:

**SAFETY INSTRUCTIONS** Procedures marked with this warning **must** be followed exactly.

### Hints

These notices serve to make your work easier or contain references to further information.

 Tip to make your work easier or reference to further information.

### 1.3 Terms used

Term	Description
API	Application Programming Interface Interface for programming applications.
Exception	Exception or exceptional situation  An exception describes a procedure for forwarding information about certain program statuses, mainly error states, to other program levels for further processing.
KUKA Sunrise Cabinet	Control hardware for operating the LBR iiwa industrial robot
KUKA Sunrise.OS	KUKA Sunrise.Operating System  System software for industrial robots which are operated with the robot controller KUKA Sunrise Cabinet
KUKA Sunrise. Workbench	Development environment for the start-up of a robot cell (station) and for the development of robot applications
KUKA LBR iiwa	KUKA lightweight robot intelligent industrial work assistant
HRC	Human-robot cooperation
System reaction time	Time between command specification and effective robot motion
V-REP PRO	Virtual Robot Experimentation Platform  Simulation software for testing the behavior of robots in a virtual environment

### 1.4 Trademarks

**V-REP PRO** is a trademark of COPPELIA ROBOTICS MARC FREESE.



## 2 Purpose

### 2.1 Target group

This documentation is aimed at users with the following knowledge and skills:

- Advanced system knowledge of robotics
- Advanced Java programming skills
- Advanced programming knowledge (KUKA RoboticsAPI)
- Advanced knowledge of control technology and stability



For optimal use of our products, we recommend that our customers take part in a course of training at KUKA College. Information about the training program can be found at [www.kuka.com](http://www.kuka.com) or can be obtained directly from our subsidiaries.

### 2.2 Intended use

#### Use

KUKA Sunrise.Connectivity is designed exclusively for use in the laboratory and has not been released for direct interaction with humans (HRC).

KUKA Sunrise.Connectivity may be used exclusively in accordance with the specified system requirements for the purpose of investigating new application fields, applications and algorithms for the LBR iiwa.

Operation in accordance with the intended use also involves continuous observance of the following documentation:

- Assembly and operating instructions of the industrial robot
- Assembly and operating instructions of the robot controller
- Operating and programming instructions for the System Software

#### Misuse

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. KUKA Roboter GmbH is not liable for any damage resulting from such misuse. The risk lies entirely with the user.

Examples of such misuse include:

- Use of KUKA Sunrise.Connectivity not in accordance with the specified system requirements
- Use in an industrial environment
- Use in medical applications
- Allowing humans in the robot's workspace.



## 3 Product description

### 3.1 Overview of KUKA Sunrise.Connectivity

KUKA Sunrise.Connectivity is a software option for the implementation of soft real-time applications and provides the following interfaces for this purpose:

#### Interfaces

- KUKA Sunrise.Connectivity SmartServo
- KUKA Sunrise.Connectivity DirectServo
- KUKA Sunrise.Connectivity Rendering (option)

#### SmartServo, DirectServo

The SmartServo and DirectServo interfaces are realized through motion classes of the same name which each provide their own PTP motion type.

The SmartServo and DirectServo motion classes are installed subsequently via the Sunrise catalog. This adds the corresponding class libraries to the RoboticsAPI.

The SmartServo and DirectServo motion types can be used to set new end points for the runtime of a motion.

SmartServo and DirectServo, servo motions for short, are executed as asynchronous motions. If a new end point is set while an end point is being addressed, the previous end point is discarded and the last commanded point is directly addressed.

- The motion type SmartServo enables jerk-limited paths with fast destination setting.
- The DirectServo motion type enables velocity-limited paths with constant updating of the destination. This allows the realization of user-specific planning and interpolation algorithms.



When the DirectServo motion type is used, the destinations may be at a maximum distance of 5° from the current actual position.

#### Rendering

(>>> 3.2 "KUKA Sunrise.Connectivity Rendering (option)" Page 13)

#### 3.1.1 Comparison of motion characteristics (PTP, SmartServo, DirectServo)

##### NOTICE

The characteristics of the DirectServo motion type (digital filter, no jerk limitation) allow the implementation of high-frequency destination specifications. This can result in high-frequency oscillations on the robot (whistling, buzzing) which can cause damage to the robot. KUKA cannot be held liable for any damage resulting from this.




If there is a question of whether to use the SmartServo or DirectServo motion type, SmartServo is recommended.

	PTP	SmartServo	DirectServo
Areas of application	Continuous path motion, collision-free path planning	Visual servoing, camera-based collision avoidance	Haptics
Destination interval (recommended)	Long (>100 ms)	Medium (>20 ms)	Very short (2 ... 19 ms)
Quantity of control points	Low	High	Very high

	PTP	SmartServo	DirectServo
Destination	Any point in the work envelope	Any point in the work envelope	At a maximum distance of $\pm 5^\circ$ from the axis-specific actual position of the robot
Path characteristics	<ul style="list-style-type: none"> <li>■ Jerk-limited</li> <li>■ Can be approximated</li> </ul>	<ul style="list-style-type: none"> <li>■ Jerk-limited</li> <li>■ Cannot be approximated</li> </ul>	<ul style="list-style-type: none"> <li>■ Not jerk-limited</li> <li>■ Cannot be approximated</li> </ul>
Path	Always remains the same, irrespective of the override setting, current velocity or current acceleration.	Depends on the override setting, current velocity and current acceleration.	
Response during destination specification while an end point is being addressed	Every point is addressed.	Current end point is discarded when a new destination is specified.	
Configurable path parameters	<ul style="list-style-type: none"> <li>■ Velocity</li> <li>■ Acceleration</li> </ul>	<ul style="list-style-type: none"> <li>■ Velocity</li> <li>■ Acceleration</li> <li>■ Jerk</li> </ul>	<ul style="list-style-type: none"> <li>■ Velocity</li> </ul>
Planning	<ul style="list-style-type: none"> <li>■ Polynomial</li> </ul>	<ul style="list-style-type: none"> <li>■ 3rd-order polynomial</li> </ul>	<ul style="list-style-type: none"> <li>■ Digital filter</li> <li>■ Planning in application</li> </ul>
System reaction time		~22 ms	~12 ms

### 3.1.2 DirectServo and SmartServo in the RoboticsAPI

SmartServo and DirectServo are motion classes used by the robot application to start motions. In turn, these provide special runtime classes with which destinations can be changed during a motion.

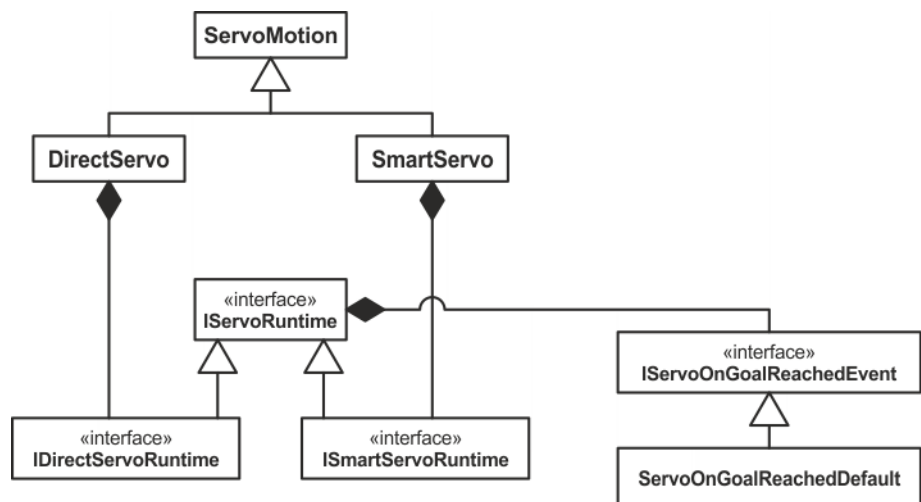

**Fig. 3-1: DirectServo and SmartServo in the RoboticsAPI**

The **IServoRuntime** interface provides the methods used by both motion classes and saves their characteristics and values, such as destination, position detection, time stamp management, etc.

Each of the motion classes has its own interface:

- The **ISmartServoRuntime** interface is part of the **SmartServo** motion class.
- The **IDirectServoRuntime** interface is part of the **DirectServo** motion class.

These interfaces contain the specific characteristics of the precision interpolators for each of the motion classes.

### 3.2 KUKA Sunrise.Connectivity Rendering (option)

#### Overview

The Rendering interface allows 3D visualization tools to be connected to the KUKA Sunrise Cabinet robot controller.

The interface was realized as an example using the simulation software V-REP PRO and is supplied together with Java sources.



V-REP PRO can be obtained from <http://www.coppeliarobotics.com/>. The license terms governing the commercial use of the simulation software must be observed.



This documentation describes V-REP PRO only to the extent necessary for understanding the interface. Further information is contained in the simulation software operating instructions.

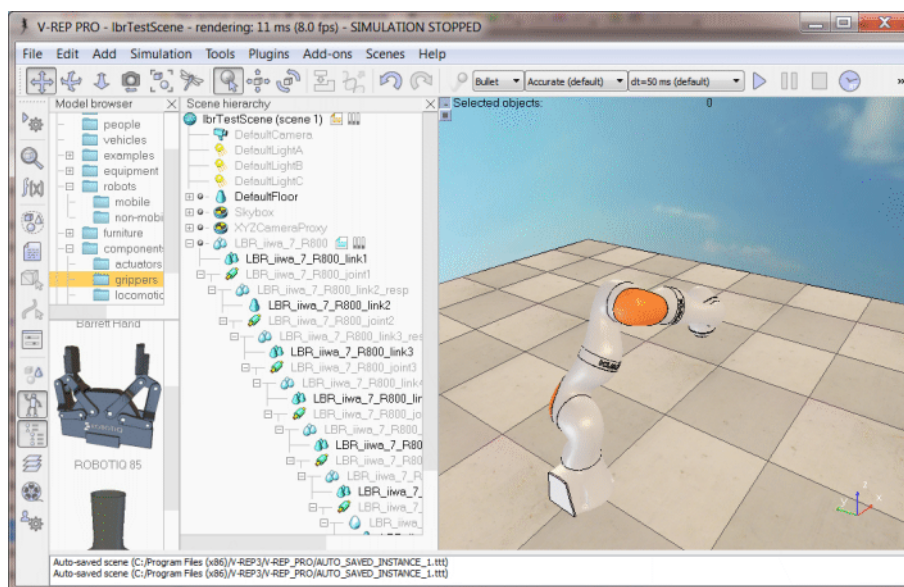


Fig. 3-2: Scene with LBR iiwa in V-REP PRO (example)

#### Functions

The following functionalities are available in the Rendering interface:

- Connection between V-REP PRO and the Sunrise project on the robot controller
- Configuration and starting of the visualization in V-REP PRO
- Activation of a live view
- Synchronization and visualization of the frame tree in V-REP PRO

#### Live view

The runtime data on the robot controller are available through the Rendering interface in Sunrise.Workbench and are displayed in V-REP PRO.



## 4 Safety

This documentation contains safety instructions which refer specifically to the product described here. The fundamental safety information for the industrial robot can be found in the “Safety” chapter of the following documentation:

- Operating or assembly instructions of the robot
- Operating and programming instructions for the System Software



The “Safety” chapter in the operating instructions or assembly instructions and in the operating and programming instructions must be observed. Death to persons, severe injuries or considerable damage to property may otherwise result.



The operator is responsible for performing his own risk and hazard analysis when using the robot under laboratory conditions. This applies in particular if humans must enter the robot's work envelope. We recommend having a separate supervisor with a suitable EMERGENCY STOP device. The risk analysis must give special attention to injuries caused by crushing, collision and sharp objects.



The SmartServo and DirectServo interfaces enable the implementation of closed control loops in the context of applications. The user is responsible for ensuring their stability. Unstable control loops can cause the overall system to vibrate and the robot to move otherwise than expected, although the robot addresses its destination correctly.



The SmartServo and DirectServo motion types enable destinations to be set online from the application. Changing the path parameters, the override setting or switching to T1 mode changes the robot path; the actual path cannot be predicted. Applications with online destination setting must always be carefully tested first in Manual Reduced Velocity mode (T1).



When servo motions are executed in T1 mode, only the velocity of the robot flange is monitored at 250 mm/s.



**WARNING** In the SmartServo and DirectServo motion types, the path planning is carried out by the application. Due to their fast destination setting changes, the actual system response will differ from the response specified by the manufacturer. The stopping distances and times specified in the operating and assembly instructions of the LBR iiwa are not valid. The user is responsible for determining the application-specific stopping distances and times.





## 5 Installation

### 5.1 System requirements

<b>Hardware</b>	■ KUKA LBR iiwa
	■ KUKA Sunrise Cabinet
<b>Software</b>	■ KUKA Sunrise.Workbench 1.5
	■ KUKA Sunrise.OS 1.5

### 5.2 Installing the SmartServo command library

<b>Procedure</b>	1. Open the station configuration of the Sunrise project and select the <b>Software</b> tab.
	2. Select the <b>Smart Servo Motion Extension</b> software package for installation. <ul style="list-style-type: none"> <li>■ Set the check mark in the <b>Install</b> column.</li> </ul>
	3. Save the station configuration. The system asks whether the modifications to the project should be accepted. Click on <b>Save and apply</b> . The command library of the SmartServo motion class is inserted in the Sunrise project and is available for robot programming.
	4. Install the system software on the robot controller (always required if the station configuration has been changed).

### 5.3 Installing the SmartServo catalog with application examples

<b>Procedure</b>	1. Open the station configuration of the Sunrise project and select the <b>Software</b> tab.
	2. Select the <b>Simple Tutorials for SmartServo</b> catalog for installation. <ul style="list-style-type: none"> <li>■ Set the check mark in the <b>Install</b> column.</li> </ul>
	3. Save the station configuration. The system asks whether the modifications to the project should be accepted. Click on <b>Save and apply</b> . The <b>com.kuka.roboticsAPI.smartServo.samples</b> package is created and inserted in the <b>Samples</b> folder of the Sunrise project.

### 5.4 Installing the DirectServo command library

<b>Procedure</b>	1. Open the station configuration of the Sunrise project and select the <b>Software</b> tab.
	2. Select the <b>Direct Servo Motion Extension</b> software package for installation. <ul style="list-style-type: none"> <li>■ Set the check mark in the <b>Install</b> column.</li> </ul>
	3. Save the station configuration. The system asks whether the modifications to the project should be accepted. Click on <b>Save and apply</b> . The command library of the DirectServo motion class is inserted in the Sunrise project and is available for robot programming.
	4. Install the system software on the robot controller (always required if the station configuration has been changed).

### 5.5 Installing the DirectServo catalog with application examples


<b>Procedure</b>	1. Open the station configuration of the Sunrise project and select the <b>Software</b> tab.
------------------	--

2. Select the **Simple Tutorials for DirectServo** catalog for installation.
  - Set the check mark in the **Install** column.
3. Save the station configuration. The system asks whether the modifications to the project should be accepted. Click on **Save and apply**.  
The **com.kuka.roboticsAPI.directServo.samples** package is created and inserted in the **Samples** folder of the Sunrise project.

## 5.6 Installing the Rendering interface

- Precondition**
- V-REP PRO 3.1.3 or higher is installed.
  - The ZIP archive **com.kuka.rendering.repository-release** is available.

- Procedure**
1. Select the menu sequence **Help > Install new software....** The **Install** window is opened.
  2. Click on the **Add ...** button. The **Add Repository** window is opened.
  3. Click on the **Archive...** button. The **Repository archive** window is opened.
  4. Navigate to the directory in which the ZIP archive **com.kuka.rendering.repository-release** is saved.
  5. Select the ZIP archive and click on **Open**. The path to the archive is displayed in the **Add Repository** window.
  6. Confirm the path with **OK**. The entry **KUKA Rendering Features** is displayed in the **Install** window.

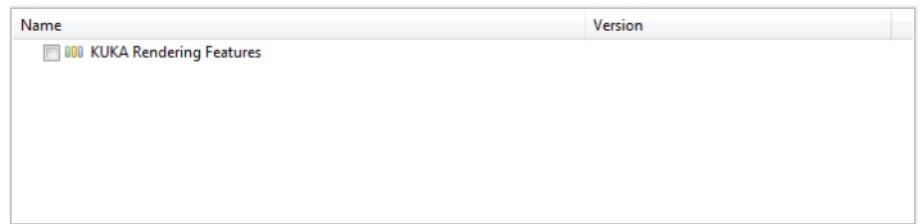

7. Set the check mark at **KUKA Rendering Features** and click on **Next >** klicken.
8. The component selected for installation is displayed. Confirm with **Next >**.
9. Accept the conditions of the license agreement and click on **Finish**. The installation is started.
10. If a security warning is displayed, confirm it with **OK**.
11. Sunrise.Workbench must be rebooted in order to complete the installation. This is indicated in a notification message. Click on the **Restart now** button.
12. Sunrise.Workbench is rebooted and the **Workspace Launcher** window is opened. Confirm the workspace by pressing **OK**.
13. If installation is successful, the **Rendering VREP** view is newly available in Sunrise.Workbench.  
Select the menu sequence **Window > Show View > Other...** and open the **Sunrise** folder. The installation is successful if the entry **Rendering VREP** is displayed.

### 5.6.1 Integrating V-REP PRO into the Rendering interface

- Description**
- In order to integrate the simulation software V-REP PRO into the Rendering interface, the following files must be manually copied into the V-REP PRO installation directory.

(Default installation directory for version V-REP PRO V3.x under Windows 7 64 bit: C:\Program Files (x86)\V-REP3\V-REP\_PRO)

- The file **remoteApiConnections.txt** (communication configuration) into the main directory ...\\V-REP\_PRO
- The file **vrepAddOnScript\_RenderingConnectorScript.lua** (add-on script) into the main directory ...\\V-REP\_PRO

KUKA provides the required files in a catalog which can be installed in Sunrise.Workbench.

### Procedure

1. Open the station configuration of the Sunrise project and select the **Software** tab.
2. Select the **Tools and Models for Rendering.VREP** catalog for installation.
  - Set the check mark in the **Install** column.
3. Save the station configuration. The system asks whether the modifications to the project should be accepted. Click on **Save and apply**.

The **Rendering.VREP** folder is created in the Sunrise project. The folder contains the files required for using V-REP PRO.



## 6 Operating the Rendering interface


### 6.1 “Rendering VREP” view

#### Procedure

Open the **Rendering VREP** view in Sunrise.Workbench:

1. Select the menu sequence **Window > Show View > Other...** and open the **Sunrise** folder.
2. Select the entry **Rendering VREP** and confirm with **OK**.

#### Overview

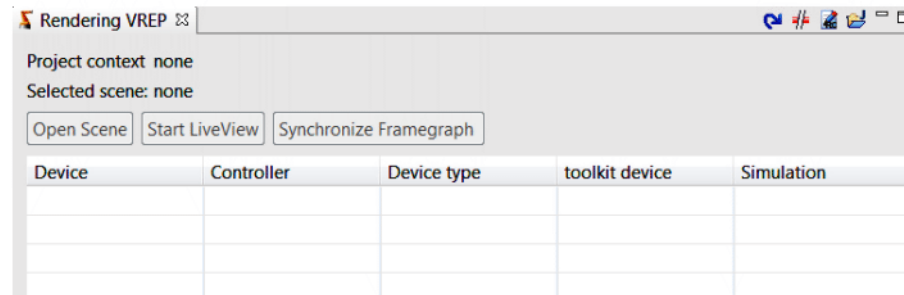

**Fig. 6-1: “Rendering VREP” view (without link and project reference)**

The following buttons are available:

Icon	Name / description
	<b>Synchronize configuration</b> Refreshes the configuration of the interface and activates the configuration. Required after the following events: <ul style="list-style-type: none"> <li>■ The station configuration in Sunrise.Workbench has been changed.</li> <li>■ Robots have been reconfigured or the robot configuration has been changed in V-REP PRO.</li> <li>■ The connection to the real robot has been interrupted.</li> </ul>
	<b>Stop LiveView</b> Ends the live view in V-REP PRO
	<b>Select scene</b> Opens the <b>Select scene</b> window. A scene projected in V-REP PRO can be selected.
	<b>Select project</b> Opens the <b>Select project</b> window. A Sunrise project can be selected.

The following buttons are available:

Button	Description
<b>Load scene</b>	Loads the selected scene in V-REP PRO. The button is only active if a Sunrise project has been selected.

Button	Description
<b>Start LiveView</b>	Starts the live view in V-REP PRO. (>>> 6.3 "Starting live view" Page 23)
<b>Synchronize frame graph</b>	Sends the frames created in the application data to V-REP PRO and displays them there. (>>> 6.4 "Synchronizing frames" Page 23)

## 6.2 Configuring the Rendering interface for V-REP PRO

### Precondition

- V-REP PRO has been started.
- At least one scene has been configured with an LBR iiwa in V-REP PRO.
- Network connection to the robot controller

### Procedure

1. Select the Sunrise project.
  - a. Click on the **Select project** button. The **Select project** window with the available Sunrise projects opens.
  - b. Select the desired Sunrise project and confirm with **OK**. The name of the selected Sunrise project is displayed in the **Rendering VREP** view.
2. Select a scene.
  - a. Click on the **Select scene** button. The **Select scene** window opens.
  - b. Select the **Open** button and navigate to the directory where the desired scene is located.
  - c. Select the desired scene and load it with **Open**. The path to the scene is displayed in the **Select scene** window.
  - d. Close the window by clicking on **OK**. The name of the selected scene is displayed in the **Rendering VREP** view.
3. Click on the **Load scene** button. The selected scene is loaded in V-REP PRO.
4. The robots configured for the scene are available in the **Toolkit device** column.

Select the robot here which is to be displayed in the live view later.

The settings are automatically saved in the Sunrise project.

### Description

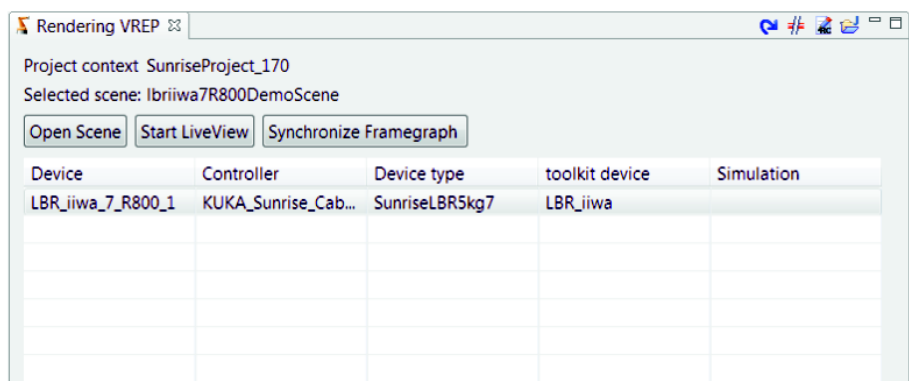


Fig. 6-2: "Rendering VREP" view (with link and fully configured)



If there is no longer a connection to the real robot, the row containing this device is displayed in red text.

### 6.3 Starting live view

- Precondition**
- The Rendering interface is configured.
  - V-REP PRO has been started.
  - Network connection to the robot controller
- Procedure**
- Click on the **Start LiveView** button to start the live view in V-REP PRO.

### 6.4 Synchronizing frames

- Precondition**
- The Rendering interface is configured.
  - V-REP PRO has been started.
- Procedure**
- Click on the **Synchronize Framegraph** button to send the frames created in the application data to V-REP PRO.
- The newly created frames can be used in V-REP PRO for further modeling.





## 7 Programming

### 7.1 Servo motion in an application context

#### Overview

The figure shows the basic program sequence when executing a servo motion.

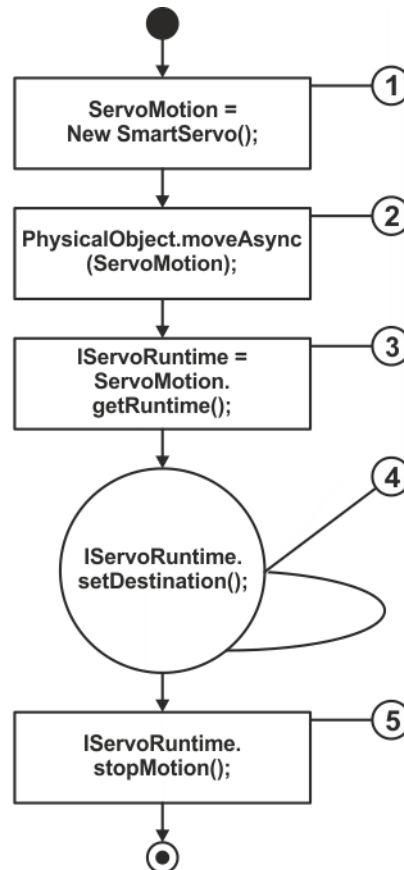



Fig. 7-1: Servo motion in an application context

Item	Description
1	Create an instance of the servo motion, here an instance of the SmartServo motion class.
2	Activate the servo motion with moveAsync(...).  The real-time system on the robot controller executes the servo motion. The robot application continues.
3	Call the runtime environment with getRuntime(). The runtime environment is provided as soon as the robot is available.  The application data are updated with the real-time system data provided by the runtime instance of IServoRuntime. These data, e.g. the current robot position, velocity or acceleration, are available for further calling.

Item	Description
4	<p>Set new end points with <code>setDestination(...)</code> (cyclically during the runtime of the robot motion).</p> <p>Once an end position has been reached, the robot maintains this position for a defined time. Once this time has elapsed, the servo motion is automatically ended (timeout after the time defined in the variable <code>timeoutAfterGoalReach</code>), provided that no new end point has been set or that the servo motion is ended with <code>stopMotion()</code>.</p> <p>(&gt;&gt;&gt; 7.6 "Destination reached and timeouts" Page 34)</p>
5	<p>End the servo motion with <code>stopMotion()</code>.</p> <p>The robot application continues.</p>

## 7.2 Simple destination setting with `setDestination(...)`

The figure schematically illustrates the fine interpolation of the robot over time:

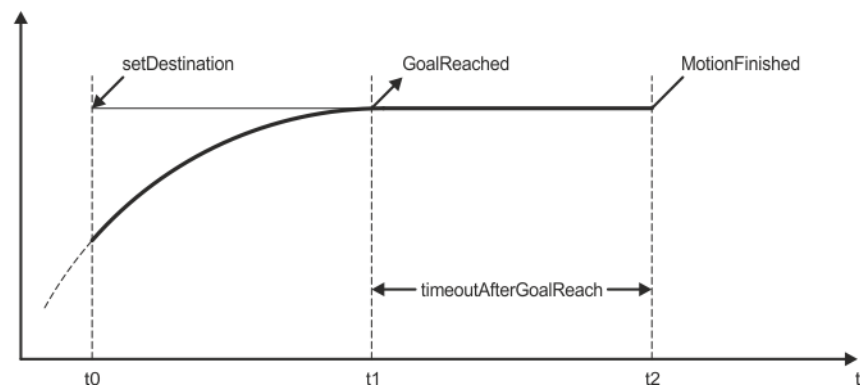

**Fig. 7-2: Time diagram in an application context, basic behavior**

The current velocity and position are applied in the application planning at the initial time **t0**. This results in a jerk-limited path being planned to the end position, with the specified maximum velocity being taken into account. With the SmartServo motion type, the maximum acceleration and maximum jerk are additionally taken into consideration.

At time **t1**, which is a result of the constraints, the precision interpolator reaches the specified destination state. The event `IServoOnGoalReachedEvent(...)` is triggered in the SmartServo motion type.

The precision interpolator then remains in the destination state for the time period specified in the variable `timeoutAfterGoalReach`. Once this time period has elapsed, the servo motion is deactivated.


## 7.3 Cyclical destination setting with `setDestination(...)`

The `IServoRuntime` interface provides the functionality which allows the destination for the runtime of the motion command `moveAsync(...)` to be changed:

```
IServoRuntime theRuntime = ServoMotion.getRuntime();
...
theRuntime.setDestination(destination);
```



The `updateWithRealtimeSystem()` method is executed by calling the `setDestination(...)` method. This updates the application data with the real-time system data. A manual update is therefore not required. By calling the `stopMotion()` method, the motion can be stopped at any time.

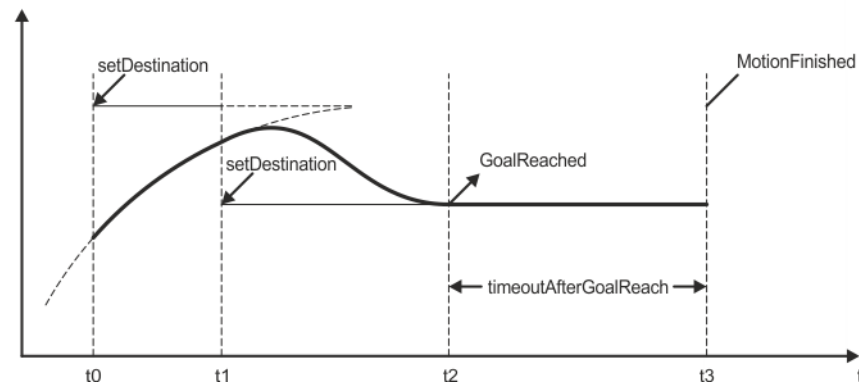

**Fig. 7-3: Time diagram in an application context, replacing a destination setting prematurely**

A destination is set at time  $t_0$ . By calling the `setDestination(...)` method again at time  $t_1$  while the destination set in  $t_0$  is being addressed, the precision interpolator takes destination  $t_1$  into its planning and discards the destination from  $t_0$ . When calculating the new end point from the destination for  $t_1$ , the precision interpolator includes the current velocity.

The result is a smooth path motion to the new destination.



The event `GoalReached()` is only triggered when the interpolator has reached the destination state. The figure (>>> Fig. 7-3) shows that the destination set at time  $t_0$  is not reached, as the new destination setting at time  $t_1$  has overwritten the original destination setting. In this way, the event `IServoOnGoalReachedEvent(...)` refers to the reaching of the end position from the call of the `setDestination(...)` method at time  $t_1$ .

## 7.4 Seconds hand effect

Destinations set serially with the `setDestination(...)` method can achieve very fluid motion. However, if the specified end point is reached before the next destination is set, this leads to a “seconds hand” effect, in spite of the jerk-limited path motion.


### NOTICE

The robot may be damaged if the seconds hand effect occurs. KUKA is not liable for damage resulting from the continuous operation of the robot with the seconds hand effect.

If the seconds hand effect occurs, this is manifested by buzzing/whistling and jerky movement of the robot. This effect can generally be attributed to incorrect time coordination between the robot application and the robot controller.



In the case of fast destination settings, text outputs on the smartHMI should be avoided, as these require computing time.

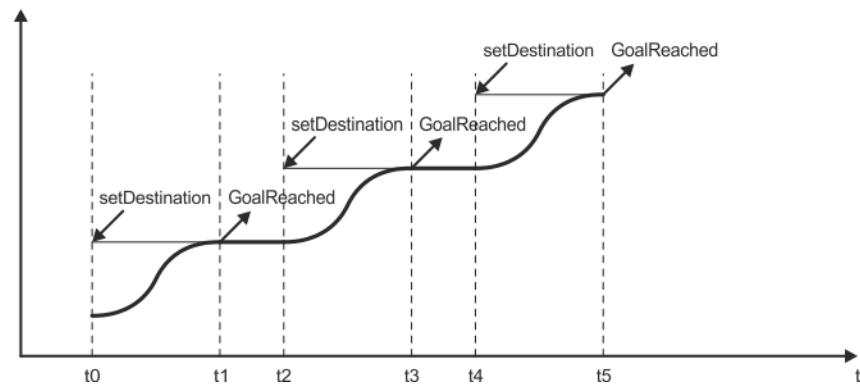

**Fig. 7-4: Servo motion with seconds hand effect**

Measures for avoiding the seconds hand effect can be found here:

(>>> 11.2 "Robot makes jerky motions/whistles – avoiding the seconds hand effect" Page 70)

## 7.5 IServoRuntime class

The IServoRuntime runtime environment is available as soon as the motion itself has been activated by the moveAsync(...) method.

The methods available in the runtime environment are divided into the following groups:

- Handling the real-time system
  - Time stamp
  - State of the precision interpolator
- Axis-specific interface
  - Reading out of axis positions
  - Setting of axis-specific setpoint positions
- Cartesian interface
  - Reading out of Cartesian positions
  - Setting of Cartesian setpoint positions

### 7.5.1 Handling the real-time system

When using time stamps, it must be ensured that the Java system time and real-time system time are not synchronized. The runtime environment provides process data which are updated, either when setting the destination with the setDestination(...) method or when the updateWithRealtimeSystem() method is explicitly called.

#### 7.5.1.1 Polling time stamps

##### Description

Each interaction with the real-time system returns a time stamp. The following time stamps are available and can be polled:

- Time stamp of the last setpoint command:

```
long IServoRuntime.getTimeStampOfSetRealtimeDestination()
```

This time stamp refers to the arrival of the last command set to the robot controller by calling the setDestination(...) method.

- Time stamp of the last update:

```
long IServoRuntime.getTimeStampOfUpdate()
```

This time stamp refers to the last update time by calling the `updateWithRealtimeSystem()` method.

## Overview

The overview shows the relationship between runtime data and the respective time stamp.

Runtime data	Method	Time stamp
Axis-specific destination setting with <code>setDestination(...)</code>	<code>getCurrentJointDestination()</code>	<code>getTimeStampOfSetRealtimeDestination()</code>
Cartesian destination setting with <code>setDestination(...)</code>	<code>getCurrentCartesianDestination()</code>	
Interpolator state	<code>getFinelipoState()</code>	<code>getTimeStampOfUpdate()</code>
	<code>isDestinationReached()</code>	
Expected time until destination is reached	<code>getRemainingTime()</code>	
Instantaneous setpoint position in the kernel system	<code>getCommandResultOfInterpolation()</code>	
Actual position	<code>getAxisQMSrOnController()</code>	
Variance of the force estimate	<code>getVariance()</code>	
Interaction force on the flange	<code>getExtForceMsr()</code>	
	<code>getExtForceVector()</code>	
Axis-specific interaction torque	<code>getExtTorqueVector()</code>	
	<code>getAxisTauExtMsr()</code>	

### 7.5.1.2 Polling the state of the precision interpolator

#### Description

In order to obtain current information when polling the precision interpolator, an update must first be carried out.

(>>> 7.5.1 "Handling the real-time system" Page 28)

The SmartServo motion type provides an event mechanism which signals that the destination has been reached.

(>>> 7.7 "Receiving the GoalReached event (SmartServo only)" Page 34)

#### Syntax

- Poll of whether the robot has reached the set destination:

```
boolean IServoRuntime.hasFineIpoGoalReached()
```

- Poll of how long (in seconds) the robot still requires to reach the current set destination:

```
double IServoRuntime.getRemainingTime()
```

### 7.5.1.3 Reading out and displaying debug information

#### Description

All values which are read out, e.g. the setpoint and actual position, the access timing statistics or the current interpolator state, can be displayed as debug information on the smartHMI.

The text output is executed with the `IServoRuntime.toString()` method:

```
getLogger().info("aTextForGood " + RuntimeInstance.toString());
```

The amount of detail with which this debug information is displayed can be defined with the `setDetailedOutput(...)` method.

#### Syntax

```
void IServoRuntime.setDetailedOutput(int levelOfVerbosity)
```

**Explanation of the syntax**

Element	Description
<i>levelOfVerbosity</i>	Amount of detail with which the debug information is displayed <ul style="list-style-type: none"> <li>1: Standard information</li> <li>2: Information which extends beyond the standard</li> <li>3: All available information</li> </ul>

**7.5.2 Axis-specific interface****7.5.2.1 Specifying an axis-specific end position**

**Description** An axis-specific end position can be specified with `setDestination(...)`.



When the DirectServo motion type is used, the destinations may be at a maximum distance of 5° from the current actual position.

**Syntax**

```
long IServoRuntime.setDestination(JointPosition newDestination)
```

**Explanation of the syntax**

Element	Description
<i>newDestination</i>	Axis-specific end position which is to be addressed The axis angles of axes A1 ... A7 must be specified (type: double; unit: rad).

**Return value** Time stamp of the command registration by the robot controller.

**7.5.2.2 Specifying an axis-specific end position with a target velocity**

**Description** In the SmartServo motion type, it is possible to additionally specify the axis-specific velocity with which the end position is to be addressed using `setDestination(...)`.

**Syntax**

```
long ISmartServoRuntime.setDestination(JointPosition newDestination, JointSpeed newSpeed)
```

**Explanation of the syntax**

Element	Description
<i>newDestination</i>	Axis-specific end position which is to be addressed The axis angles of axes A1 ... A7 must be specified (type: double; unit: rad).
<i>newSpeed</i>	Axis-specific velocity with which the end position is to be addressed (unit: rad/s) <b>Note:</b> This parameter is only available for the SmartServo motion type.

**Return value** Time stamp of the command registration by the robot controller.

**7.5.2.3 Reading out the axis-specific actual position**

**Description** The current axis-specific actual position can be read out with `getCurrentJointDestination()`.

**Syntax**

```
JointPosition IServoRuntime.getCurrentJointDestination()
```

**Return value** Current axis-specific actual position.

### 7.5.3 Cartesian interface

#### 7.5.3.1 Setting a Cartesian destination in the robot base coordinate system

**Description** A new Cartesian destination can be set in the robot base coordinate system with `setDestination(...)`.

**Syntax**

```
long IServoRuntime.setDestination(AbstractFrame destination);
```

**Explanation of the syntax**

Element	Description
<i>destination</i>	Cartesian destination in the robot base coordinate system. The robot flange or a frame subordinated to the flange is moved in the robot base coordinate system, e.g. the TCP of a tool.

**Return value** Time stamp of the command registration by the robot controller.

**Example**

```
theRuntime.setDestination(XYZ_Frame);
```

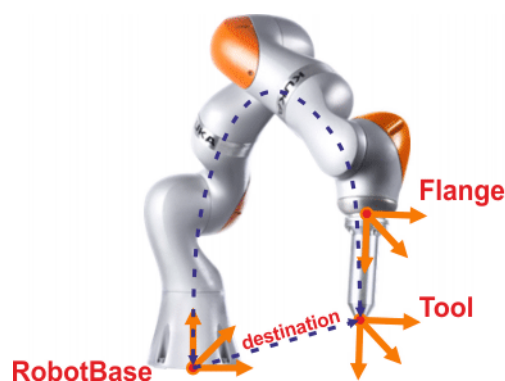


Fig. 7-5: Destination in the robot base

#### 7.5.3.2 Specifying a Cartesian destination in the reference coordinate system

**Description** A new Cartesian destination can optionally be specified in an additional reference coordinate system with `setDestination(...)`.

**Syntax**

```
long IServoRuntime.setDestination(AbstractFrame destination, AbstractFrame reference);
```

**Explanation of the syntax**

Element	Description
<i>destination</i>	Cartesian destination in the reference coordinate system. The robot flange or a frame subordinated to the flange is moved in the reference coordinate system, e.g. the TCP of a tool.
<i>reference</i>	Reference coordinate system with a static connection to the robot base.

**Return value** Time stamp of the command registration by the robot controller.

**Example**

```
theRuntime.setDestination(XYZ_Frame, refFrame);
```

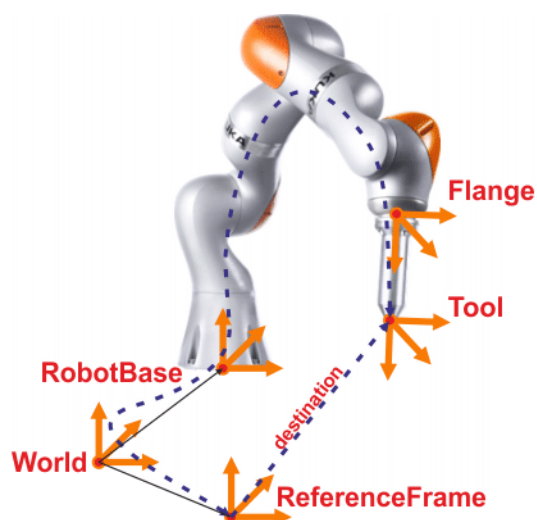


Fig. 7-6: Destination in the reference coordinate system

### 7.5.3.3 Reading out a Cartesian actual position in the robot base coordinate system

**Description** The current Cartesian actual position of the robot relative to the robot base coordinate system can be read out with `getCurrentCartesianPosition(...)`.

**Syntax** `Frame IServoRuntime.getCurrentCartesianPosition(Abs-tractFrame frameOnFlange);`

**Explanation of the syntax**

Element	Description
<i>frameOnFlange</i>	The robot flange or a frame subordinated to the flange whose Cartesian position is polled, e.g. the TCP of a tool.

**Return value** Cartesian actual position of the frame *frameOnFlange* relative to the robot base coordinate system. The value is updated with `updateWithRealtimeSystem()`.

(>>> 7.5.1 "Handling the real-time system" Page 28)

(>>> 7.5.1.1 "Polling time stamps" Page 28)

**Example**

```
Frame currentPose =
theRuntime.getCurrentCartesianPosition(XYZ_Frame);
```

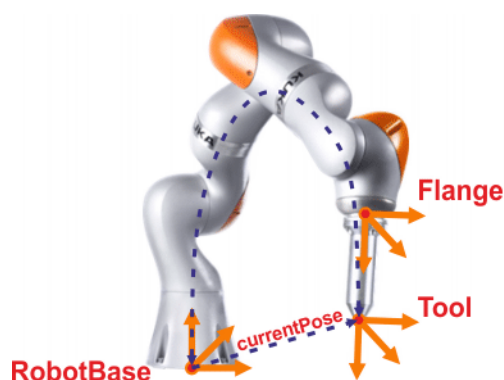


Fig. 7-7: Actual position in the robot base



### 7.5.3.4 Reading out the Cartesian actual position in the reference coordinate system

**Description** The current Cartesian actual position of the robot relative to a certain reference coordinate system can be read out with `getCurrentCartesianPosition(...)`.

**Syntax** `Frame IServoRuntime.getCurrentCartesianPosition(AbstractFrame frameOnFlange, AbstractFrame reference);`

**Explanation of the syntax**

Element	Description
<i>frameOnFlange</i>	The robot flange or a frame subordinated to the flange whose Cartesian position is polled, e.g. the TCP of a tool.
<i>reference</i>	Reference coordinate system relative to which the Cartesian position is polled. If no reference coordinate system is specified, the Cartesian position refers to the world coordinate system.

**Return value** Cartesian actual position of the frame *frameOnFlange* relative to the reference coordinate system. The value is updated with `updateWithRealtimeSystem()`.

(>>> 7.5.1 "Handling the real-time system" Page 28)

(>>> 7.5.1.1 "Polling time stamps" Page 28)

**Example**

```
Frame currentPose =
    theRuntime.getCurrentCartesianPosition(XYZ_FrameTool, XYZ_FrameRef);
```

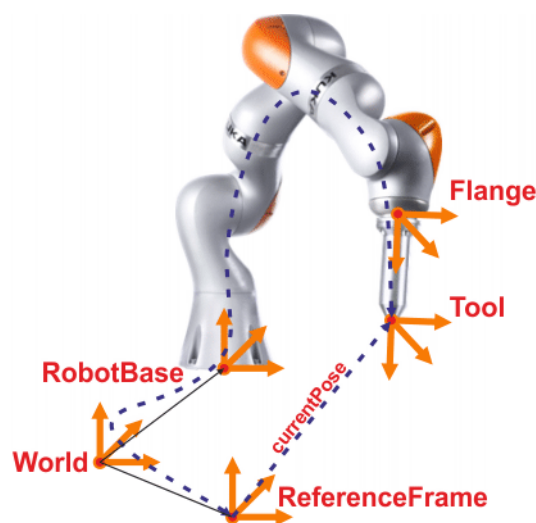


Fig. 7-8: Actual position in the reference coordinate system

### 7.5.4 Terminating a servo motion


**Description** A servo motion can be terminated at any time using the `stopMotion()` method, irrespective of the status of the application or the robot.

The current robot motion is braked and no further destination set with `setDestination(...)` is applied. If a subsequent motion is programmed with `move(...)`/`moveAsync(...)` in the robot application, the robot motion is continued.

**Syntax** `boolean IServoRuntime.stopMotion()`

## 7.6 Destination reached and timeouts

A state diagram illustrates the relationship between the reaching of the destination and the timeout. The state diagram shows the inner state machine of the precision interpolator. The `isDestinationReached()` method contained in the `IServoRuntime` class returns a state value of the data type Boolean when polled. Other state information is not significant for the application, as this information is too short-lived.

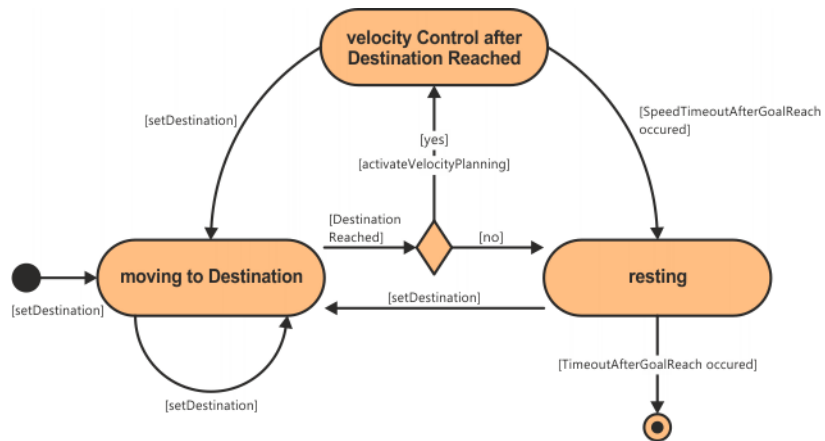

**Fig. 7-9: Destination reached and timeouts (state diagram)**

- If a new destination setting is sent with the `setDestination(...)` method, the precision interpolator jumps to the “moving” state.
- As long as a motion remains to be carried out, the precision interpolator of the real-time controller is in the “moving” state.
- Once the destination has been reached, the velocity of the destination state remains in the “velocityAfterGoalReach” state.
  - This state is only reached if the velocity planning is activated, i.e. if the variable `activateVelocityPlanning` has been set to “true”.
  - When using the SmartServo motion type and specifying a new axis-specific end position, the destination velocity can be determined with the `setDestination(...)` method.
  - The duration of the velocity to be maintained in the “velocityAfterGoalReach” state is defined with the `setSpeedTimeoutAfterGoalReach(...)` method.
- Following the “VelocityAfterGoalReached” or “moving” state, the precision interpolator goes into the “resting” state.
- The “resting” state is terminated after the time defined in the variable `timeoutAfterGoalReach` has elapsed. The default value is 120 seconds.
- Every state can be terminated with the `stopMotion()` command at any time.

## 7.7 Receiving the GoalReached event (SmartServo only)

In order to receive notification by means of the `onGoalReachedEvent(...)` event that the destination has been reached, the `SampleGoalReachedEventListener` listener must be registered at the `IServoRuntime` interface. This is done by calling the `setGoalReachedEventHandler(...)` method. The `SampleGoalReachedEventListener` listener must be derived from the `IServoOnGoalReachedEvent` class.

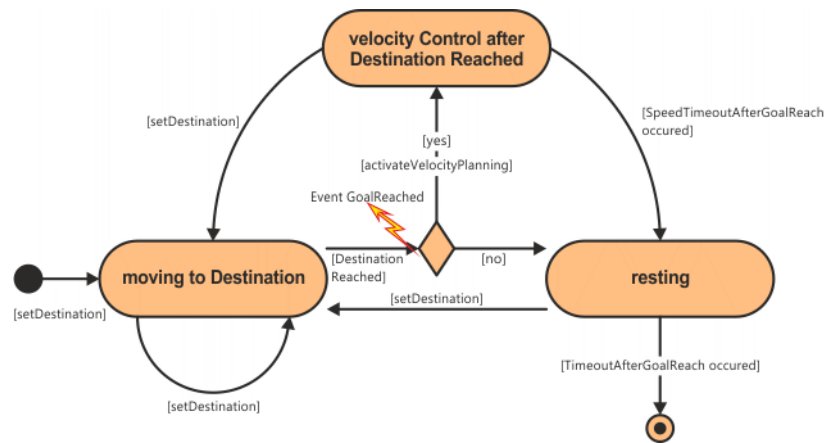


Fig. 7-10: Receiving the GoalReached event (SmartServo only)

```

/**
 * Simple Implementation of an
 * GoalReachedEventHandler.Increase a local counter
 * and print an error message if a goal was reached.
 */
private class SampleGoalReachedEventListener
    implements IServoOnGoalReachedEvent
{
    @Override
    public void onGoalReachedEvent(String state,
        double[] currentAxisPos, int[] osTimestamp)
    {
        _count++;
        if (theSmartServoRuntime.isDestinationReached())
        {
            getLogger().info("ok");
        }
    }
}

```

The listener must implement the onGoalReachedEvent(...) method.

## 7.8 Changing the path parameters

The path parameters velocity, acceleration and jerk can be set before a servo motion is activated. The preset performance parameters refer to a full load in the extended position.

In order to fully exploit the performance reserves of the robot, the acceleration and jerk can optionally be increased with SmartServo. The overrideJointAcceleration(...) and setJointJerk(...) methods are used for this. The performance reserves are directly dependent on application-specific parameters, e.g. the load and the robot configuration.



Under certain circumstances, depending on the load and the robot configuration, the robot can no longer follow the desired path. It stops moving and an error message is generated.

### Overview

The following configurable path parameters are available for SmartServo and DirectServo:

Method	Description	SmartServo	DirectServo
ServoMotion.setJointVelocityRel(...)	Maximum axis velocity (type: double, unit: %) ■ 0 ... 1	✓	✓
ServoMotion.setJointAccelerationRel(...)	Acceleration (type: double, unit: %) ■ 0 ... 1	✓	✗
SmartServo.overrideJointAcceleration(...)	Acceleration magnification (type: double, unit: factor) ■ 0 ... 20	✓	✗
SmartServo.setJointJerk(...)	Jerk (type: double, unit: %) ■ 0 ... 1500	✓	✗

## 7.9 Time recording

### 7.9.1 Measuring the application cycle time

Two timers integrated by KUKA and a freely usable timer for the user are available for time measurement. The timers can be used for logging recurring events.

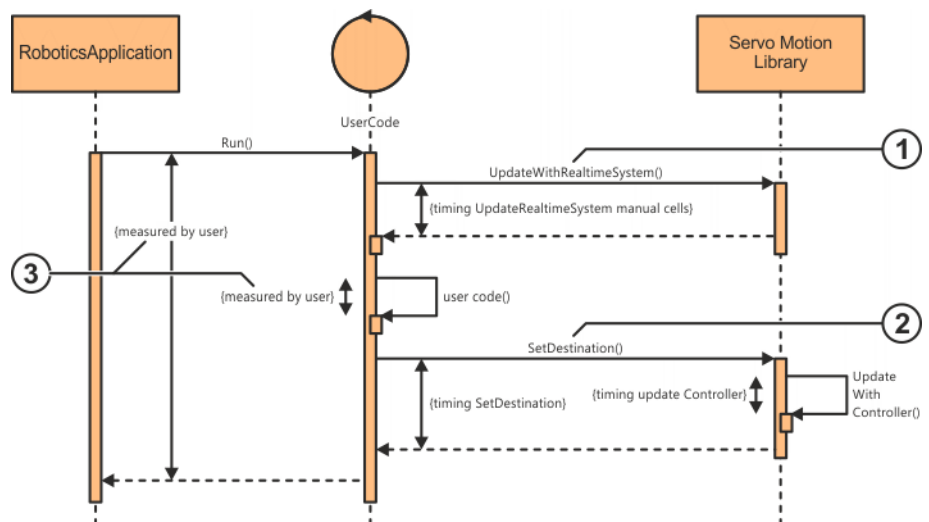


Fig. 7-11: Time measurement

- 1 Timer UpdateWithRealtimeSystem() (predefined)
- 2 Timer SetDestination() (predefined)
- 3 User-defined timer (StatisticTimer class)

#### KUKA timers

The two predefined timers are executed by calling the `updateWithRealtimeSystem()` method, and indirectly by calling the `setDestination(...)` method.

The statistics of the internal timers can be output using the `toString()` method of the `IServoRuntime` class.

#### User timer

The freely usable timer is provided by the `StatisticTimer` class. This saves the number of measurements as well as the shortest, average and longest measured cycle times.

For the `StatisticTimer` class to be available, it must itself be instantiated:

```
import com.kuka.common.StatisticTimer;
import com.kuka.common.StatisticTimer.OneTimeStep;
...
StatisticTimer timing = new StatisticTimer();
```

Starting an individual measurement:

```
OneTimeStep aStep = timing.newTimeStep();
```

Stopping the measurement:

```
aStep.end();
```

Displaying the memory content of the StatisticTimer class on the smartHMI:

```
getLogger().info("Statistic Timing of Overall Loop " +
    timing.toString());
```

The display contains the number n of measurements and the statistic T of the cycle times. Statistic T contains the shortest, average and longest cycle times.

```
Statistic Timing of Overall Loop n(20687) T(0.91, 1.92, 6.36 msec)
(stdDev 0.36)
```



More information about the StatisticTimer class is contained in Java-doc.

## 7.10 Impedance control

**⚠ WARNING** In impedance control, incorrectly selected parameters (e.g. incorrect load data, incorrect tool) or incorrect information (e.g. from defective torque sensors) can be interpreted as external forces, resulting in unpredictable motions of the robot.

**⚠ WARNING** In order to avoid hazards caused by unpredictable motions, a robot's maximum permissible range of motion and maximum permissible velocity must be limited under impedance control. The limit values for the maximum deviation and velocity must be selected as appropriate for the application and must be low enough.

### 7.10.1 Validating the load model for impedance control

**Description** In order to use servo motions with a robot under impedance control, a validation must be carried out once during the runtime of the application.

A precondition for the validation is that the robot is in a well-conditioned position, e.g. it must not be in a singularity position.

**Example** The impedance control is validated with `SmartServo.validateForImpedanceMode(...)`. If the validation is invalid, a message is displayed on the smartHMI.

```
if (SmartServo.validateForImpedanceMode(_toolAttachedToLBR) != true)
{
    getLogger().info("Validation of Torque Model failed");
}
```

## 7.10.2 Activating impedance control

When activating a servo motion with `moveAsync(...)`, the control type used must be transferred to the motion as a parameter. The `setMode(...)` method is used for this purpose.

```
_toolAttachedToLBR.getDefaultMotionFrame().moveAsync(  
    aSmartServoMotion.setMode(controlMode));
```

## 7.10.3 Changing controller parameters during the runtime

**Description** With the `changeControlModeSettings(...)` method, it is possible to change the controller parameters with which the servo motion was started. The control type itself cannot be changed during the servo motion.

**Precondition**

- The load model for impedance control has been validated.
- The control type was set when the servo motion was activated.

**Syntax**

```
void IServoRuntime.changeControlModeSettings(IMotion-  
ControlMode controlMode)
```

Element	Description
<i>controlMode</i>	Controller object which contains the controller parameters to be changed during the runtime of the servo motion.

**Overview** The following parameters for each control type can be changed with the `changeControlModeSettings(...)` method during the runtime:

Controller	Changeable parameters	Method
Cartesian impedance controller	Data type: <code>CartesianImpedanceControlMode</code>	
	Spring stiffness	<code>setStiffness(...)</code>
	Spring damping	<code>setDamping(...)</code>
	Spring stiffness of the redundancy degree of freedom	<code>setNullSpaceStiffness(...)</code>
	Spring damping of the redundancy degree of freedom	<code>setNullSpaceDamping(...)</code>
Cartesian impedance controller with overlaid force oscillation	Data type: <code>CartesianSinImpedanceControlMode</code>	
	Amplitude of the force oscillation	<code>setAmplitude(...)</code>
	Frequency of the force oscillation	<code>setFrequency(...)</code>
	Phase offset of the force oscillation	<code>setPhaseDeg(...)</code>
	Constant force overlaid in addition to the force oscillation	<code>setBias(...)</code>
	Force limitation of the force oscillation	<code>setForceLimit(...)</code>
	Maximum deflection due to the force oscillation	<code>setPositionLimit(...)</code>
	Rise time of the force oscillation	<code>setRiseTime(...)</code>
	Hold time of the force oscillation	<code>setHoldTime(...)</code>
	Fall time of the force oscillation	<code>setFallTime(...)</code>

**Example**

New spring stiffness values are defined for a Cartesian impedance controller:

```
if (controlMode instanceof CartesianImpedanceControlMode)
{
    ...
    final CartesianImpedanceControlMode cartImp =
        (CartesianImpedanceControlMode) controlMode;
    final double aTransStiffVal =
        Math.max(100. * (i / (double) _numRuns + 1), 1000.);
    final double aRotStiffVal =
        Math.max(10. * (i / (double) _numRuns + 1), 150.);
    cartImp.parametrize(CartDOF.TRANSL).setStiffness(aTransStiffVal);
    cartImp.parametrize(CartDOF.ROT).setStiffness(aRotStiffVal);
}
```

**⚠ WARNING**

If the selected spring stiffness is insufficient, the robot cannot follow the destination setting correctly due to internal friction. This can result in spontaneous motions if the internal friction is overcome as a result of subsequent destination settings.

The new stiffness values are set in the runtime environment with the `changeControlModeSettings(...)` method:

```
...
theSmartServoRuntime.changeControlModeSettings(cartImp);
}
```

**⚠ WARNING**

The robot can move unexpectedly under impedance control. The maximum permissible Cartesian deviation from the path and the maximum permissible Cartesian force on the TCP must be restricted to such an extent that no injuries or damage to property can result.

The following methods are available for setting the Cartesian limitation:

- `setMaxPathDeviation(...)`:  
Limitation of the maximum Cartesian deviation from the path
- `setMaxControlForce(...)`:  
Limitation of the maximum force on the TCP

```
final CartesianImpedanceControlMode cartImp =
    new CartesianImpedanceControlMode();

cartImp.parametrize(CartDOF.TRANSL).setStiffness(1000.0);
cartImp.parametrize(CartDOF.ROT).setStiffness(100.0);
cartImp.setNullSpaceStiffness(100.0);

cartImp.parametrize(CartDOF.TRANSL).setMaxPathDeviation(50.0);
cartImp.parametrize(CartDOF.ROT).setMaxPathDeviation(1.0);
```

#### 7.10.4 Transition between control types

**Description**

With servo motions, it is not possible to change the control type within a motion instance. For this reason, the motion must be replaced by a new motion instance. It is only possible to change to the new control type when the running motion instance has ended.

A new servo motion is instanced with `moveAsync(...)`. If the first motion is still in progress and is then terminated by a defined condition or the `stopMotion()` command, for example, the motion sections switch over seamlessly due to the internal functionalities in the real-time area.

The same technique must be used for all motion-specific parameters which cannot be changed during the runtime. This applies, for example, to load reversals (mass parameters change with gripping) or the like.



The correct load parameters must be observed when superimposing! These are motion-specific.

### Example

A first SmartServo motion is active. A second SmartServo motion is sent to the real-time system with `moveAsync(...)`. (>>> 8.1.3 "SmartServoSampleInteractionControl application" Page 59)

```
final SmartServo secondSmartServoMotion =
    newSmartServo(initialPosition);
...
_toolAttachedToLBR.getDefaultMotionFrame().
    moveAsync(secondSmartServoMotion);
...
final ISmartServoRuntime theSecondRuntime =
    secondSmartServoMotion.getRuntime();
```

The actual transfer occurs in the following instruction in which the SmartServo motion to be replaced (theFirstRuntime) is terminated.

```
theFirstRuntime.stopMotion();
```


Starting at this point in time, the second runtime environment (theSecondRuntime) is activated and carries out motion commands in the system.

## 7.11 Feedback effect for servo motions

### Description

When using the SmartServo and DirectServo motion types, feedback may occur as a control-related secondary effect. This effect is comparable to the feedback from an overloaded microphone through the loudspeaker to which it is connected.

Robot applications using standard motions send destination settings to the robot controller without including position feedback in their destination setting calculation.

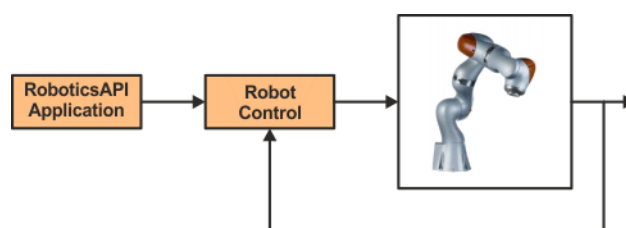


**Fig. 7-12: Destination setting for standard motions**

For servo motions, by contrast, position feedback is included in the destination setting calculation. Depending on various parameters, there may be overloaded destination settings on the robot controller, and these may gradually oscillate. This can be compared to the low input attenuation of a microphone which is too close to a coupled loudspeaker.




### Example 1: visual servoing

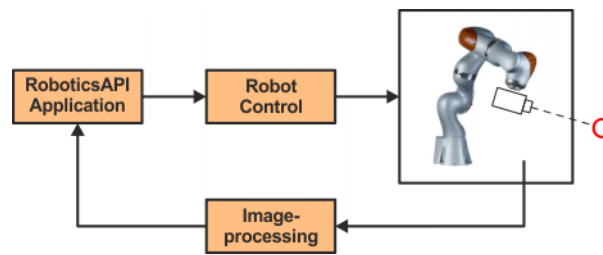

**Fig. 7-13: Destination setting for servo motions, visual servoing example**

For a visual servoing application, the robot is to keep the red circle in the center of the camera screen. The camera image is then recorded and evaluated. In the tracking application, a control signal is calculated to control the robot. This control signal changes the recording point of the camera.


Figure (>>> Fig. 7-14 ) illustrates the signal flow of the control loop.

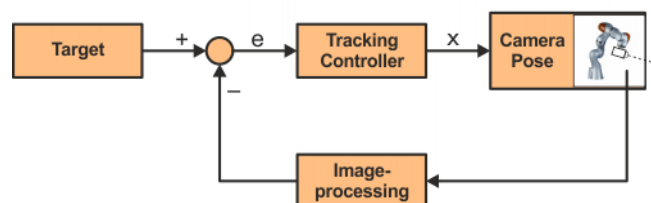

**Fig. 7-14: Control loop for signal flow, visual servoing example**

Here the activity of the robot and the robot controller are abstracted as a camera pose.

Figure (>>> Fig. 7-15 ) models both the camera pose and the image processing as ideal dead time elements  $Z^{-1}$ . The tracking controller is modeled as a dead time element with p gain.

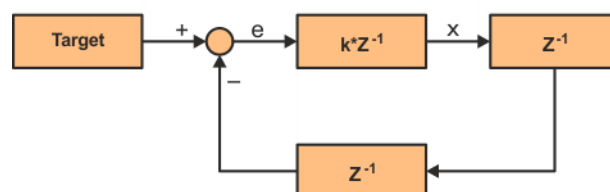

**Fig. 7-15: p gain, visual servoing example**

This results in a transfer function of:  $G(z) = 1 / (1 + kz^3)$

The roots of the characteristic polynomial thus depend on the gain factor  $k$  of the actual controller, the "tracking controller".

For  $k = 1$ , the control loop is critically stable.


This gives rise to the following conclusions:

- In practice, it is this control loop ( $k = 1$ ) which is unstable.
  - The pixel noise of the camera already leads to sustained oscillation of the overall system.
- Each subsystem is fully functional in itself.
- The gain  $k < 1$  (tracking controller) must be selected for stabilization.
  - Reduction of the robot performance (maximum velocity) in the camera pose.
  - Adaptation of the tracking controller.

- Suppression of the pixel noise in image processing.

### Example 2: adaptation

This example assumes a system with low performance which has a stable setting. The robot velocity has been reduced in order to achieve this stability.

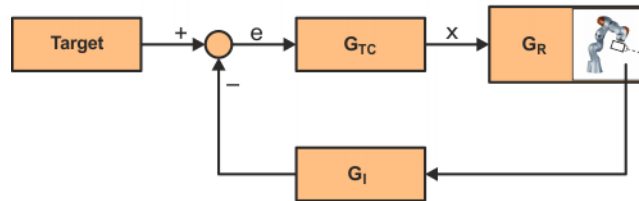

**Fig. 7-16: Adaptation, visual servoing example**

The aim is nevertheless to fully utilize the capacity of the robot. However, if the robot velocity is increased, the overall system can become unstable although each subsystem in itself is fully functional.

The following measures affect the stability of the overall system:

- Changing the maximum velocity or acceleration
- Changing between position control and impedance control
- Changing the impedance control
- Changing between the motion types SmartServo and DirectServo

Stabilization of the system can only be achieved if the application programming is adapted accordingly.

## 7.12 Step response of the systems

The following diagrams show the step responses for the motion types SmartServo and DirectServo.

The robot's start position is as follows at the beginning of the recording:

- $A1 = 0^\circ$
- $A2 = 30^\circ$
- $A3 = 0^\circ$
- $A4 = 40^\circ$
- $A5 = 0^\circ$
- $A6 = 90^\circ$
- $A7 = 0^\circ$



**Fig. 7-17: Start position**

### 7.12.1 SmartServo vs. DirectServo – comparison of axis positions over time

The following diagrams show the measured actual position of each axis over time. The blue line illustrates the commanded step ("tgt").

The green line represents the path of the SmartServo motion type with the default setting. The acceleration values are rated very conservatively here to ensure that the robot can still be operated safely in the worst case (extended position and load).

The red line represents the path of the DirectServo motion type.

Axis acceleration and jerk can be changed in the SmartServo motion type. The light blue line represents the SmartServo motion type with the following settings:

```
aSmartServoMotion.setJointJerk(500);  
aSmartServoMotion.overrideJointAcceleration(20);
```

## 7.12.1.1 Step response comparison of SmartServo vs. DirectServo, A1

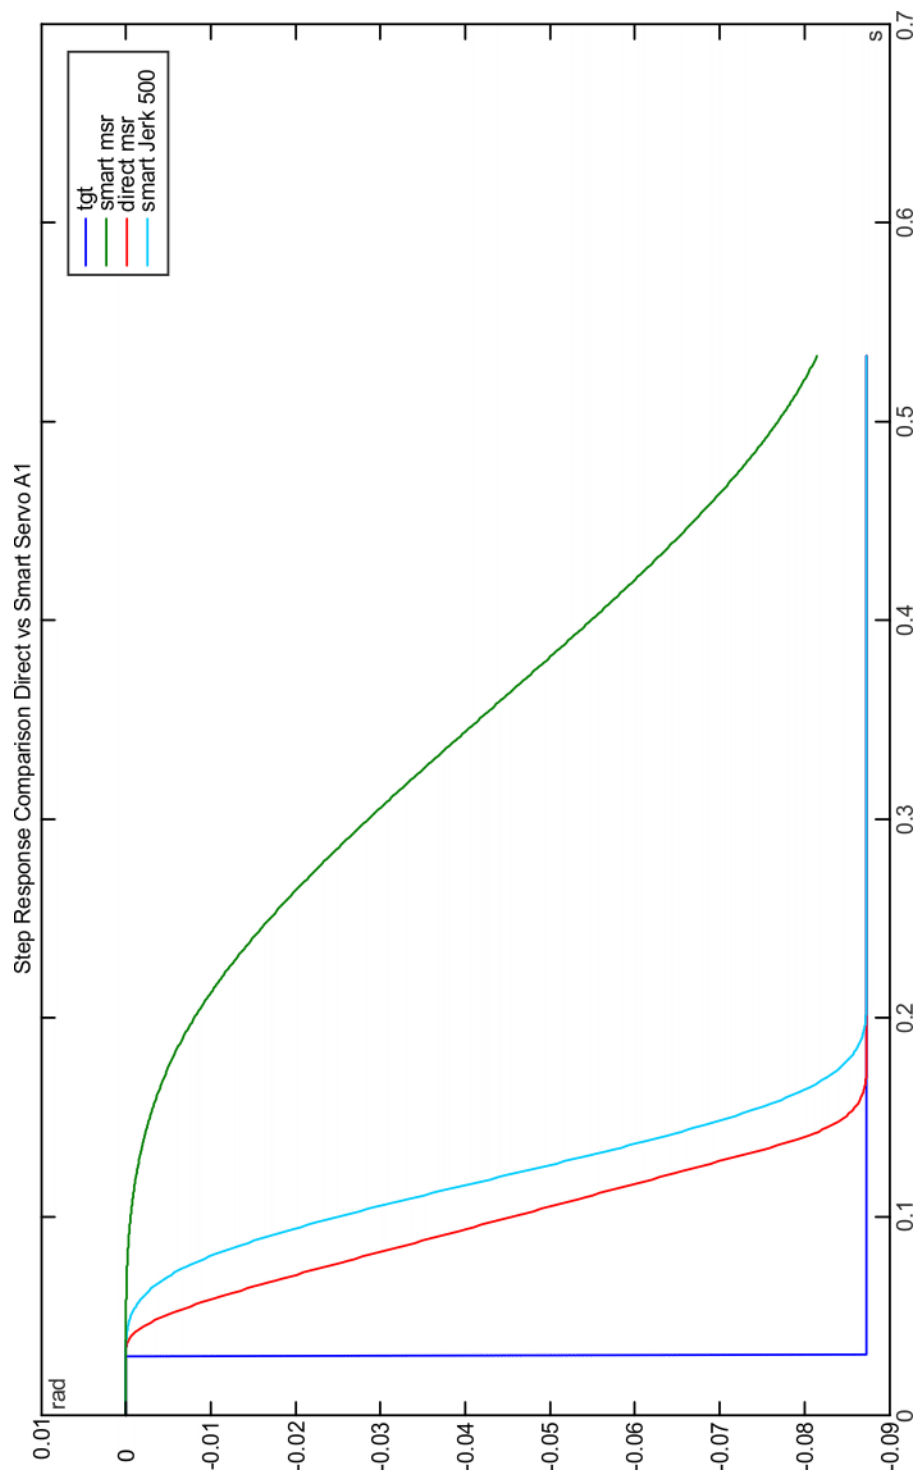


Fig. 7-18: Step response comparison of SmartServo vs. DirectServo, A1

## 7.12.1.2 Step response comparison of SmartServo vs. DirectServo, A2

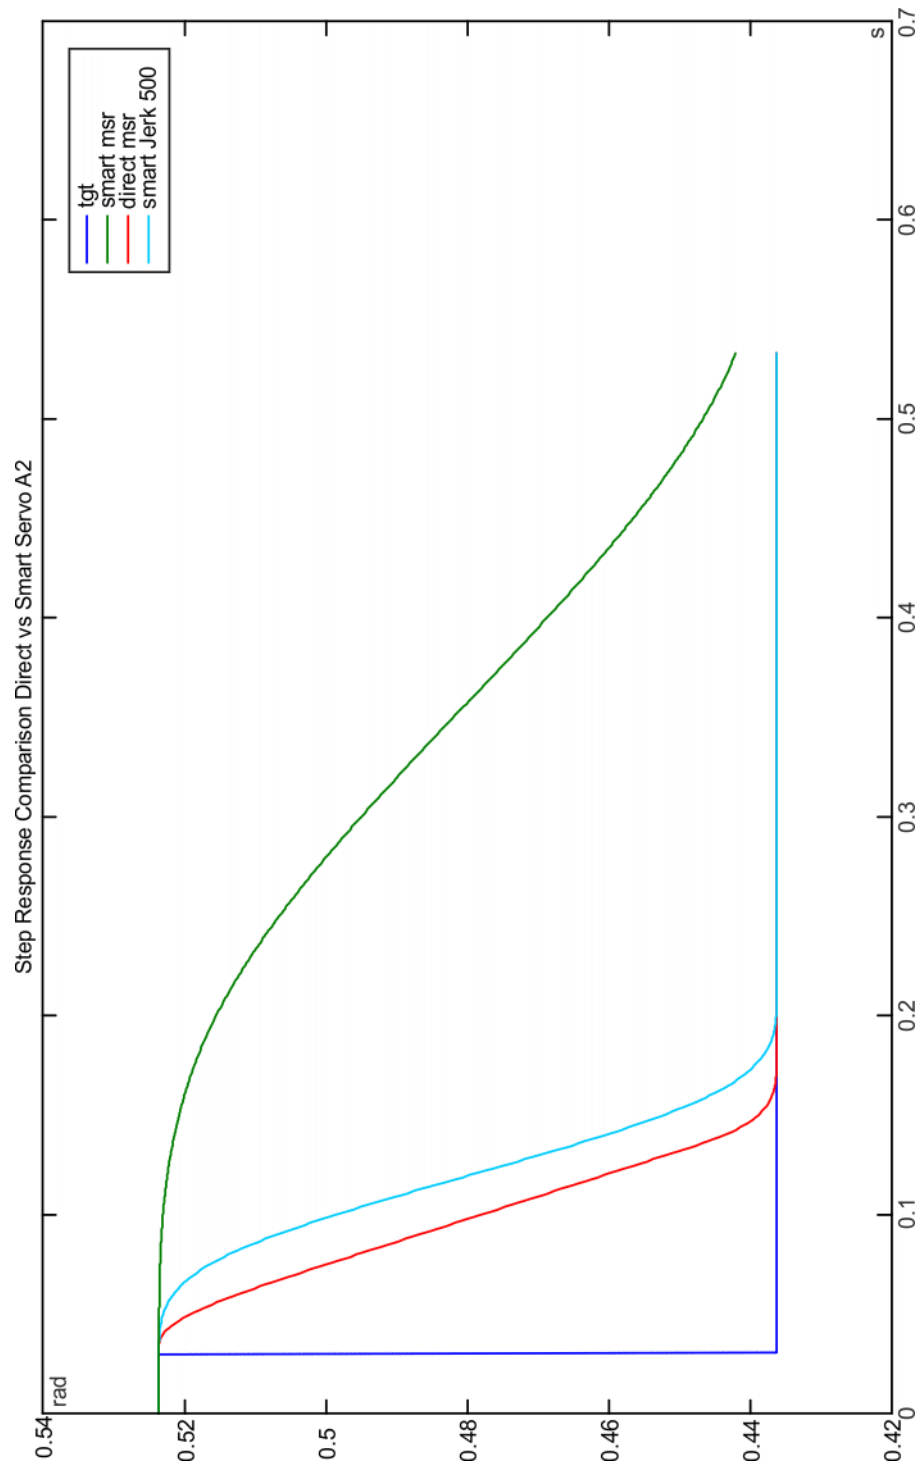


Fig. 7-19: Step response comparison of SmartServo vs. DirectServo, A2

## 7.12.1.3 Step response comparison of SmartServo vs. DirectServo, A3

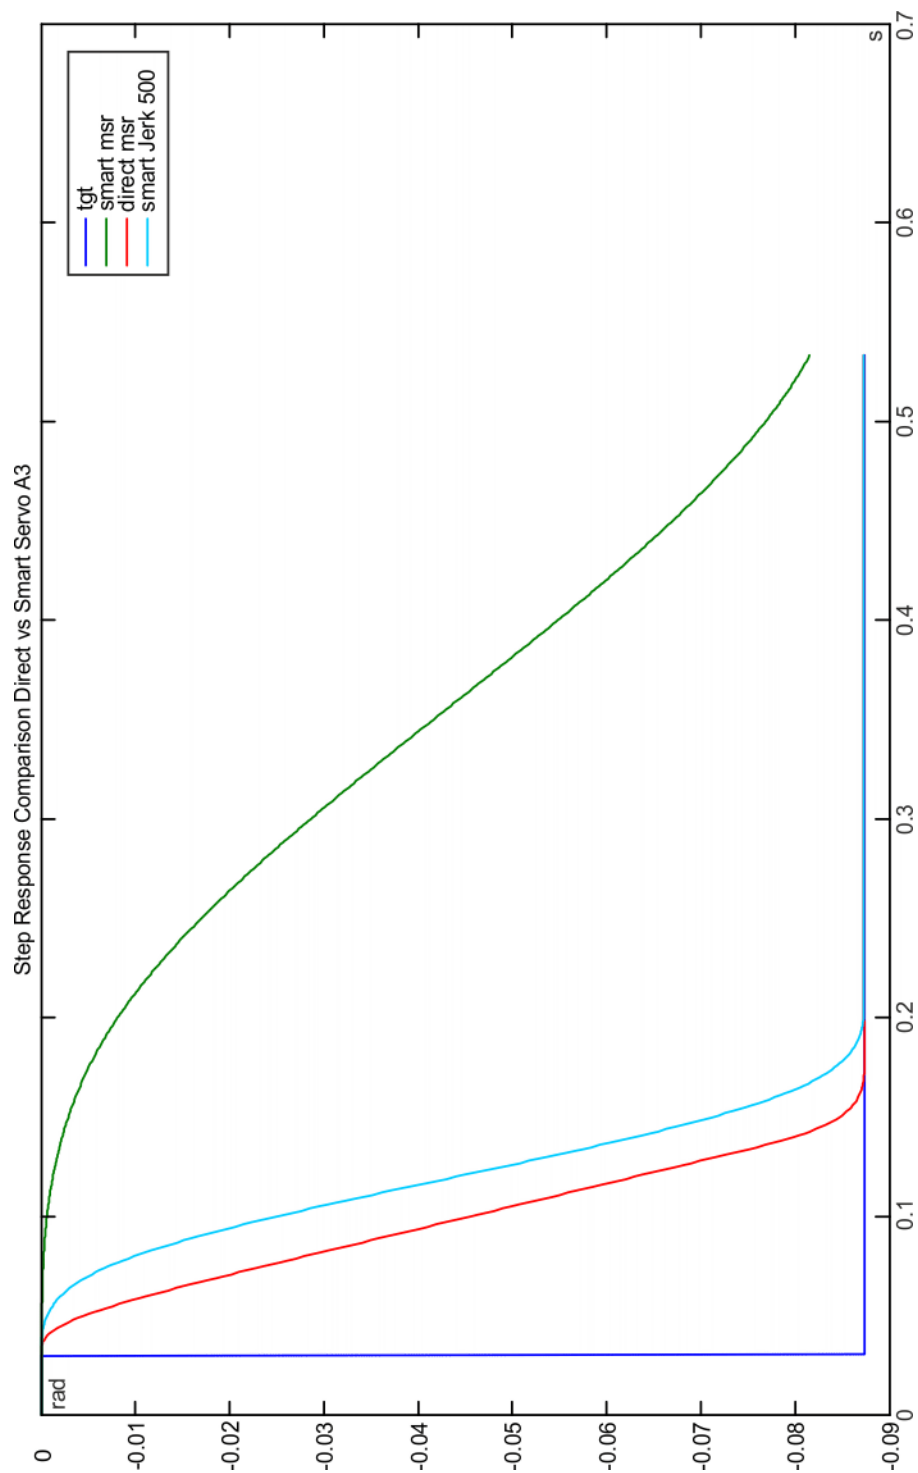


Fig. 7-20: Step response comparison of SmartServo vs. DirectServo, A3

## 7.12.1.4 Step response comparison of SmartServo vs. DirectServo, A4

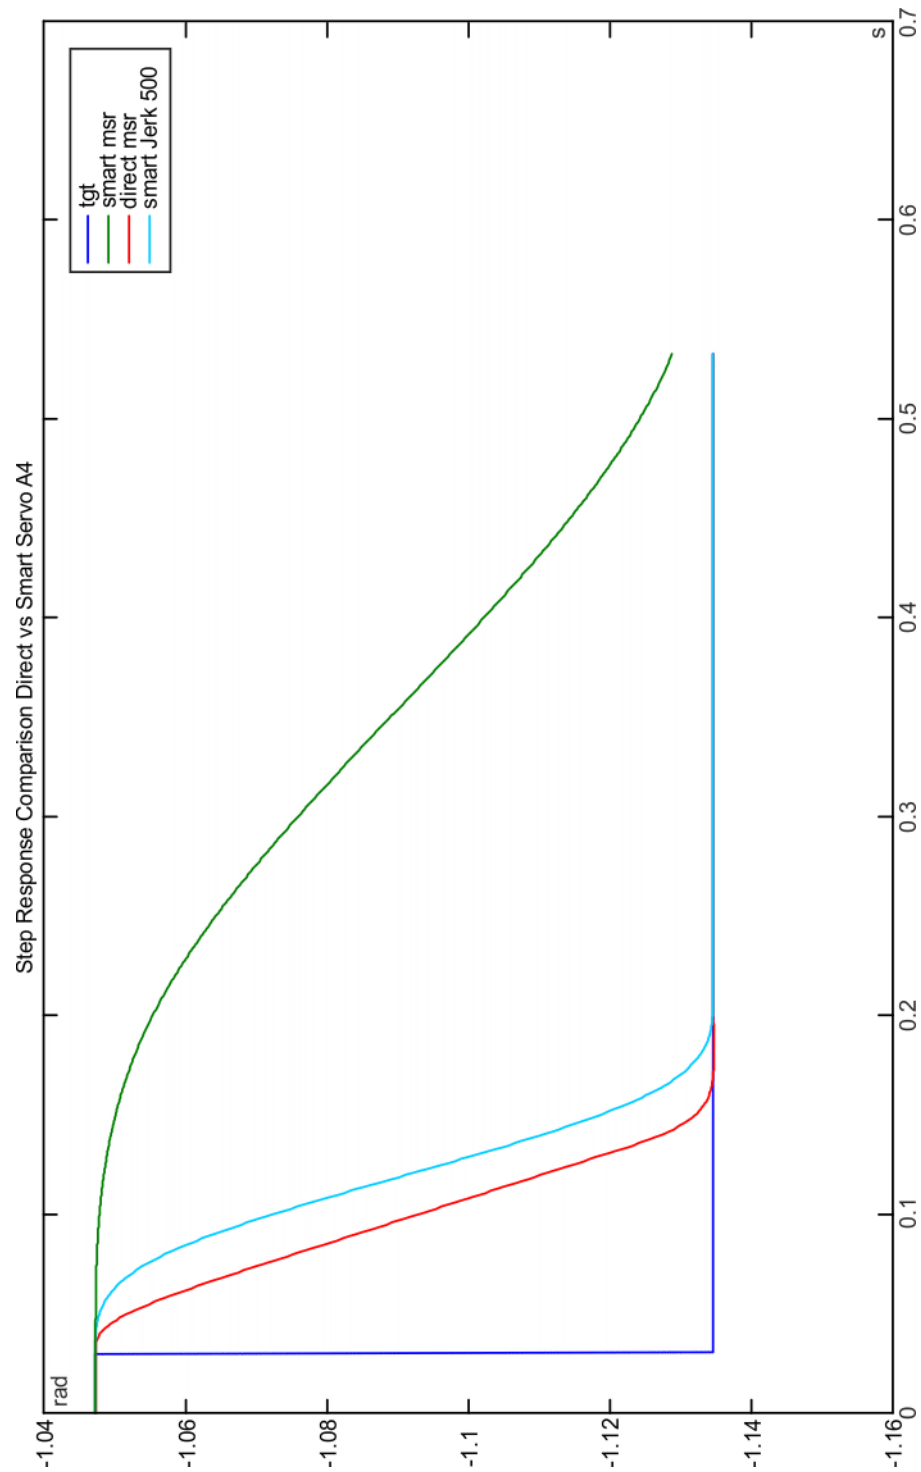


Fig. 7-21: Step response comparison of SmartServo vs. DirectServo, A4

## 7.12.1.5 Step response comparison of SmartServo vs. DirectServo, A5

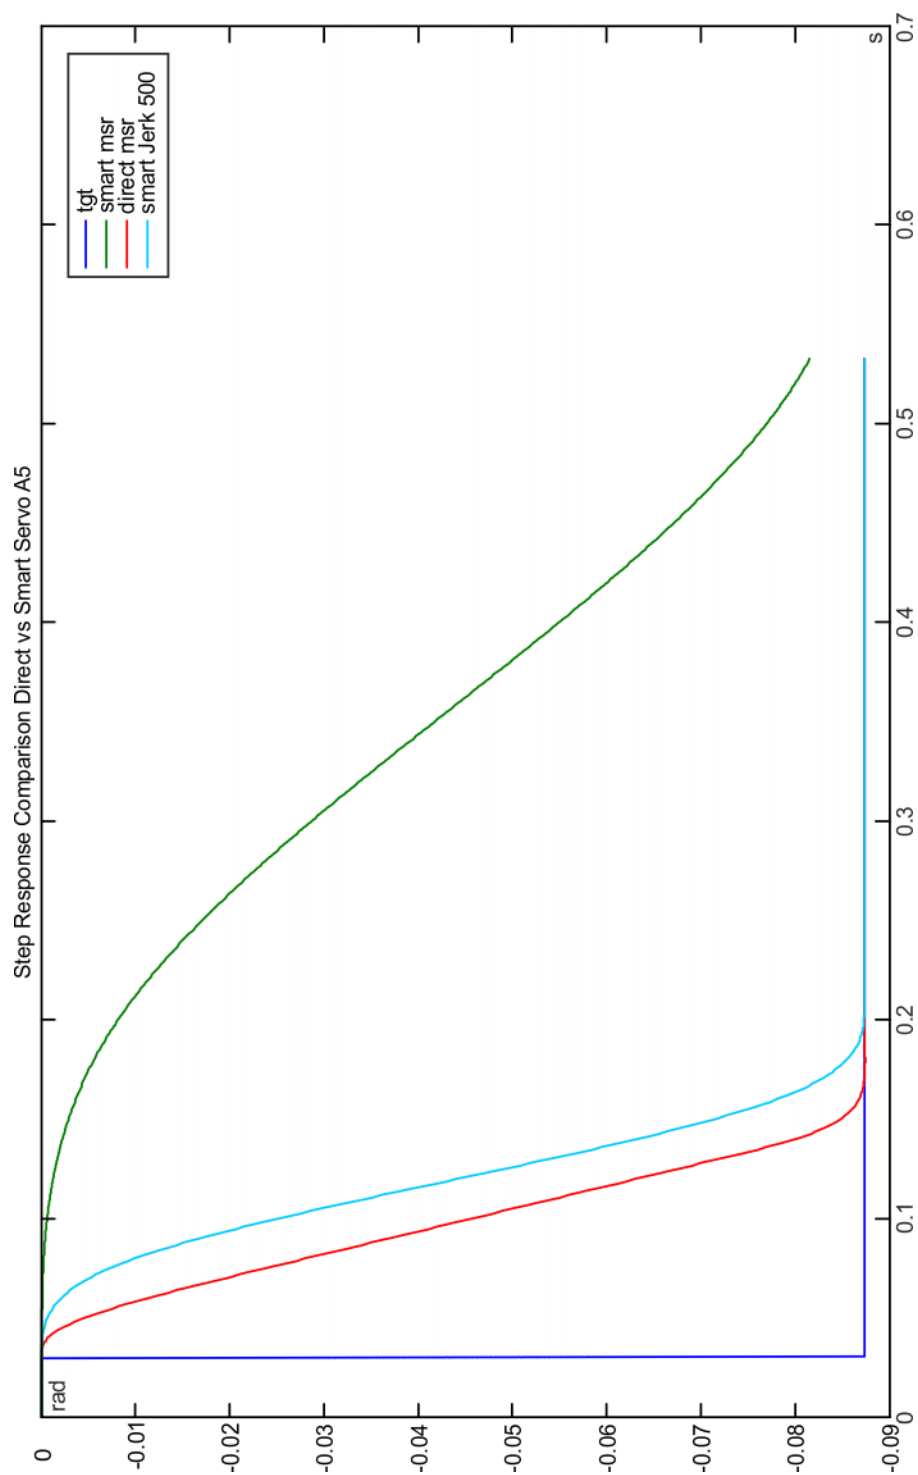


Fig. 7-22: Step response comparison of SmartServo vs. DirectServo, A5



## 7.12.1.6 Step response comparison of SmartServo vs. DirectServo, A6

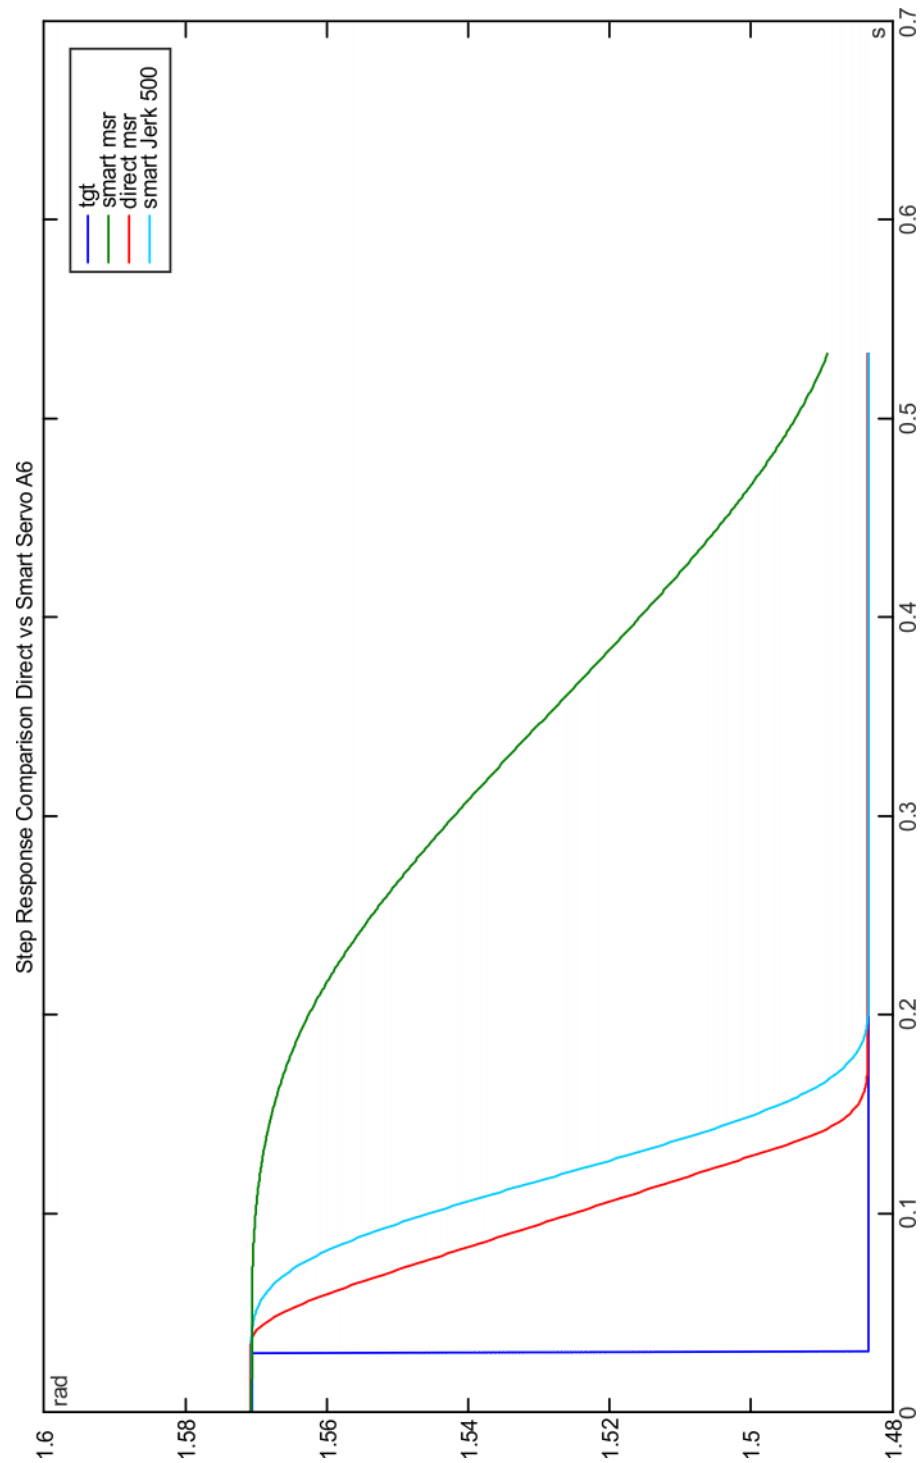


Fig. 7-23: Step response comparison of SmartServo vs. DirectServo, A6

### 7.12.1.7 Step response comparison of SmartServo vs. DirectServo, A7

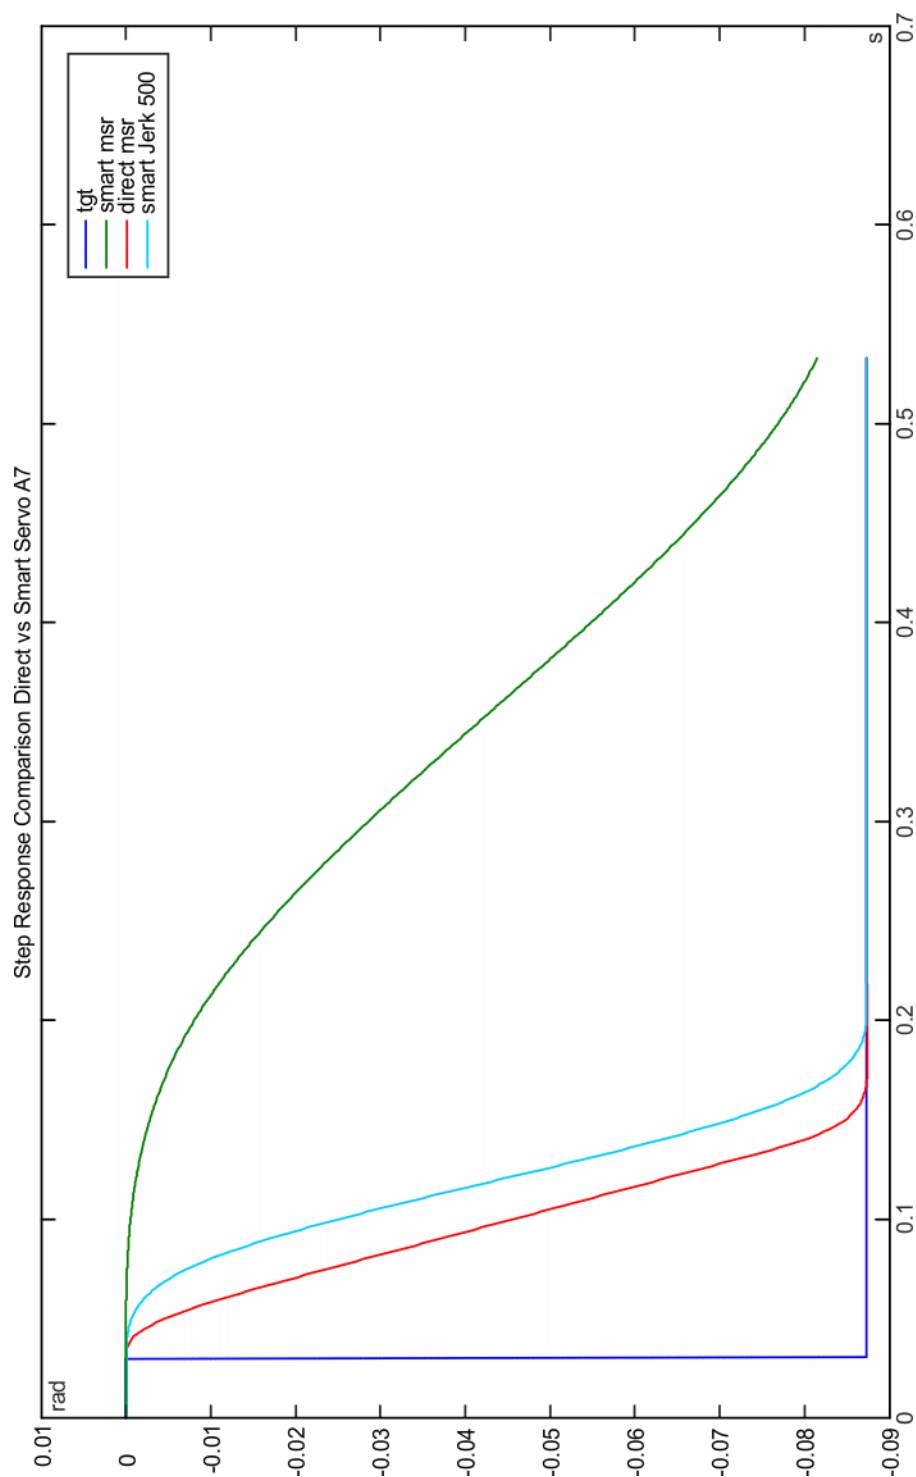


Fig. 7-24: Step response comparison of SmartServo vs. DirectServo, A7

### 7.12.2 SmartServo vs. DirectServo – comparison of velocity, acceleration, jerk

In addition to the position, the following diagrams show the velocity, acceleration and jerk of each axis.

The following insights can be gained from these recordings:

- Both motion types offer the opportunity to fully exploit the robot performance.

- Smoother paths can be realized with the SmartServo motion type than with the DirectServo motion type.
- Path planning must be carried out in the application for the DirectServo motion type. The jerk is applied directly to the drives.
- The response time for the DirectServo motion type (12 ms) is somewhat faster than for the SmartServo motion type (22 ms).

Due to the polynomial solution, the SmartServo motion type tends to oscillate in unfavorable configurations due to extremely fast destination settings of  $< 10$  ms and exceeded regulator limit. If this occurs and the regulator reserves are exhausted by `aSmartServoMotion.setJointJerk(500)` and `aSmartServoMotion.overrideJointAcceleration(20)`, the DirectServo motion type is recommended.

## 7.12.2.1 Step response comparison of SmartServo vs. DirectServo, A1 (advanced)

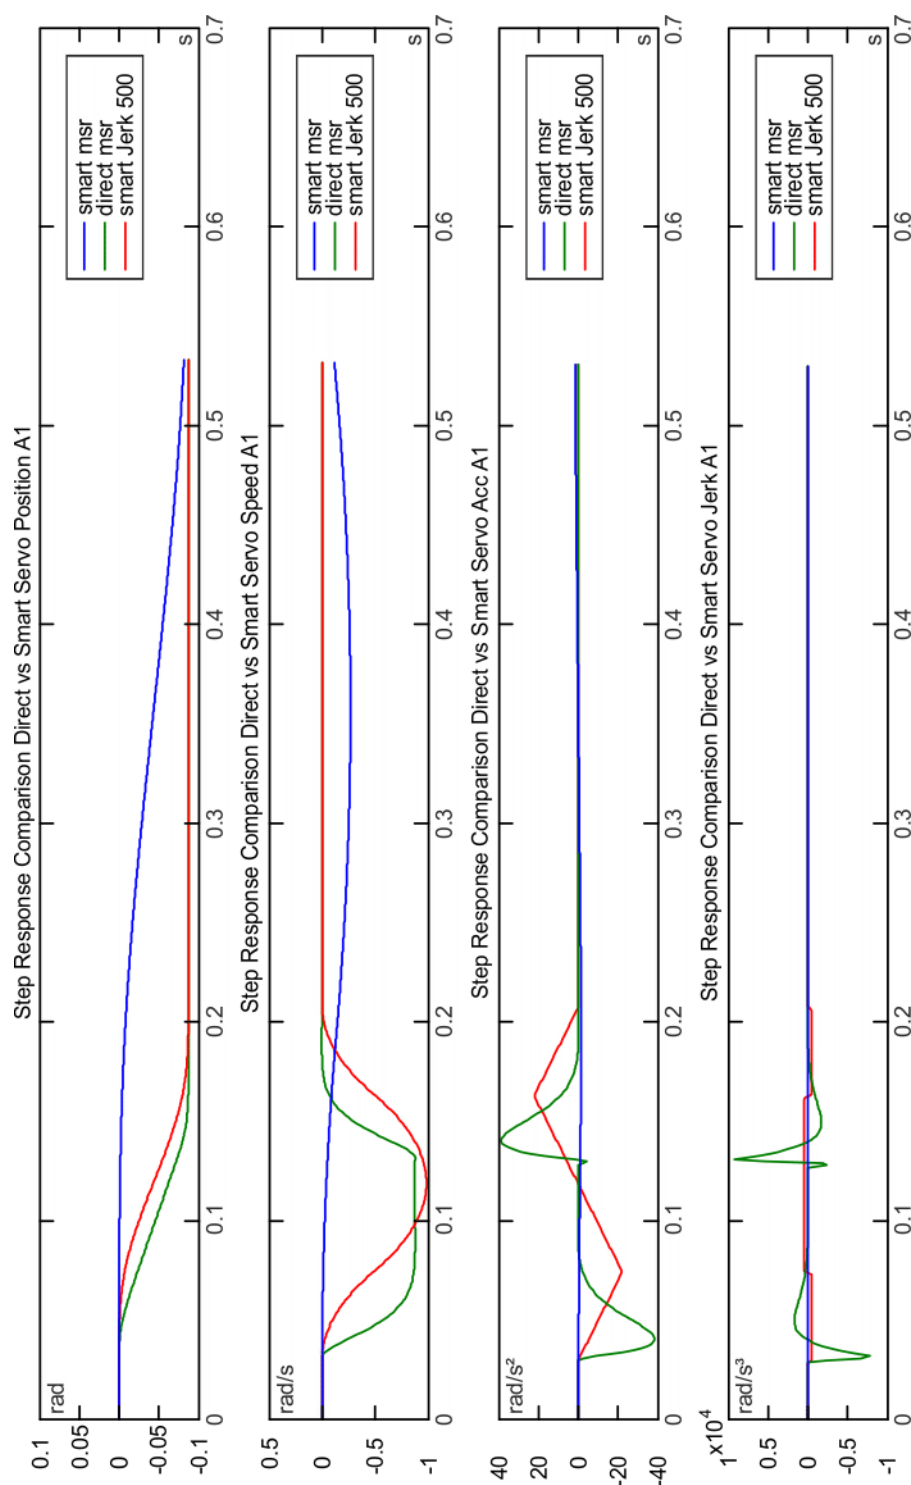


Fig. 7-25: Step response comparison of SmartServo vs. DirectServo, A1, advanced

### 7.12.2.2 Step response comparison of SmartServo vs. DirectServo, A2 (advanced)

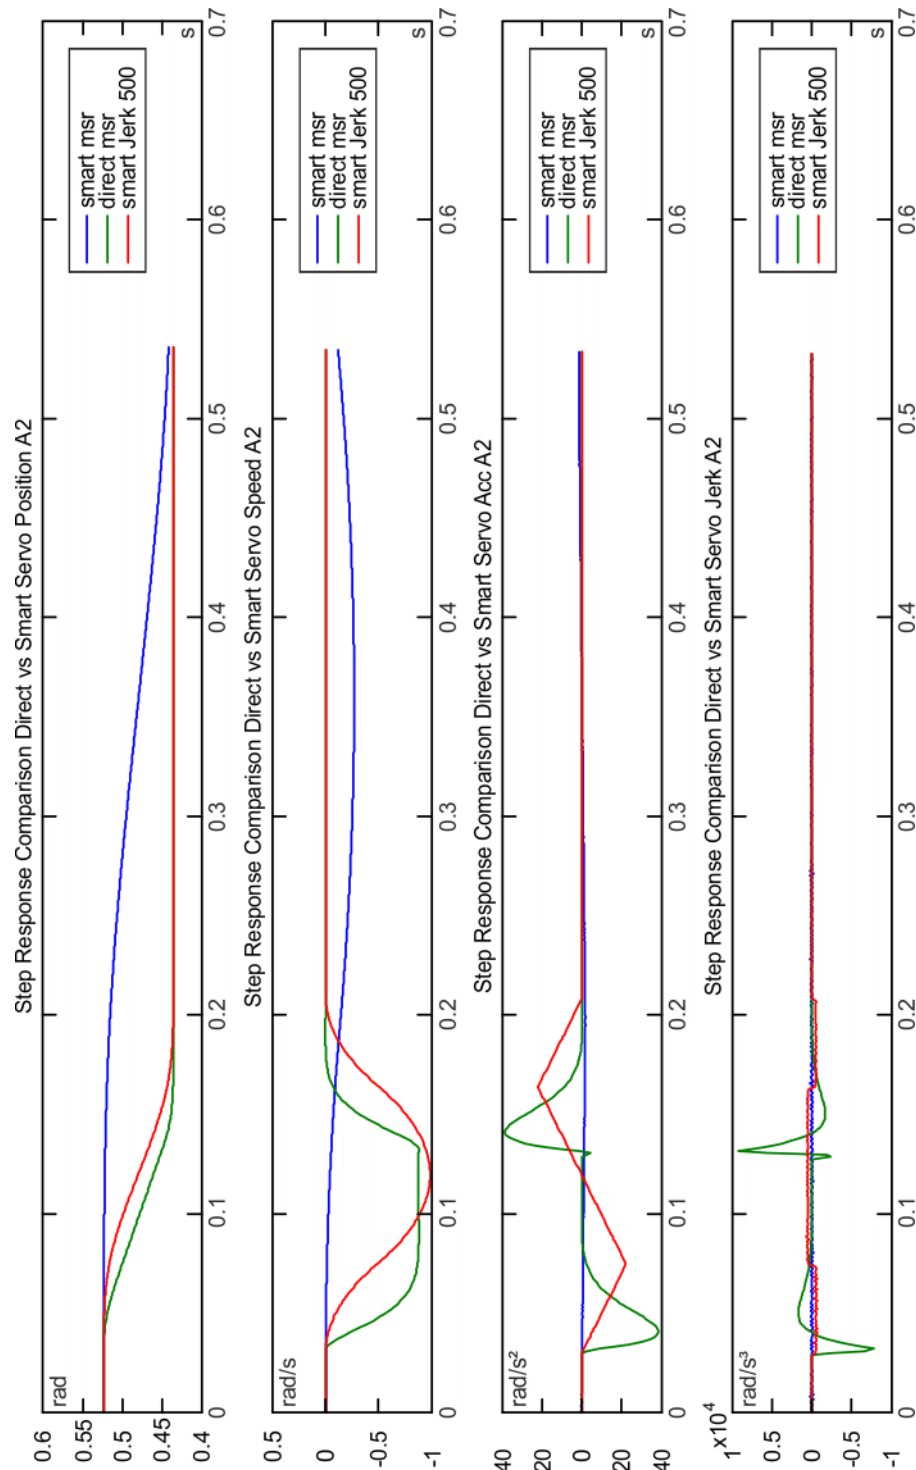


Fig. 7-26: Step response comparison of SmartServo vs. DirectServo, A2, advanced

## 7.12.2.3 Step response comparison of SmartServo vs. DirectServo, A3 (advanced)

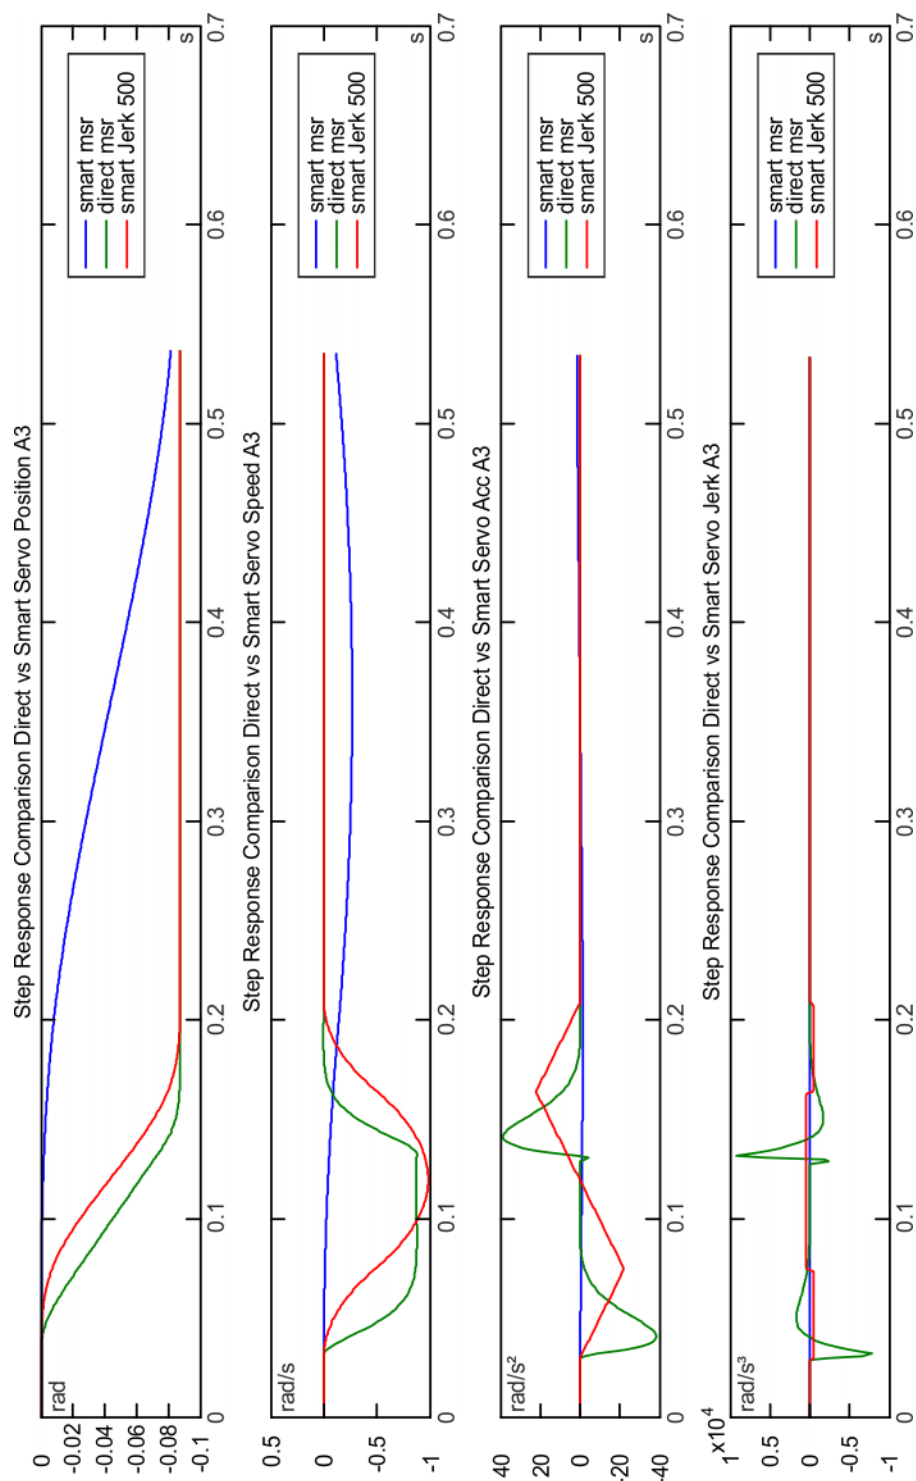


Fig. 7-27: Step response comparison of SmartServo vs. DirectServo, A3, advanced

#### 7.12.2.4 Step response comparison of SmartServo vs. DirectServo, A4, advanced

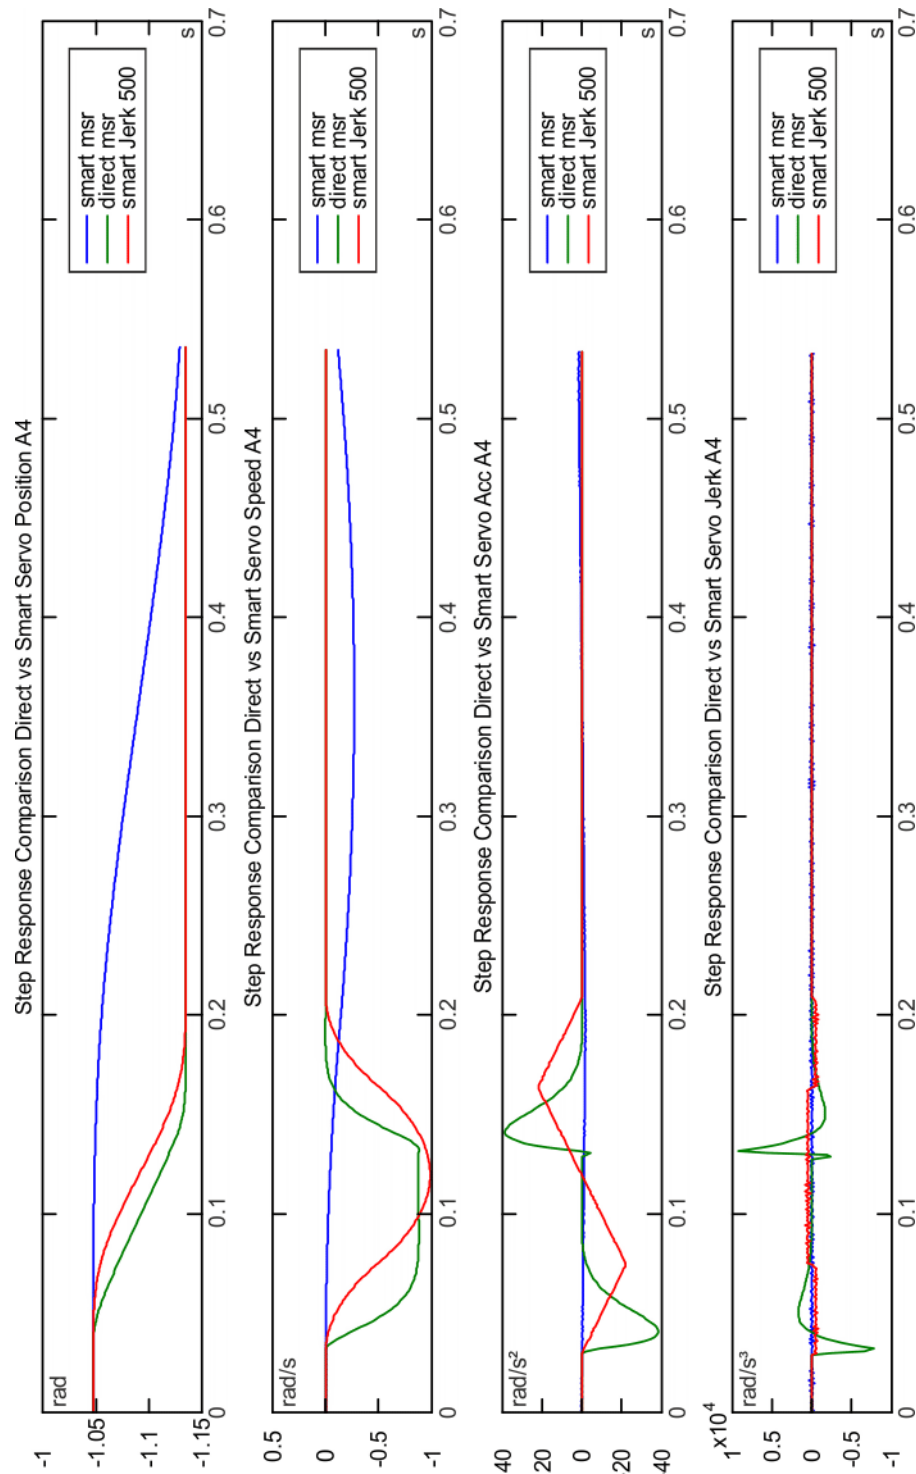


Fig. 7-28: Step response comparison of SmartServo vs. DirectServo, A4, advanced

## 7.12.2.5 Step response comparison of SmartServo vs. DirectServo, A5 (advanced)


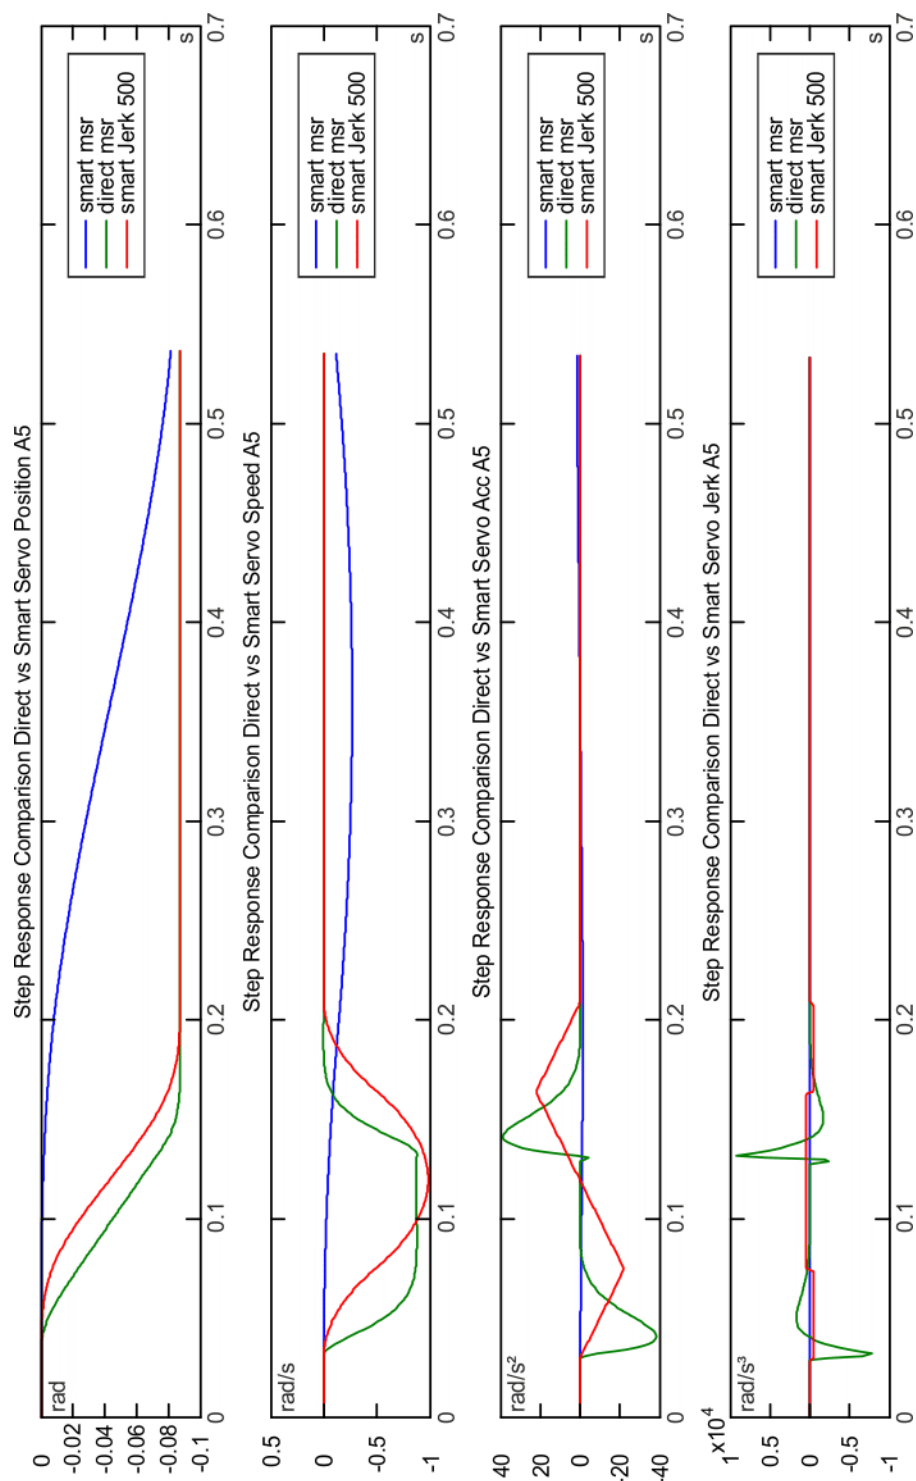


Fig. 7-29: Step response comparison of SmartServo vs. DirectServo, A5, advanced



### 7.12.2.6 Step response comparison of SmartServo vs. DirectServo, A6 (advanced)

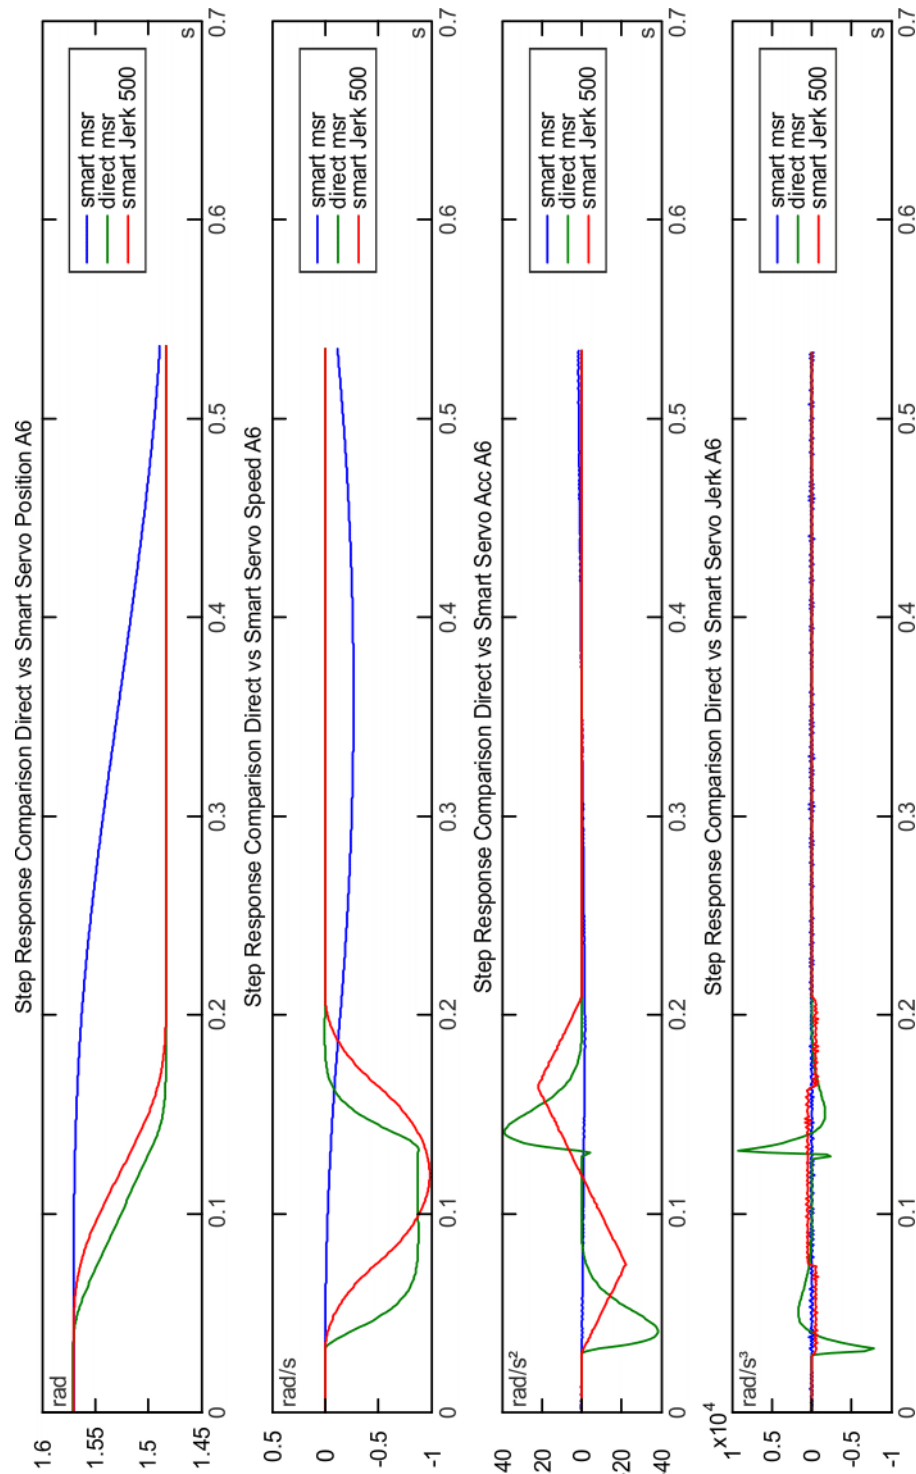

**Fig. 7-30: Step response comparison of SmartServo vs. DirectServo, A6, advanced**

## 7.12.2.7 Step response comparison of SmartServo vs. DirectServo, A7 (advanced)

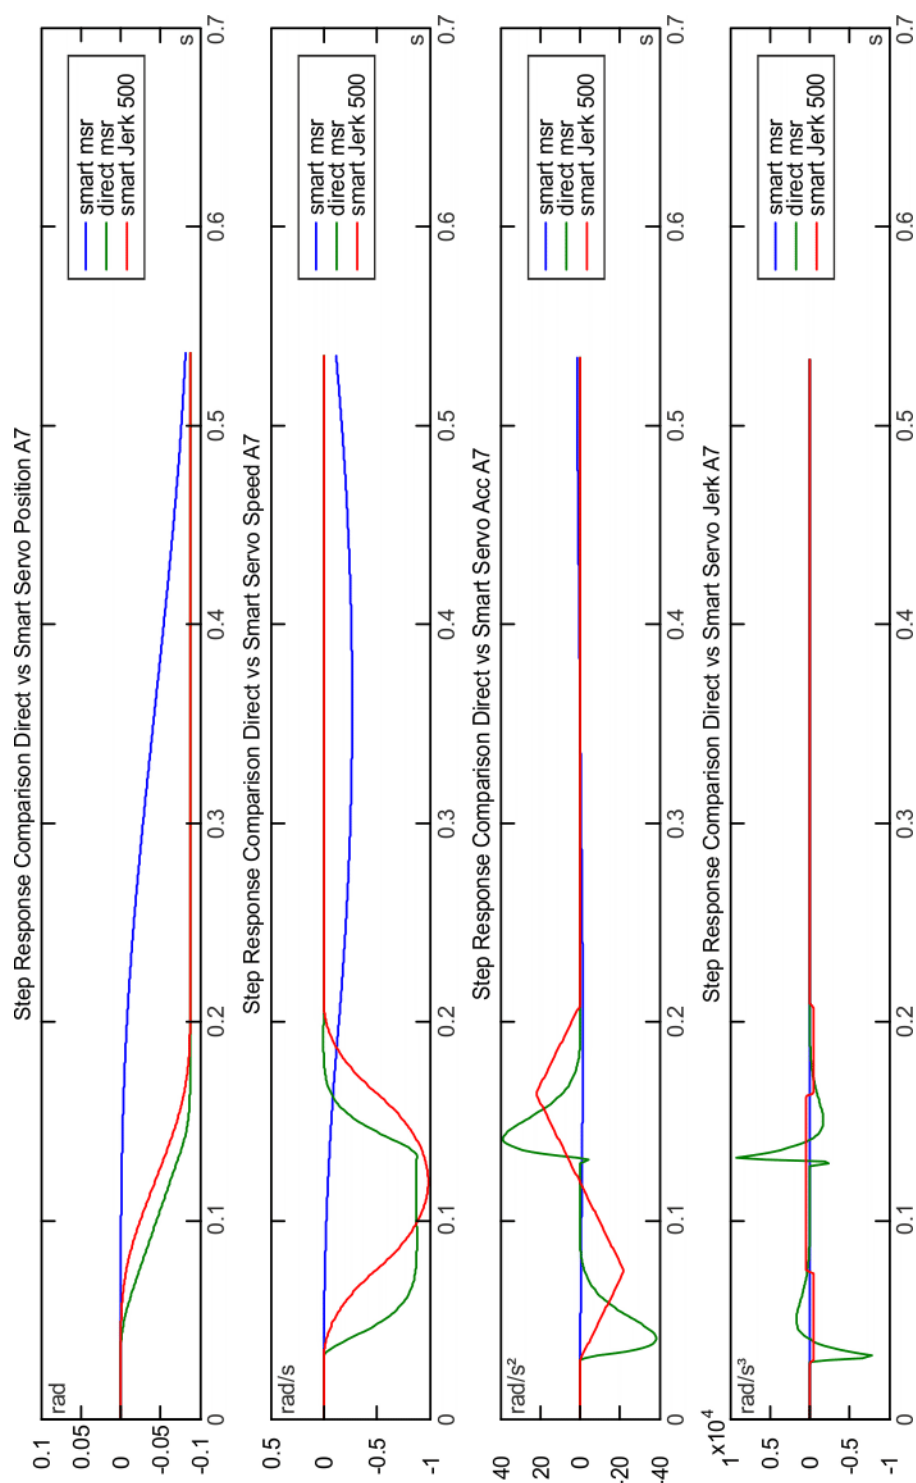


Fig. 7-31: Step response comparison of SmartServo vs. DirectServo, A7, advanced

## 8 Application examples

Programming examples are contained in the “Simple Tutorials for SmartServo” and “Simple Tutorials for DirectServo” catalogs provided.

We recommend reading them in the following order.

### 8.1 “Simple Tutorials for SmartServo” catalog

#### 8.1.1 SmartServoSampleSimpleJointMotion application

<b>Functionality</b>	Simple axis-specific destination setting.
<b>Objectives</b>	<ul style="list-style-type: none"> <li>■ Activation of the motion type SmartServo (&gt;&gt;&gt; 7.1 "Servo motion in an application context" Page 25)</li> <li>■ Working with the IServoRuntime runtime environment (&gt;&gt;&gt; 7.5 "IServoRuntime class" Page 28)</li> <li>■ Axis-specific destination setting (&gt;&gt;&gt; 7.5.2 "Axis-specific interface" Page 30)</li> <li>■ Time measurement (&gt;&gt;&gt; 7.9 "Time recording" Page 36)</li> </ul>

<b>Precondition</b>	Knowledge of application programming with RoboticsAPI.
---------------------	--

#### 8.1.2 SmartServoSampleSimpleCartesian application

<b>Functionality</b>	Simple Cartesian destination setting.
<b>Objectives</b>	<ul style="list-style-type: none"> <li>■ Cartesian destination setting (&gt;&gt;&gt; 7.5.3 "Cartesian interface" Page 31)</li> </ul>
<b>Precondition</b>	Programming knowledge in the SmartServoSampleSimpleJointMotion application.

#### 8.1.3 SmartServoSampleInteractionControl application

<b>Functionality</b>	Impedance control with the motion type SmartServo.
<b>Objectives</b>	<ul style="list-style-type: none"> <li>■ Validating the load model for impedance control (&gt;&gt;&gt; 7.10.1 "Validating the load model for impedance control" Page 37)</li> <li>■ Activating impedance control (&gt;&gt;&gt; 7.10.2 "Activating impedance control" Page 38)</li> <li>■ Changing controller parameters during runtime (&gt;&gt;&gt; 7.10.3 "Changing controller parameters during the runtime" Page 38)</li> <li>■ Transition between control types (&gt;&gt;&gt; 7.10.4 "Transition between control types" Page 39)</li> </ul>
<b>Precondition</b>	Programming knowledge in the applications SmartServoSampleSimpleJointMotion and SmartServoSampleSimpleCartesian.

## 8.2 “Simple Tutorials for DirectServo” catalog



Knowledge of the “Simple Tutorials for SmartServo” catalog is a prerequisite for the safe use of the “Simple Tutorials for DirectServo” catalog.

### 8.2.1 DirectServoSampleSimpleJointMotion application

<b>Functionality</b>	Simple axis-specific destination setting.
<b>Objectives</b>	<ul style="list-style-type: none"> <li>■ Activating the motion type DirectServo</li> <li>■ Working with the IServoRuntime runtime environment</li> <li>■ Axis-specific destination setting</li> <li>■ Time measurement</li> </ul>
<b>Precondition</b>	Programming knowledge in the SmartServoSampleSimpleJointMotion application.

### 8.2.2 DirectServoSampleSimpleCartesian application

<b>Functionality</b>	Simple Cartesian destination setting.
<b>Objectives</b>	<ul style="list-style-type: none"> <li>■ Cartesian destination setting</li> </ul>
<b>Precondition</b>	Programming knowledge in the applications SmartServoSampleSimpleCartesian and DirectServoSampleSimpleJointMotion.

### 8.2.3 DirectServoSampleInteractionControl application

<b>Functionality</b>	Impedance control with the motion type DirectServo.
<b>Objectives</b>	<ul style="list-style-type: none"> <li>■ Validating the load model for impedance control</li> <li>■ Activating impedance control</li> <li>■ Changing controller parameters during runtime</li> <li>■ Transition between control types</li> </ul>
<b>Precondition</b>	Programming knowledge in the applications SmartServoSampleSimpleJointMotion, SmartServoSampleSimpleCartesian and SmartServoSampleInteractionControl.

## 9 Command reference

### 9.1 SmartServo command reference

#### 9.1.1 Motion parameters

Method	Description
setJointVelocity-Rel(...)	<p>Axis-specific relative velocity (type: double, unit: %)</p> <p>■ 0.0 ... 1.0</p> <p>Default value: 1</p> <p>Refers to the maximum value of the axis velocity in the machine data.</p> <p><b>Note:</b> Further information on the programming of axis-specific motion parameters is contained in the operating and programming instructions for the System Software.</p>
setJointAcceleration-Rel(...)	<p>Axis-specific relative acceleration (type: double, unit: %)</p> <p>■ 0.0 ... 1.0</p> <p>Default value: 1</p> <p>Refers to the maximum value of the axis acceleration in the machine data.</p> <p><b>Note:</b> Further information on the programming of axis-specific motion parameters is contained in the operating and programming instructions for the System Software.</p>
setMinimumTrajectoryExecutionTime(...)	<p>Minimum execution time for a trajectory (type: double, unit: seconds)</p> <p>■ ≥ 0</p> <p>Default value: 0.01</p> <p>Sets the minimum execution time for a trajectory. Changes the path.</p>
setSpeedTimeoutAfterGoalReach(...)	<p>Timeout for the velocity profile after the destination is reached (type: double, unit: seconds)</p> <p>■ ≥ 0</p> <p>Default value: 0</p> <p>Sets the timeout, specifying the point up to which the interpolator should continue to plan with a velocity profile.</p>
setTimeoutAfterGoalReach(...)	<p>Timeout for the motion command after the destination has been reached (type: double, unit: seconds)</p> <p>■ ≥ 0</p> <p>Default value: 120</p> <p>If no new destination is set after the specified time has elapsed, the motion command is terminated.</p>
setMode(...)	<p>Setting of the motion type.</p> <p><b>Note:</b> Further information on programming is contained in the operating and programming instructions for the System Software.</p>
overrideJointAcceleration(...)	<p>Increase of the axis-specific acceleration (type: double, unit: factor)</p> <p>■ 0 ... 20</p> <p>Default value: 1</p>

### 9.1.2 Runtime parameters

Method	Description
setGoalReachedEventHandler(...)	Setting of the event handler when the destination is reached. The parameter must be an implementation of the type IServoOnGoalReachedEvent.
setDetailedOutput(...)	Setting of the amount of detail of the debug information <b>■ 1, 2, 3</b> Default value: <b>1</b> (>>> 7.5.1.3 "Reading out and displaying debug information " Page 29)
setMinimumTrajectoryExecutionTime(...)	Minimum execution time for a trajectory (type: double, unit: seconds) <b>■ ≥ 0</b> Default value: <b>0.01</b> Sets the minimum execution time for a trajectory. Changes the path.
activateVelocityPlanning(...)	Activates the velocity planning once an end point has been reached (type: Boolean) Default value: <b>false</b>
activateWaitForPauseDuringSetDestination(...)	Activates the pausing of a motion in T1/T2 as soon as the Start key or an enabling switch has been released (type: Boolean) Default value: <b>true</b> If this setting is deactivated, the application continues running and is responsible for pausing and starting up again.
changeControlModeSettings(...)	Modification of controller parameters during impedance control. (>>> 7.10.3 "Changing controller parameters during the runtime" Page 38)

### 9.1.3 Setting a destination

Method	Description
setDestination(...)	Setting of a new axis-specific destination (>>> 7.5.2.1 "Specifying an axis-specific end position" Page 30)
	Setting of a new axis-specific destination and the corresponding destination velocity of the individual axes (>>> 7.5.2.2 "Specifying an axis-specific end position with a target velocity" Page 30)
	Setting of a new Cartesian destination (>>> 7.5.3.1 "Setting a Cartesian destination in the robot base coordinate system" Page 31)
	Setting of a new Cartesian destination and a reference coordinate system in which the servo motion is to be carried out (>>> 7.5.3.2 "Specifying a Cartesian destination in the reference coordinate system" Page 31)

## 9.2 DirectServo command reference

### 9.2.1 Motion parameters

Method	Description
setJointVelocity-Rel(...)	<p>Axis-specific relative velocity (type: double, unit: %)</p> <p>■ 0.0 ... 1.0</p> <p>Default value: 1</p> <p>Refers to the maximum value of the axis velocity in the machine data.</p> <p><b>Note:</b> Further information on the programming of axis-specific motion parameters is contained in the operating and programming instructions for the System Software.</p>
setJointAcceleration-Rel(...)	<p><b>Note:</b> This method has no effect on the DirectServo motion type.</p>
setMinimumTrajectoryExecutionTime(...)	<p>Minimum execution time for a trajectory (type: double, unit: seconds)</p> <p>■ ≥ 0</p> <p>Default value: 0.01</p> <p>Sets the minimum execution time for a trajectory. Changes the path.</p>
setSpeedTimeoutAfterGoalReach(...)	<p>Timeout for the velocity profile after the destination is reached (type: double, unit: seconds)</p> <p>■ ≥ 0</p> <p>Default value: 0</p> <p>Sets the timeout, specifying the point up to which the interpolator should continue to plan with a velocity profile.</p>
setTimeoutAfterGoalReach(...)	<p>Timeout for the motion command after the destination has been reached (type: double, unit: seconds)</p> <p>■ ≥ 0</p> <p>Default value: 120</p> <p>If no new destination is set after the specified time has elapsed, the motion command is terminated.</p>
setMode(...)	<p>Setting of the motion type.</p> <p><b>Note:</b> Further information on programming is contained in the operating and programming instructions for the System Software.</p>

### 9.2.2 Runtime parameters

Method	Description
setGoalReachedEventHandler(...)	<p>Setting of the event handler when the destination is reached. The parameter must be an implementation of the type IServoOnGoalReachedEvent.</p>
setDetailedOutput(...)	<p>Setting of the amount of detail of the debug information</p> <p>■ 1, 2, 3</p> <p>Default value: 1</p> <p>(&gt;&gt;&gt; 7.5.1.3 "Reading out and displaying debug information " Page 29)</p>

Method	Description
setMinimumTrajectoryExecutionTime(...)	<p>Minimum execution time for a trajectory (type: double, unit: seconds)</p> <p>■ <math>\geq 0</math></p> <p>Default value: <b>0.01</b></p> <p>Sets the minimum execution time for a trajectory. Changes the path.</p>
activateWaitForPauseDuringSetDestination(...)	<p>Activates the pausing of a motion in T1/T2 as soon as the Start key or an enabling switch has been released (type: Boolean)</p> <p>Default value: <b>true</b></p> <p>If this setting is deactivated, the application continues running and is responsible for pausing and starting up again.</p>
changeControlModeSettings(...)	<p>Modification of controller parameters during impedance control</p> <p>(&gt;&gt;&gt; 7.10.3 "Changing controller parameters during the runtime" Page 38)</p>

### 9.2.3 Setting a destination

Method	Description
setDestination(...)	<p>Setting of a new axis-specific destination</p> <p>(&gt;&gt;&gt; 7.5.2.1 "Specifying an axis-specific end position" Page 30)</p>
	<p>Setting of a new Cartesian destination</p> <p>(&gt;&gt;&gt; 7.5.3.1 "Setting a Cartesian destination in the robot base coordinate system" Page 31)</p>
	<p>Setting of a new Cartesian destination and a reference coordinate system in which the servo motion is to be carried out</p> <p>(&gt;&gt;&gt; 7.5.3.2 "Specifying a Cartesian destination in the reference coordinate system" Page 31)</p>



## 10 Exception handling routines

### 10.1 Example of an exception handling routine

**Description** The motion types SmartServo and DirectServo provide exceptions which allow runtime errors to be transferred to the application.

These exceptions can be dealt with by the application with the Java-compliant try/catch block. Exceptions which are not dealt with by the application cause the application to terminate.

**Example** In the following programming example, all runtime exceptions are intercepted. If an error occurs in the try block, execution of the try block is terminated and the catch block is then executed immediately.

The error is intercepted in the catch block and an error-specific message is generated.

```
try
{
    // Create the motion
    SmartServo aSmartServoMotion = new SmartServo(initialPosition);
    _toolAttachedToLBR.getDefaultMotionFrame().
    moveAsync(aSmartServoMotion);
    // Fetch the Runtime of the Motion part
    IServoRuntime theServoRuntime = aSmartServoMotion.getRuntime();
    // do repetitive loop
    do
    {
        // Do some computations
        //
        theServoRuntime.setDestination(destination);
    } while (notFinished);
}
catch (Exception e)
{
    getLogger().error(e.getMessage());
    throw(new Exception(e));
}
```

### 10.2 Overview of exceptions – runtime error messages

Exception / Source	Message	Cause / remedy
Type: IllegalArgumentException Source: <ul style="list-style-type: none"> <li>IServoRuntime.getCurrentCartesianDestination(...)</li> <li>IServoRuntime.getCurrentCartesianPosition(...)</li> </ul>	"frameOnFlange is null"	The frame <i>frameOnFlange</i> has not been specified.
	"base is null"	No reference coordinate system has been specified.
	"frameOnFlange is not frame below or equal to the flange of this robot"	The specified frame <i>frameOnFlange</i> is not connected to the robot flange.
	"base is not static relative to the base of this robot"	The reference coordinate system is connected to the robot flange and can therefore be moved.

Exception / Source	Message	Cause / remedy
Type: <code>IllegalStateException</code> Source: <ul style="list-style-type: none"> <li>■ <code>IServoMotion.getRuntime()</code></li> </ul>	“waitForTransferred timeout to become activated in realtime-system”	The servo motion has been requested with <code>moveAsync(...)</code> . The time until activation has been exceeded.  Possible causes: <ul style="list-style-type: none"> <li>■ The application is paused.</li> <li>■ Preceding motions in the application take too long.</li> </ul>
Type: <code>IllegalStateException</code> Source: <ul style="list-style-type: none"> <li>■ <code>IServoMotion.getRuntime()</code></li> <li>■ <code>IServoRuntime.stopMotion()</code></li> </ul>	“waitForTransferred called prematurely - RealtimeMotion is not active”	The servo motion has not yet been activated with <code>moveAsync(...)</code> . Check the order of the programming.
Type: <code>CommandInvalidException</code> Source: <ul style="list-style-type: none"> <li>■ <code>IServoRuntime.updateWithRealtimeSystem()</code></li> </ul>	“Command is no longer active, because” + <i>errorReason</i>	An error occurred during the update of the application data with the real-time system data. The cause of the error (= <i>errorReason</i> ) is specified in the message.  (>>> 10.3 "CommandInvalidException error causes" Page 66)

### 10.3 CommandInvalidException error causes

<i>errorReason</i>	Cause	Remedy
“tracking error”	The difference between the setpoint position and the actual position is too great. The robot cannot follow the command path.  Possible causes: <ul style="list-style-type: none"> <li>■ The robot is overloaded, e.g. because the tool used is too heavy. Attention must also be paid to the load of a gripped work-piece.</li> <li>■ Load data have been entered incorrectly.</li> <li>■ Command velocity or command acceleration is too high.</li> </ul>	<ul style="list-style-type: none"> <li>■ Check the loads on the robot.</li> <li>■ Check the load data and correct if required.</li> <li>■ Check the setpoint inputs for velocity and acceleration in <code>setDestination(...)</code> and reduce these if necessary.</li> </ul>
“speed limit exceeded”	Destination interval is too high.	Reduce the interval on sequential destination settings with <code>setDestination(...)</code> .

<b>errorReason</b>	<b>Cause</b>	<b>Remedy</b>
"checkAxisTorqueLimit"	<p>The torque specification of the servo control is too high.</p> <p>Possible causes:</p> <ul style="list-style-type: none"> <li>■ The robot is overloaded, e.g. because the tool used is too heavy. Attention must also be paid to the load of a gripped work-piece.</li> <li>■ Load data have been entered incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>■ Check the loads on the robot.</li> <li>■ Check the load data and correct if required.</li> </ul>
"msr T1 illegal speed limit detected"	The measured Cartesian velocity in T1 mode is too high.	<ul style="list-style-type: none"> <li>■ In impedance control: check the external force acting on the robot.</li> <li>■ Correct the destination setting in setDestination(...).</li> </ul>
"cmd T1 illegal speed limit detected"	The Cartesian command velocity in T1 mode is too high.	Correct the destination setting in setDestination(...).
"directServo: Target Outside accepted Delta"	In the DirectServo motion type, the command position may be at a maximum distance of 5° from the current actual position.	Correct the destination setting in setDestination(...).
"directServo: Target Outside Joint Limit"	The destination setting is outside the permitted axis range (DirectServo).	Correct the destination setting in setDestination(...).
"interpolation error: RML_ERROR_POSITIONAL_LIMITS"	The destination setting is outside the permitted axis range (SmartServo).	Correct the destination setting in setDestination(...).
"interpolation error: ERROR_INVALID_INPUT_VALUES"	Internal error	Contact KUKA Service.
"interpolation error: ERROR"	Internal error	Contact KUKA Service.
"interpolation error: ERROR_EXECUTION_TIME_CALCULATION"	Internal error	Contact KUKA Service.
"interpolation error: ERROR_SYNCHRONIZATION"	Internal error	Contact KUKA Service.
"interpolation error: ERROR_NUMBER_OF_DOF S"	Internal error	Contact KUKA Service.
"interpolation error: ERROR_NO_PHASE_SYNC HRONIZATION"	Internal error	Contact KUKA Service.
"interpolation error: ERROR_NULL_POINTER"	Internal error	Contact KUKA Service.
"interpolation error: ERROR_EXECUTION_TIME_TOO_BIG"	Internal error	Contact KUKA Service.

<b><i>errorReason</i></b>	<b>Cause</b>	<b>Remedy</b>
"interpolation error: RML_ERROR_USER_TIME_ OUT_OF_RANGE"	Internal error	Contact KUKA Service.
"interpolation error: RML_ERROR_OVERRIDE_O UT_OF_RANGE"	Internal error	Contact KUKA Service.

# 11 Troubleshooting

## 11.1 TCP/IP traffic from Windows is too slow

### Description

The default setting for the TCP/IP network adapter under Windows results in update intervals which are too long (>100 ms). This has a negative effect on the command specification (seconds hand effect).

The update of the real-time system data with the application data should require no more than 5 ms on average.

(>>> 7.5.1.1 "Polling time stamps" Page 28)

```
timing update Controller n(24212) T(0.89, 1.85, 6.30 msec)
(stdDev 0.33)
timing SetDestination n(24212) T(0.91, 1.92, 6.36 msec)
(stdDev 0.34)
```

If the numeric time statistic T(min, mean, max) records a minimum and average value of >100 ms, the cause may be the default optimization in Windows of the TCP/IP setting for high data throughput. This causes small individual TCP/IP packets to be bundled into larger TCP/IP packets, which in turn leads to delays in communication with the real-time system. The process prevents short-interval feedback from the real-time system.

In order to send unbundled, individual TCP/IP packets, 2 new keys must be created in the Windows registry database.

### Precondition

- Local administrator rights



When making changes in the registry database, attention must be paid to uppercase and lowercase letters, as Windows makes a distinction here!

### Procedure

1. Start **regedit** via the command prompt.
2. Navigate to the path **HKEY\_LOCAL\_MACHINE\SYSTEM\CurrentControlSet\services\Tcpip\Parameters\Interfaces**.
3. Open the corresponding subfolder containing a key value with the IP address of the desired network adapter.
4. Right-click on the folder of the network adapter which was located beforehand.
  - a. Select: **New > DWORD (32-bit) Value**
  - b. Name the newly created entry **TcpAckFrequency**.
  - c. Right-click on the newly created entry **TcpAckFrequency**.
  - d. Select: **Modify**
  - e. Select: **Hexadecimal**
  - f. Enter the value: **1**
5. Right-click on the folder of the network adapter which was located beforehand.
  - a. Select: **New > DWORD (32-bit) Value**
  - b. Name the newly created entry **TCPNoDelay**.
  - c. Right-click on the newly created entry **TCPNoDelay**.
  - d. Select: **Modify**
  - e. Select: **Hexadecimal**
  - f. Enter the value: **1**
6. Check that:

- The two newly created keys **TcpAckFrequency** and **TCPNoDelay** are located in the folder of the network adapter with the correct IP address and are correctly named.
  - Both keys are of the type **REG\_DWORD**.
  - Both keys have the value **0x00000001**.
7. Reboot the Windows operating system.

## 11.2 Robot makes jerky motions/whistles – avoiding the seconds hand effect

### NOTICE

The robot may be damaged if the seconds hand effect occurs. KUKA is not liable for damage resulting from the continuous operation of the robot with the seconds hand effect.


#### Precondition

- TCP/IP traffic from Windows flows quickly enough.  
(>>> 11.1 "TCP/IP traffic from Windows is too slow" Page 69)

#### Remedy

The following measures can be taken to avoid the seconds hand effect:

- **Specify larger motion sections.**  
Specify larger motion sections so that the next `setDestination(...)` can be called on time. Since the precision interpolator is not able to reach the destination in this case, the seconds hand effect does not occur.  
A typical application of this is visual servoing, in which a camera/image processing specifies end poses which are far away in "slow" succession.
- **Reduce the maximum velocity and acceleration.**  
Reduce the maximum velocity and acceleration according to the expected motion pattern to the point where a new destination is set before the previous motion section is completed.
- **Specify the minimum synchronization time.**  
With `setMinimumTrajectoryExecutionTime(...)`, set the value for the minimum synchronization time high enough so that the next destination setting can be expected before the end point is reached.

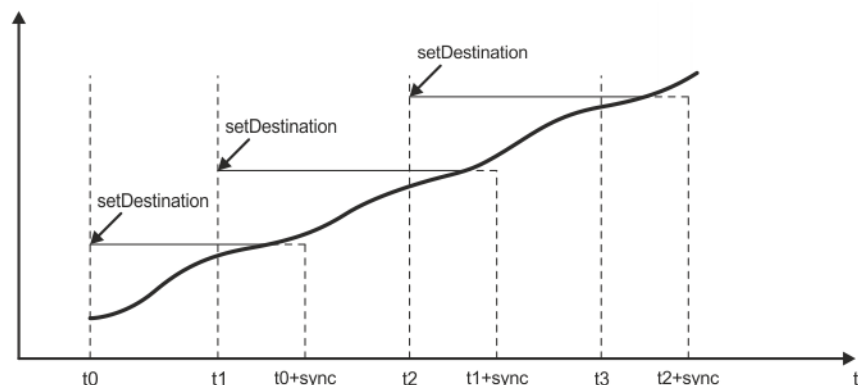

**Fig. 11-1: Servo motion without the seconds hand effect**

As a rule of thumb, the minimum synchronization time should be 1.5 to 2 times the cycle time of the application context. The cycle time can be measured using the `StatisticTimer` class.

(>>> 7.9 "Time recording" Page 36)


- **Use the SmartServo motion type.**  
In the `DirectServo` motion type, the jerk-limited planning reaches its limits because the recommended destination interval is very short.

### 11.3 Impedance control cannot be activated

- Cause** The validation of the load model for the impedance control has failed.
- Remedy**
1. With a PTP motion, move the robot into a non-singularity pose.
  2. Carry out the validation again.

### 11.4 Feedback effect

**Description** When servo motions are used, the robot position is commanded very quickly and the current robot position is incorporated into the command.

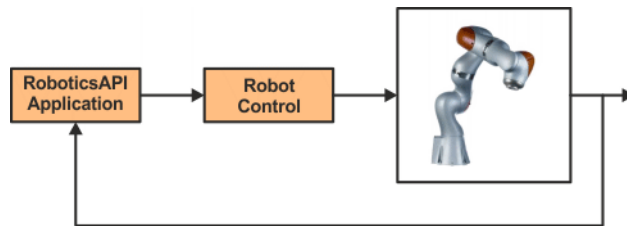

**Fig. 11-2: Application is part of the control loop**

This can result in a feedback effect, causing the robot to buzz and oscillate. The robot and application are in themselves fully functional.

(>>> 7.11 "Feedback effect for servo motions" Page 40)

**Remedy**

In the Java application (recommended):

- Check and analyze the control law.
- Reduce amplification in the application.

On the robot (at the expense of performance):

- Reduce the robot performance:
  - Reduce the program override.
  - Reduce the maximum velocity and acceleration.
  - For impedance control: Increase the compliance by modifying the spring stiffness and spring damping.

On the robot (increasing the performance, only for SmartServo):

- Increase the maximum acceleration used for planning with `overrideJointAcceleration(...)`.
- Increase the maximum jerk used for planning with `setJointJerk(...)`.

(>>> 7.12.1 "SmartServo vs. DirectServo – comparison of axis positions over time" Page 43)

(>>> 7.12.2 "SmartServo vs. DirectServo – comparison of velocity, acceleration, jerk" Page 50)





## 12 KUKA Service

### 12.1 Requesting support

<b>Introduction</b>	This documentation provides information on operation and operator control, and provides assistance with troubleshooting. For further assistance, please contact your local KUKA subsidiary.
<b>Information</b>	<p><b>The following information is required for processing a support request:</b></p> <ul style="list-style-type: none"> <li>■ Description of the problem, including information about the duration and frequency of the fault</li> <li>■ As comprehensive information as possible about the hardware and software components of the overall system</li> </ul> <p>The following list gives an indication of the information which is relevant in many cases:</p> <ul style="list-style-type: none"> <li>■ Model and serial number of the kinematic system, e.g. the manipulator</li> <li>■ Model and serial number of the controller</li> <li>■ Model and serial number of the energy supply system</li> <li>■ Designation and version of the system software</li> <li>■ Designations and versions of other software components or modifications</li> <li>■ Diagnostic package <b>KrcDiag</b>:              Additionally for KUKA Sunrise: Existing projects including applications              For versions of KUKA System Software older than V8: Archive of the software (<b>KrcDiag</b> is not yet available here.)</li> <li>■ Application used</li> <li>■ External axes used</li> </ul>

### 12.2 KUKA Customer Support

<b>Availability</b>	KUKA Customer Support is available in many countries. Please do not hesitate to contact us if you have any questions.
<b>Argentina</b>	Ruben Costantini S.A. (Agency) Luis Angel Huergo 13 20 Parque Industrial 2400 San Francisco (CBA) Argentina Tel. +54 3564 421033 Fax +54 3564 428877 ventas@costantini-sa.com
<b>Australia</b>	KUKA Robotics Australia Pty Ltd 45 Fennell Street Port Melbourne VIC 3207 Australia Tel. +61 3 9939 9656 info@kuka-robotics.com.au www.kuka-robotics.com.au

<b>Belgium</b>	<p>KUKA Automatisering + Robots N.V.  Centrum Zuid 1031  3530 Houthalen  Belgium  Tel. +32 11 516160  Fax +32 11 526794  <a href="mailto:info@kuka.be">info@kuka.be</a>  <a href="http://www.kuka.be">www.kuka.be</a></p>
<b>Brazil</b>	<p>KUKA Roboter do Brasil Ltda.  Travessa Claudio Armando, nº 171  Bloco 5 - Galpões 51/52  Bairro Assunção  CEP 09861-7630 São Bernardo do Campo - SP  Brazil  Tel. +55 11 4942-8299  Fax +55 11 2201-7883  <a href="mailto:info@kuka-roboter.com.br">info@kuka-roboter.com.br</a>  <a href="http://www.kuka-roboter.com.br">www.kuka-roboter.com.br</a></p>
<b>Chile</b>	<p>Robotec S.A. (Agency)  Santiago de Chile  Chile  Tel. +56 2 331-5951  Fax +56 2 331-5952  <a href="mailto:robotec@robotec.cl">robotec@robotec.cl</a>  <a href="http://www.robotec.cl">www.robotec.cl</a></p>
<b>China</b>	<p>KUKA Robotics China Co., Ltd.  No. 889 Kungang Road  Xiaokunshan Town  Songjiang District  201614 Shanghai  P. R. China  Tel. +86 21 5707 2688  Fax +86 21 5707 2603  <a href="mailto:info@kuka-robotics.cn">info@kuka-robotics.cn</a>  <a href="http://www.kuka-robotics.com">www.kuka-robotics.com</a></p>
<b>Germany</b>	<p>KUKA Roboter GmbH  Zugspitzstr. 140  86165 Augsburg  Germany  Tel. +49 821 797-4000  Fax +49 821 797-1616  <a href="mailto:info@kuka-roboter.de">info@kuka-roboter.de</a>  <a href="http://www.kuka-roboter.de">www.kuka-roboter.de</a></p>

**France**  
KUKA Automatisme + Robotique SAS  
Techvallée  
6, Avenue du Parc  
91140 Villebon S/Yvette  
France  
Tel. +33 1 6931660-0  
Fax +33 1 6931660-1  
commercial@kuka.fr  
www.kuka.fr

**India**  
KUKA Robotics India Pvt. Ltd.  
Office Number-7, German Centre,  
Level 12, Building No. - 9B  
DLF Cyber City Phase III  
122 002 Gurgaon  
Haryana  
India  
Tel. +91 124 4635774  
Fax +91 124 4635773  
info@kuka.in  
www.kuka.in

**Italy**  
KUKA Roboter Italia S.p.A.  
Via Pavia 9/a - int.6  
10098 Rivoli (TO)  
Italy  
Tel. +39 011 959-5013  
Fax +39 011 959-5141  
kuka@kuka.it  
www.kuka.it

**Japan**  
KUKA Robotics Japan K.K.  
YBP Technical Center  
134 Godo-cho, Hodogaya-ku  
Yokohama, Kanagawa  
240 0005  
Japan  
Tel. +81 45 744 7691  
Fax +81 45 744 7696  
info@kuka.co.jp

**Canada**  
KUKA Robotics Canada Ltd.  
6710 Maritz Drive - Unit 4  
Mississauga  
L5W 0A1  
Ontario  
Canada  
Tel. +1 905 670-8600  
Fax +1 905 670-8604  
info@kukarobotics.com  
www.kuka-robotics.com/canada

<b>Korea</b>	<p>KUKA Robotics Korea Co. Ltd.  RIT Center 306, Gyeonggi Technopark  1271-11 Sa 3-dong, Sangnok-gu  Ansan City, Gyeonggi Do  426-901  Korea  Tel. +82 31 501-1451  Fax +82 31 501-1461  <a href="mailto:info@kukakorea.com">info@kukakorea.com</a></p>
<b>Malaysia</b>	<p>KUKA Robot Automation (M) Sdn Bhd  South East Asia Regional Office  No. 7, Jalan TPP 6/6  Taman Perindustrian Puchong  47100 Puchong  Selangor  Malaysia  Tel. +60 (03) 8063-1792  Fax +60 (03) 8060-7386  <a href="mailto:info@kuka.com.my">info@kuka.com.my</a></p>
<b>Mexico</b>	<p>KUKA de México S. de R.L. de C.V.  Progreso #8  Col. Centro Industrial Puente de Vigas  Tlalnepantla de Baz  54020 Estado de México  Mexico  Tel. +52 55 5203-8407  Fax +52 55 5203-8148  <a href="mailto:info@kuka.com.mx">info@kuka.com.mx</a>  <a href="http://www.kuka-robotics.com/mexico">www.kuka-robotics.com/mexico</a></p>
<b>Norway</b>	<p>KUKA Sveiseanlegg + Roboter  Sentrumsvegen 5  2867 Hov  Norway  Tel. +47 61 18 91 30  Fax +47 61 18 62 00  <a href="mailto:info@kuka.no">info@kuka.no</a></p>
<b>Austria</b>	<p>KUKA Roboter CEE GmbH  Gruberstraße 2-4  4020 Linz  Austria  Tel. +43 7 32 78 47 52  Fax +43 7 32 79 38 80  <a href="mailto:office@kuka-roboter.at">office@kuka-roboter.at</a>  <a href="http://www.kuka.at">www.kuka.at</a></p>

**Poland**  
KUKA Roboter Austria GmbH  
Spółka z ograniczoną odpowiedzialnością  
Oddział w Polsce  
Ul. Porcelanowa 10  
40-246 Katowice  
Poland  
Tel. +48 327 30 32 13 or -14  
Fax +48 327 30 32 26  
ServicePL@kuka-roboter.de

**Portugal**  
KUKA Sistemas de Automatización S.A.  
Rua do Alto da Guerra n° 50  
Armazém 04  
2910 011 Setúbal  
Portugal  
Tel. +351 265 729780  
Fax +351 265 729782  
kuka@mail.telepac.pt

**Russia**  
KUKA Robotics RUS  
Werbnaja ul. 8A  
107143 Moskau  
Russia  
Tel. +7 495 781-31-20  
Fax +7 495 781-31-19  
info@kuka-robotics.ru  
www.kuka-robotics.ru

**Sweden**  
KUKA Svetsanläggningar + Robotar AB  
A. Odhners gata 15  
421 30 Västra Frölunda  
Sweden  
Tel. +46 31 7266-200  
Fax +46 31 7266-201  
info@kuka.se

**Switzerland**  
KUKA Roboter Schweiz AG  
Industriestr. 9  
5432 Neuenhof  
Switzerland  
Tel. +41 44 74490-90  
Fax +41 44 74490-91  
info@kuka-roboter.ch  
www.kuka-roboter.ch

<b>Spain</b>	<p>KUKA Robots IBÉRICA, S.A.  Pol. Industrial  Torrent de la Pastera  Carrer del Bages s/n  08800 Vilanova i la Geltrú (Barcelona)  Spain  Tel. +34 93 8142-353  Fax +34 93 8142-950  Comercial@kuka-e.com  www.kuka-e.com</p>
<b>South Africa</b>	<p>Jendamark Automation LTD (Agency)  76a York Road  North End  6000 Port Elizabeth  South Africa  Tel. +27 41 391 4700  Fax +27 41 373 3869  www.jendamark.co.za</p>
<b>Taiwan</b>	<p>KUKA Robot Automation Taiwan Co., Ltd.  No. 249 Pujong Road  Jungli City, Taoyuan County 320  Taiwan, R. O. C.  Tel. +886 3 4331988  Fax +886 3 4331948  info@kuka.com.tw  www.kuka.com.tw</p>
<b>Thailand</b>	<p>KUKA Robot Automation (M)SdnBhd  Thailand Office  c/o Maccall System Co. Ltd.  49/9-10 Soi Kingkaew 30 Kingkaew Road  Tt. Rachatheva, A. Bangpli  Samutprakarn  10540 Thailand  Tel. +66 2 7502737  Fax +66 2 6612355  atika@ji-net.com  www.kuka-roboter.de</p>
<b>Czech Republic</b>	<p>KUKA Roboter Austria GmbH  Organisation Tschechien und Slowakei  Sezemická 2757/2  193 00 Praha  Horní Počernice  Czech Republic  Tel. +420 22 62 12 27 2  Fax +420 22 62 12 27 0  support@kuka.cz</p>

**Hungary** KUKA Robotics Hungaria Kft.  
Fő út 140  
2335 Taksony  
Hungary  
Tel. +36 24 501609  
Fax +36 24 477031  
info@kuka-robotics.hu

**USA** KUKA Robotics Corporation  
51870 Shelby Parkway  
Shelby Township  
48315-1787  
Michigan  
USA  
Tel. +1 866 873-5852  
Fax +1 866 329-5852  
info@kukarobotics.com  
www.kukarobotics.com

**UK** KUKA Automation + Robotics  
Hereward Rise  
Halesowen  
B62 8AN  
UK  
Tel. +44 121 585-0800  
Fax +44 121 585-0900  
sales@kuka.co.uk





## Index

### A

activateVelocityPlanning(...) 62  
 activateWaitForPauseDuringSetDestination(...) 62, 64  
 API 8  
 Application cycle time, measuring 36  
 Application examples 59  
 Axis-specific actual position, reading out 30  
 Axis-specific end position, specification 30  
 Axis-specific end position, specifying 30  
 Axis-specific interface 30

### C

Cartesian actual position, reading out 32, 33  
 Cartesian destination, setting 31  
 Cartesian destination, specification 31  
 Cartesian interface 31  
 Catalog, Simple Tutorials for DirectServo 60  
 Catalog, Simple Tutorials for SmartServo 59  
 changeControlModeSettings(...) 62, 64  
 Command reference 61  
 CommandInvalidException, error causes 66  
 Controller parameters, changing 38

### D

Debug information, reading out and displaying 29  
 Destination reached 34  
 DirectServo, characteristics 11  
 DirectServo, command reference 63  
 DirectServo, destination setting 64  
 DirectServo, installing 17  
 DirectServo, motion parameters 63  
 DirectServo, runtime parameters 63  
 DirectServoSampleInteractionControl 60  
 DirectServoSampleSimpleCartesian 60  
 DirectServoSampleSimpleJointMotion 60  
 Documentation, industrial robot 7

### E

Exception 8  
 Exception handling routines 65  
 Exceptions, overview 65

### F

Feedback effect 40  
 Feedback effect, troubleshooting 71  
 Frames, synchronizing 23

### H

Handling the real-time system 28  
 Hardware 17  
 HRC 8

### I

Impedance control 37  
 Impedance control cannot be activated 71  
 Impedance control, activating 38

Installation 17  
 Interfaces 11  
 Introduction 7  
 IServoRuntime class 28

### K

Knowledge, required 9  
 KUKA Customer Support 73  
 KUKA Sunrise.Connectivity, overview 11  
 KUKA Sunrise.Workbench 8  
 KUKA timers 36  
 KUKA Sunrise Cabinet 8  
 KUKA Sunrise.OS 8

### L

LBR iiwa 8  
 Live view 13  
 Live view, starting 23  
 Load model, validating 37

### M

Misuse 9

### O

onGoalReachedEvent(...) 34  
 overrideJointAcceleration(...) 61

### P

Path parameters, changing 35  
 Precision interpolator, polling 29  
 Product description 11  
 Programming 25  
 PTP, characteristics 11  
 Purpose 9

### R

Reference coordinate system 31, 33  
 Rendering interface, configuring 22  
 Rendering interface, installing 18  
 Rendering interface, integration of V-REP PRO 18  
 Rendering interface, operation 21  
 Rendering VREP (view) 21  
 Robot base coordinate system 31, 32  
 RoboticsAPI, DirectServo and SmartServo 12  
 Runtime error messages 65

### S

Safety 15  
 Safety instructions 7  
 Second hand effect, troubleshooting 70  
 Seconds hand effect 27  
 Service, KUKA Roboter 73  
 Servo motion in an application context 25  
 Servo motion, terminating 33  
 setAmplitude(...) 38  
 setBias(...) 38  
 setDamping(...) 38

setDestination(...) 62, 64  
 setDestination(...), destination setting, cyclical 26  
 setDestination(...), destination setting, simple 26  
 setDetailedOutput(...) 62, 63  
 setFallTime(...) 38  
 setForceLimit(...) 38  
 setFrequency(...) 38  
 setGoalReachedEventHandler(...) 34, 62, 63  
 setHoldTime(...) 38  
 setJointAccelerationRel(...) 61, 63  
 setJointVelocityRel(...) 61, 63  
 setMaxControlForce(...) 39  
 setMaxPathDeviation(...) 39  
 setMinimumTrajectoryExecutionTime(...) 61, 62, 63, 64  
 setMode(...) 61, 63  
 setNullSpaceDamping(...) 38  
 setNullSpaceStiffness(...) 38  
 setPhaseDeg(...) 38  
 setPositionLimit(...) 38  
 setRiseTime(...) 38  
 setSpeedTimeoutAfterGoalReach(...) 61, 63  
 setStiffness(...) 38  
 setTimeoutAfterGoalReach(...) 61, 63  
 SmartServo vs. DirectServo 43, 50  
 SmartServo, characteristics 11  
 SmartServo, command reference 61  
 SmartServo, destination setting 62  
 SmartServo, installing 17  
 SmartServo, motion parameters 61  
 SmartServo, runtime parameters 62  
 SmartServoSampleInteractionControl 59  
 SmartServoSampleSimpleCartesian 59  
 SmartServoSampleSimpleJointMotion 59  
 Software 17  
 Step response of the systems 42  
 Step response, SmartServo vs. DirectServo, A1 44, 52  
 Step response, SmartServo vs. DirectServo, A2 45, 53  
 Step response, SmartServo vs. DirectServo, A3 46, 54  
 Step response, SmartServo vs. DirectServo, A4 47, 55  
 Step response, SmartServo vs. DirectServo, A5 48, 56  
 Step response, SmartServo vs. DirectServo, A6 49, 57  
 Step response, SmartServo vs. DirectServo, A7 50, 58  
 stopMotion() 33  
 Sunrise.Connectivity DirectServo 11  
 Sunrise.Connectivity Rendering (option) 11, 13  
 Sunrise.Connectivity SmartServo 11  
 Support request 73  
 System reaction time 8  
 System requirements 17

## T

Target group 9

Target velocity, specification 30  
 TCP/IP traffic, slow 69  
 Terms used 8  
 Time recording 36  
 Time stamps, polling 28  
 Timeouts 34  
 Trademarks 8  
 Training 9  
 Transition between control types 39  
 Troubleshooting 69

## U

Use, intended 9  
 User timer 36

## V

V-REP PRO 8, 13

## W

Warnings 7

