

Pioneer Drive Recorder Interface App User Guide

User Guide

<Before You Start>

Please "pair" your iPhone to the Pioneer Drive Recorder via Wi-Fi. If you have any questions regarding Wi-Fi setting, please refer to your device's manual.

< User Guide >



Real-Time Recording/Taking Still Photo



To See/Delete/Save/Share Recorded Videos



Drive Recorder Settings


<To Connect by Wi-Fi>

1. Settings MENU→Setup→ON
2. iPhone Settings
Setup →Wi-Fi→Pioneer_xxx
→ Initial Password

※ Initial SSID : Pioneer_xxx
Initial Password : 88888888



Taking Still Photo/Manual Event Recording

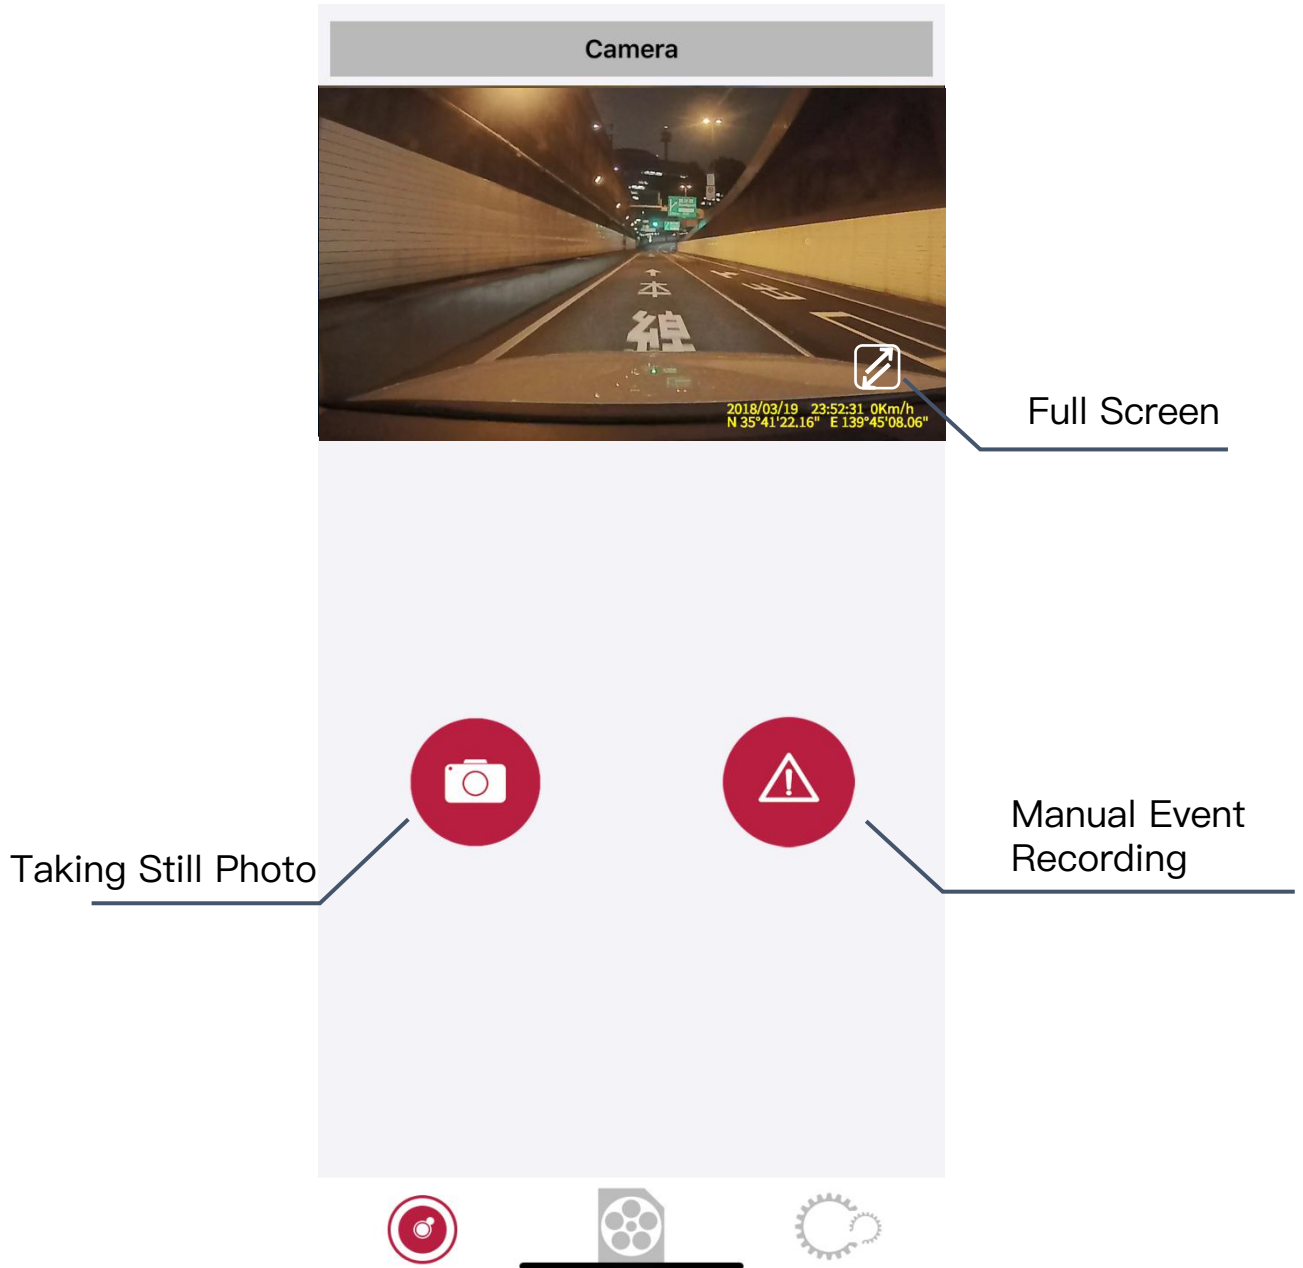


You can also take a still photos or manually record events by tapping the above buttons

※ The Above Function is Disabled When In Full Screen Mode



Select Recorded Data

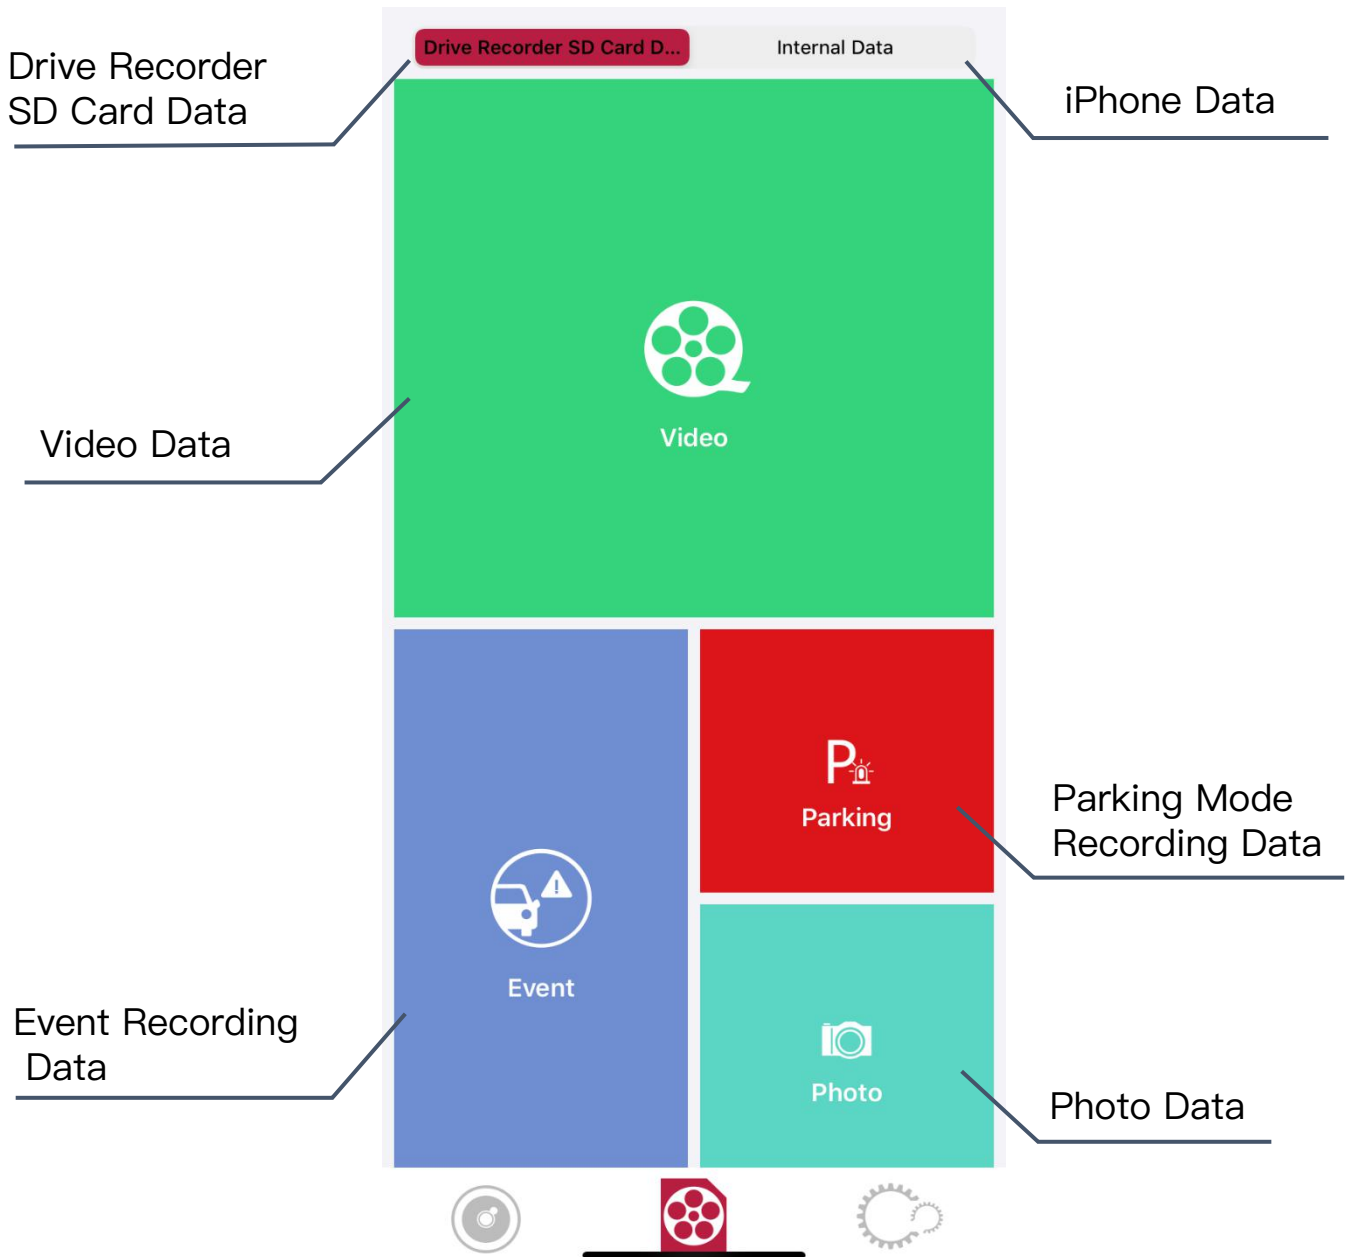

By tapping on the above buttons, you can view data from the main unit's SD Card (Drive Recorder SD Card Data), or from the downloaded data in your phone (Smartphone Internal Data)



View/Delete/Download File (Drive Recorder SD Card Data)

Single Press: Playback

Press and Hold: Download File or move to Delete Selection Page



The video file will play when tapped/selected. By long pressing and hold on the file, screen will proceed to Download and Delete Selection Page

※The above operation is also the same when selecting "Event", "Parking Mode" and "Photo" files



Download/Delete files (Drive Recorder SD Card Data)

The screenshot displays a file management interface for video files. The top bar shows 'No' and 'Video(34)' with a menu icon. The first file, 'PIONEER_20180503_0 90610A.MP4', is selected, indicated by a red checkmark. A line points from the text 'Select File' to this checkmark. Another line points from the text 'Select all Files' to the menu icon. Below the first file are six more files, each with an unselected checkbox. At the bottom, there are two buttons: 'Download' (with a downward arrow icon) and 'Delete' (with a trash can icon). A line points from the text 'Download' to the 'Download' button, and another line points from the text 'Delete' to the 'Delete' button.

No	Video(34)	
<input checked="" type="checkbox"/>		PIONEER_20180503_0 90610A.MP4
<input type="checkbox"/>		PIONEER_20180503_0 90310A.MP4
<input type="checkbox"/>		PIONEER_20180503_0 90010A.MP4
<input type="checkbox"/>		PIONEER_20180503_0 85710A.MP4
<input type="checkbox"/>		PIONEER_20180503_0 85410A.MP4
<input type="checkbox"/>		PIONEER_20180503_0 85109A.MP4
<input type="checkbox"/>		PIONEER_20180503_0 85418A.MP4
		PIONEER_20180503_0 85109A.MP4

Download

Delete

By touching the file items, check marks will appear, indicating file selection. After selection, you can download or delete the files by selecting the respective buttons



To See/Delete/Share Recorded Files (Drive Recorder SD Card Data)

Single Press: Playback

Press and Hold: Share File or move to Delete Selection Page




The video file will play when tapped/selected. By long pressing and hold on the file, screen will proceed to Share and Delete Selection Page

※The above operation is also the same when selecting "Event", "Parking Mode" and "Photo" files



Share File/Delete File (Drive Recorder SD Card Data)

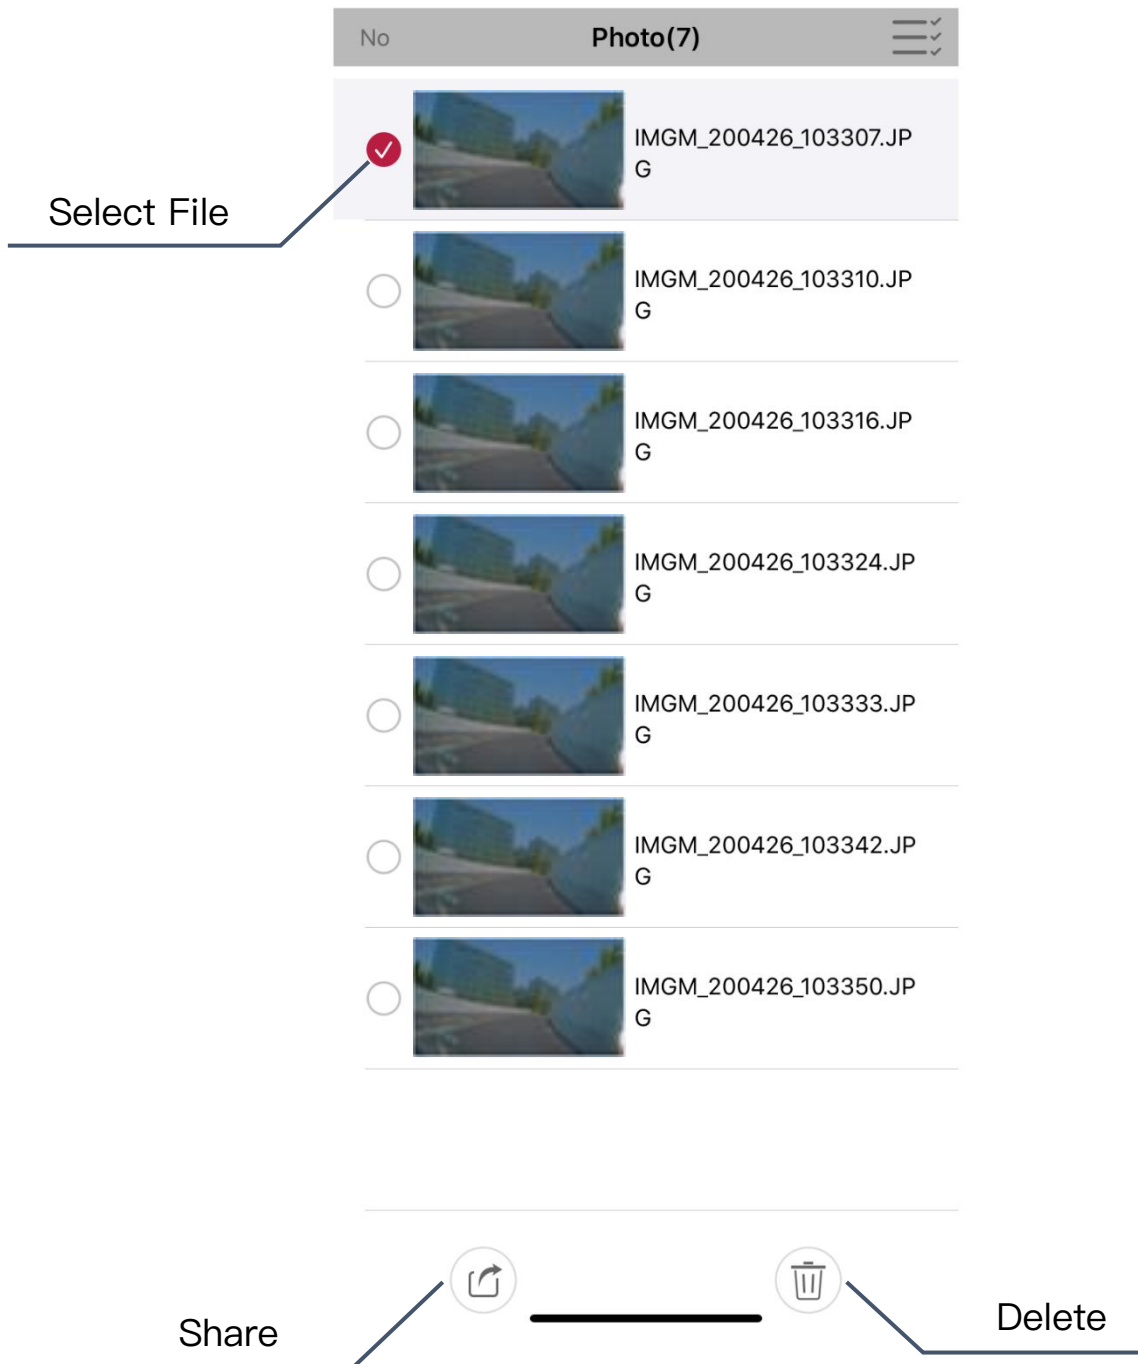


By tapping the file items, check marks will appear, indicating file selection. After selection, you can share or delete the files by tapping the respective buttons

By tapping the "Share" button, the files can be shared through other installed applications on the device



App Selection

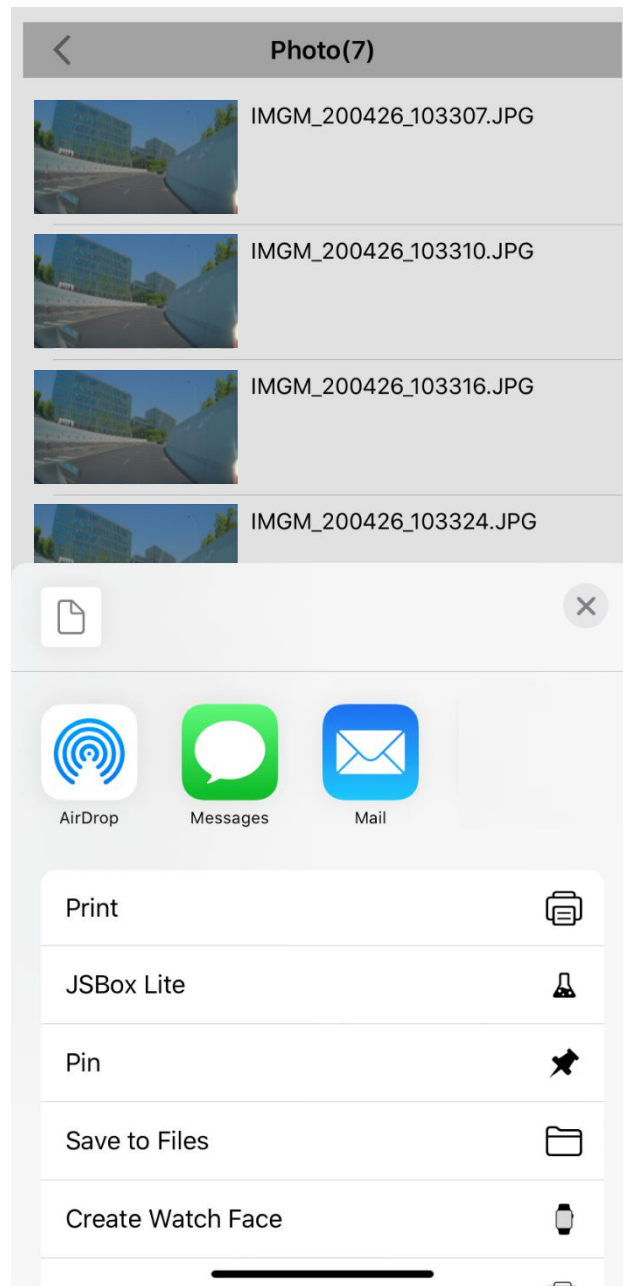

Applications installed on your smartphone device that are available for sharing will appear. The files can be shared through the selected application



Drive Recorder Settings

Record video length

1min

3min

5min

Video Resolution

1080P

720P

SSID

Pioneer_6ba1_d989

>

Password

10606985

>

Restore to Factory Mode>

Version

1.0.0 26-02-2021

How to use>

Information>

App version

v1.0

EULA>



Some settings of the Dash Cam Main Unit can be checked or changed