

# Pioneer Drive Recorder Interface App User Guide

## User Guide

### <Before You Start>

Please "pair" your iPhone to the Pioneer Drive Recorder via Wi-Fi. If you have any questions regarding Wi-Fi setting, please refer to your device's manual.

### < User Guide >



Real-Time Recording/Taking Still Photo



To See/Delete/Save/Share Recorded Videos



Drive Recorder Settings

### <To Connect by Wi-Fi>


1. Settings MENU→Setup→ON
2. iPhone Settings  
Setup →Wi-Fi→Pioneer\_DVR  
→ Initial Password (88888888)

※ Initial SSID : Pioneer\_DVR  
Initial Password : 88888888



## Taking Still Photo/Manual Event Recording

(※DZ500 DZ600)

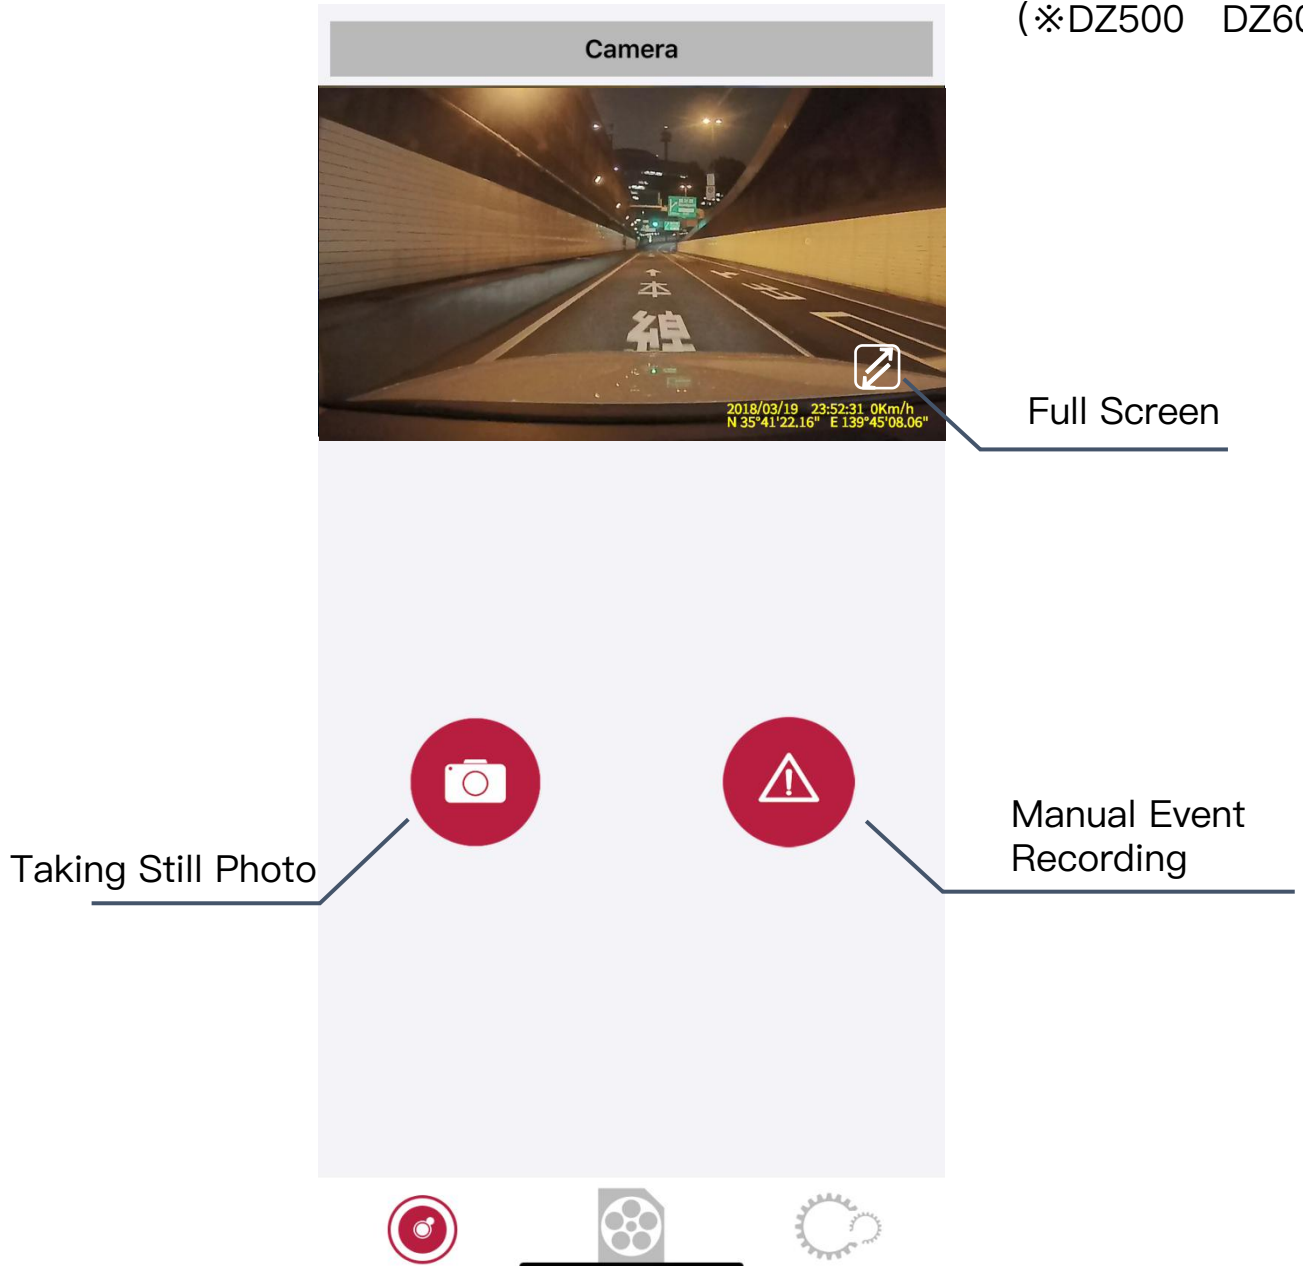


You can also take a still photos or manually record events by tapping the above buttons

※ The Above Function is Disabled When In Full Screen Mode



## Taking Still Photo/Manual Event Recording

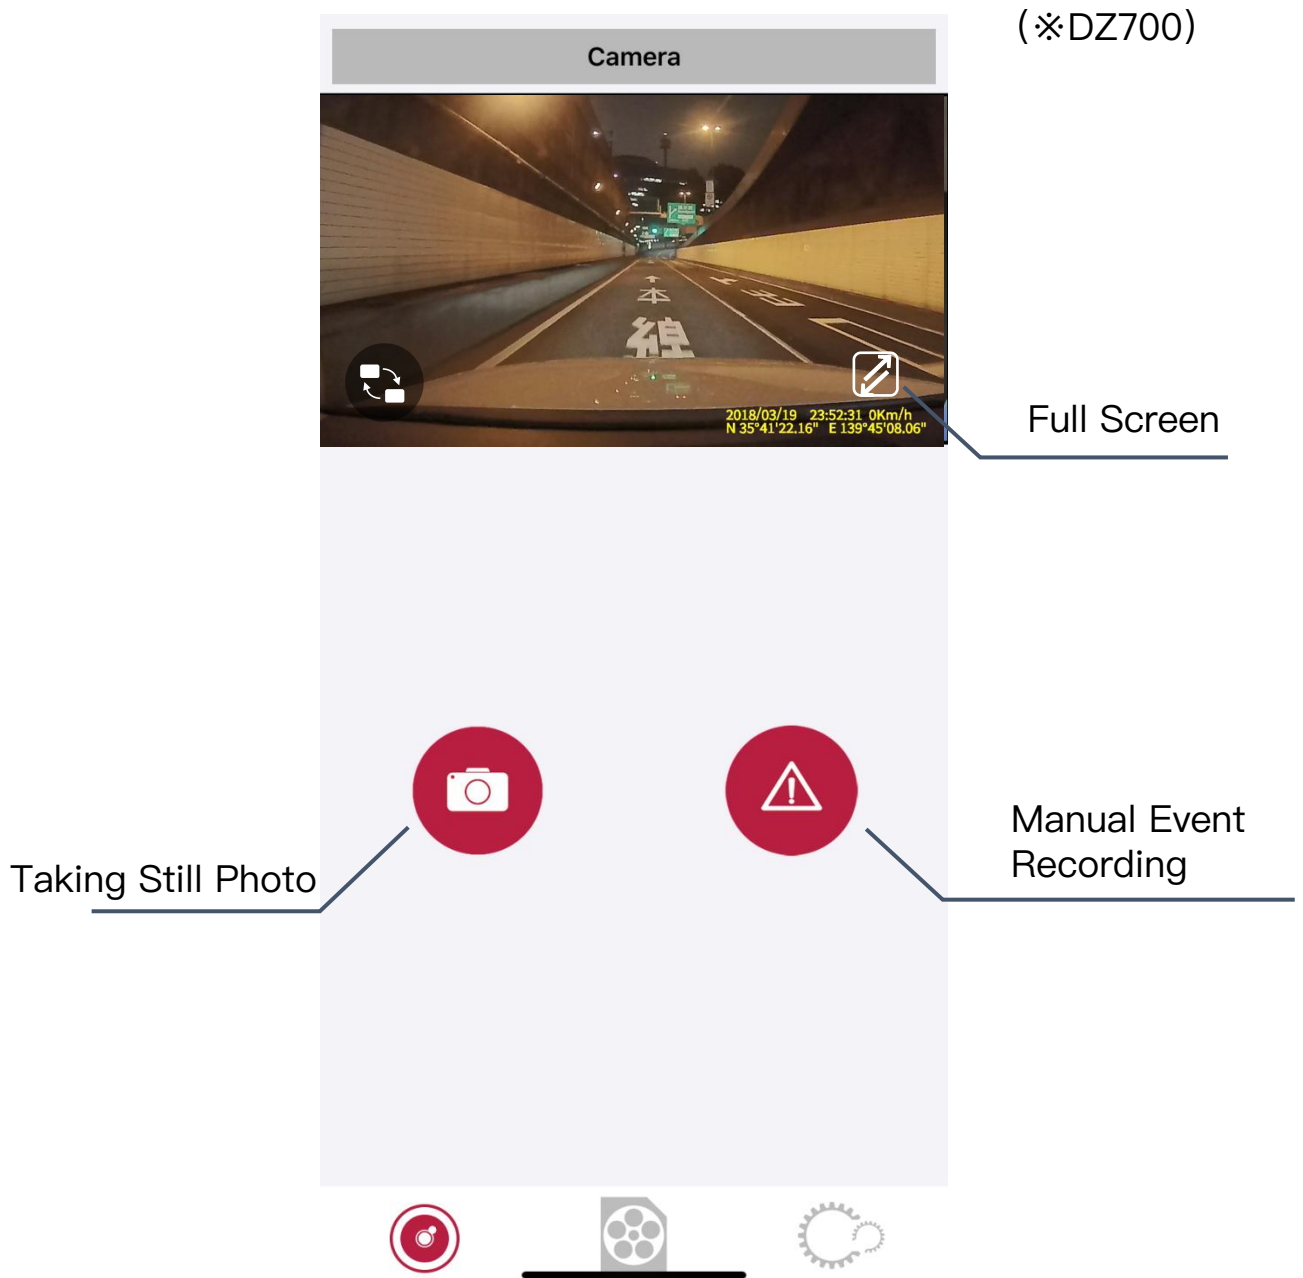


You can also take a still photos or manually record events by tapping the above buttons

※ The Above Function is Disabled When In Full Screen Mode



## Select Recorded Data

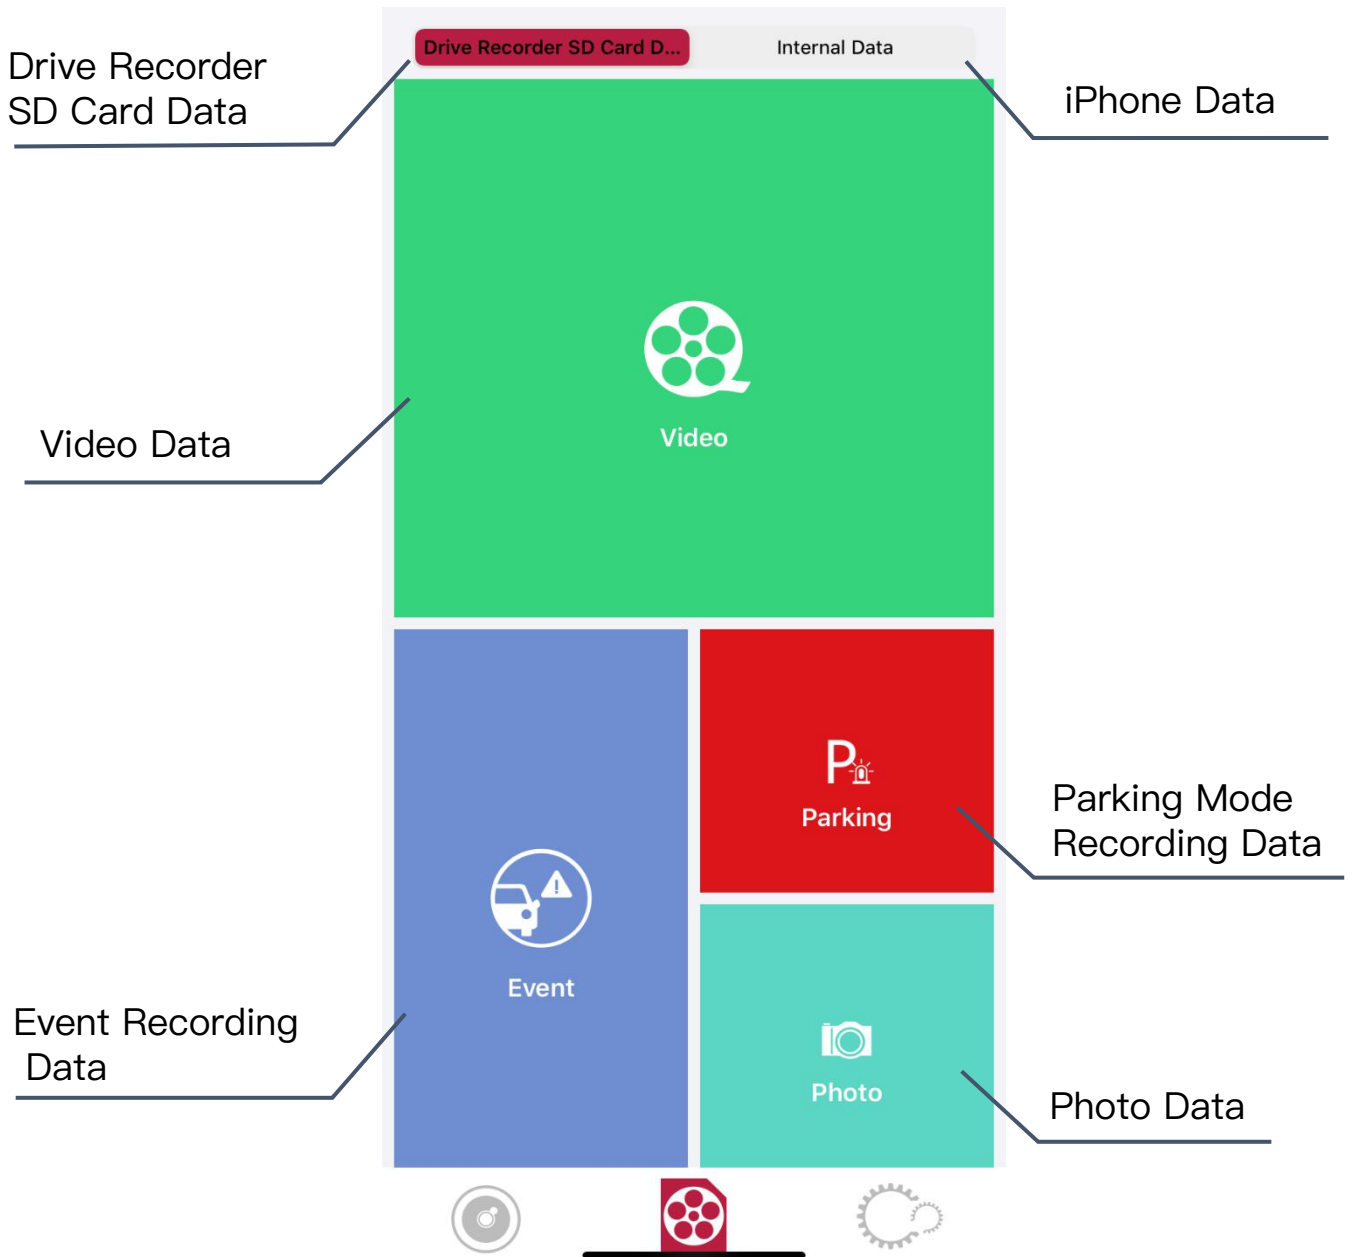

By tapping on the above buttons, you can view data from the main unit's SD Card (Drive Recorder SD Card Data), or from the downloaded data in your phone (Smartphone Internal Data)



## View/Delete/Download File (Drive Recorder SD Card Data)

Single Press: Playback

Press and Hold: Download File or move to Delete Selection Page



The video file will play when tapped/selected. By long pressing and hold on the file, screen will proceed to Download and Delete Selection Page

※The above operation is also the same when selecting "Event", "Parking Mode" and "Photo" files



## Download/Delete files ( Drive Recorder SD Card Data )

The screenshot displays a file management interface for video files. The top bar shows 'No' and 'Video(34)' with a menu icon. The first file, 'PIONEER\_20180503\_0 90610A.MP4', is selected, indicated by a red checkmark. A line points from the text 'Select File' to this checkmark. Another line points from the text 'Select all Files' to the menu icon. Below the first file are six more files, each with an unselected checkbox. At the bottom, there are two buttons: 'Download' (with a downward arrow icon) and 'Delete' (with a trash can icon). A line points from the text 'Download' to the 'Download' button, and another line points from the text 'Delete' to the 'Delete' button.

No	Video(34)
<input checked="" type="checkbox"/>	PIONEER_20180503_0 90610A.MP4
<input type="checkbox"/>	PIONEER_20180503_0 90310A.MP4
<input type="checkbox"/>	PIONEER_20180503_0 90010A.MP4
<input type="checkbox"/>	PIONEER_20180503_0 85710A.MP4
<input type="checkbox"/>	PIONEER_20180503_0 85410A.MP4
<input type="checkbox"/>	PIONEER_20180503_0 85109A.MP4
<input type="checkbox"/>	PIONEER_20180503_0 85418A.MP4
	PIONEER_20180503_0 85109A.MP4

Download

Delete

By touching the file items, check marks will appear, indicating file selection. After selection, you can download or delete the files by selecting the respective buttons



## To See/Delete/Share Recorded Files ( Drive Recorder SD Card Data )

Single Press: Playback

Press and Hold: Share File or move to Delete Selection Page










The video file will play when tapped/selected. By long pressing and hold on the file, screen will proceed to Share and Delete Selection Page



※The above operation is also the same when selecting "Event", "Parking Mode" and "Photo" files



# Share File/Delete File ( Drive Recorder SD Card Data )

Select File

No	Photo(7)	
<input checked="" type="radio"/>	 IMGM_200426_103307.JPG G	
<input type="radio"/>	 IMGM_200426_103310.JPG G	
<input type="radio"/>	 IMGM_200426_103316.JPG G	
<input type="radio"/>	 IMGM_200426_103324.JPG G	
<input type="radio"/>	 IMGM_200426_103333.JPG G	
<input type="radio"/>	 IMGM_200426_103342.JPG G	
<input type="radio"/>	 IMGM_200426_103350.JPG G	

Share   Delete


By tapping the file items, check marks will appear, indicating file selection. After selection, you can share or delete the files by tapping the respective buttons

By tapping the "Share" button, the files can be shared through other installed applications on the device





## App Selection

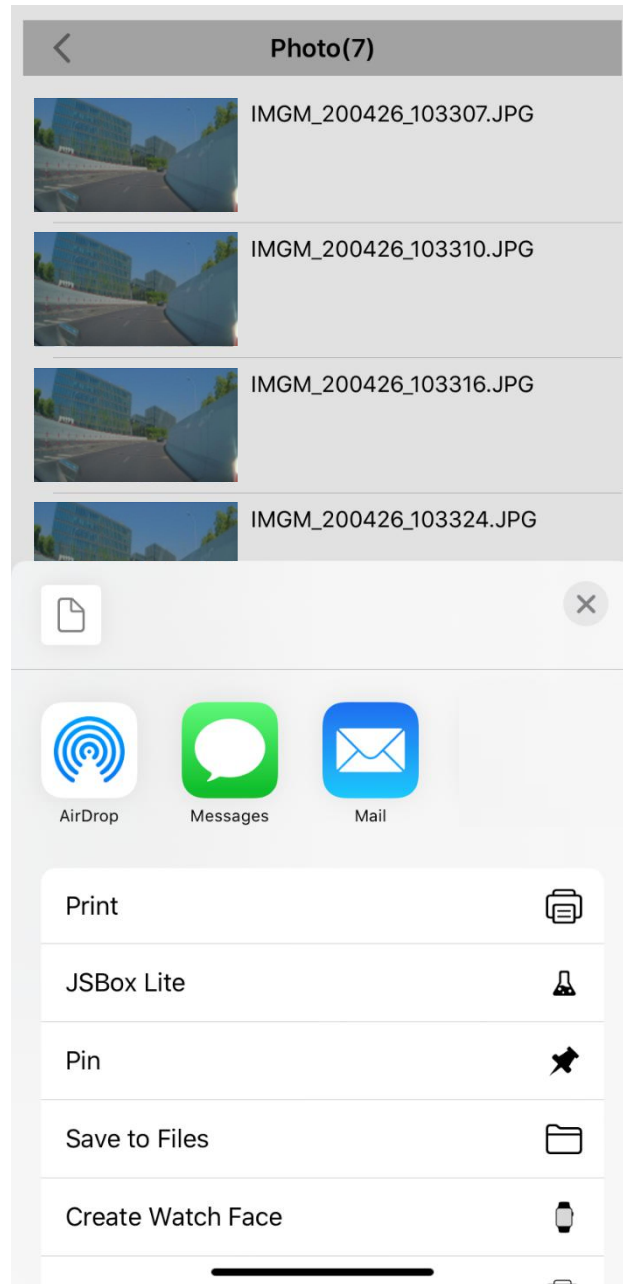

Applications installed on your smartphone device that are available for sharing will appear. The files can be shared through the selected application



# Drive Recorder Settings

(※DZ600)

## Video Clip Length

1 min 3 min 5 min

## Video Resolution

1080P 1080P HDR 720P 720P HDR

## SSID

PIONEER\_DVR >

## Password

88888888 >

## Restore to Factory Mode

>

## Version

2019060006-T7\_B

## How to use

>

## Information

 
>

## App version

v2.1.5

## EULA

>



Some settings of the Dash Cam Main Unit can be checked or changed



# Drive Recorder Settings

(※DZ700)

## Video Clip Length

1 min    3 min    5 min

## Video Resolution

1080P    720P

## SSID

PIONEER\_DVR >

## Password

88888888 >

## Restore to Factory Mode



## Version

2019060014-T2\_B

## How to use



 
## Information



## App version

v2.1.5

## EULA



Some settings of the Dash Cam Main Unit can be checked or changed