




XTAL

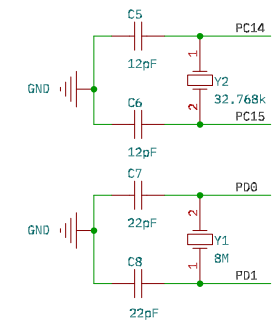


BOOT

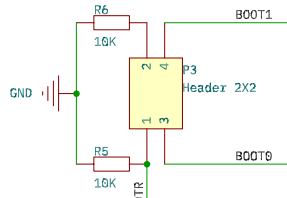


RST

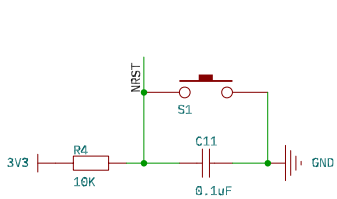


EEPROM

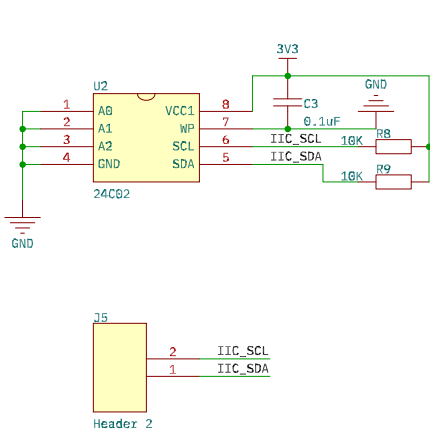


TF CARD

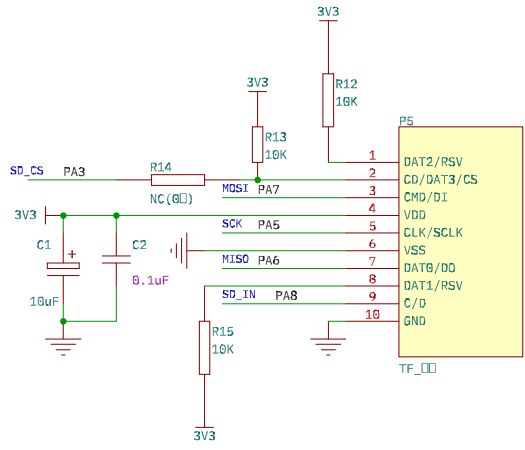


CAN

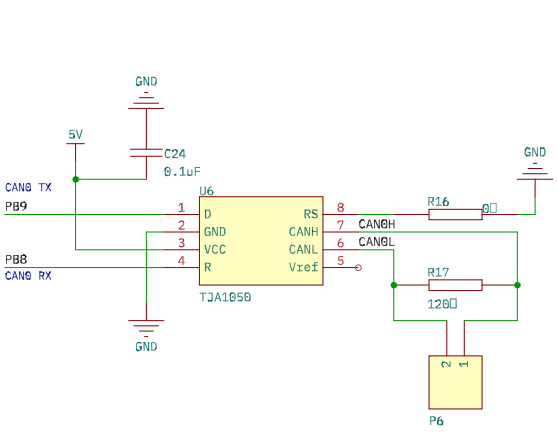


SPI FLASH

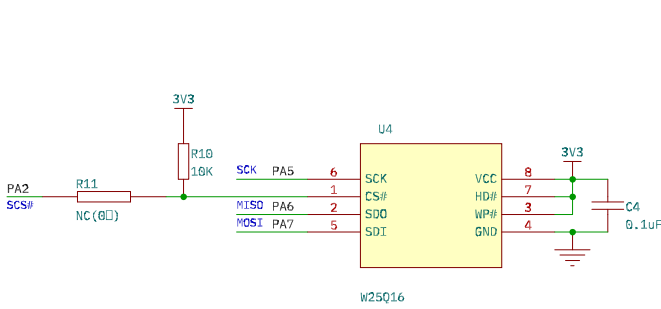


POWER

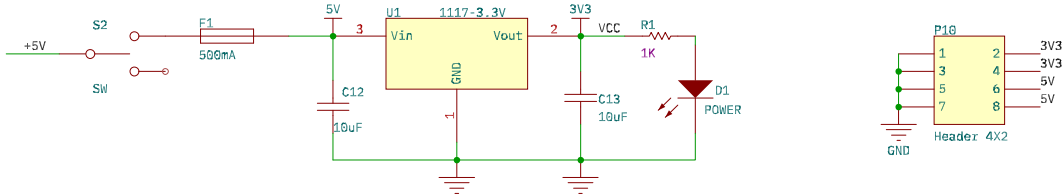


TOUCHKEY

 


SWD

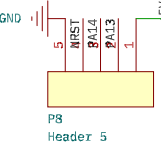


LED

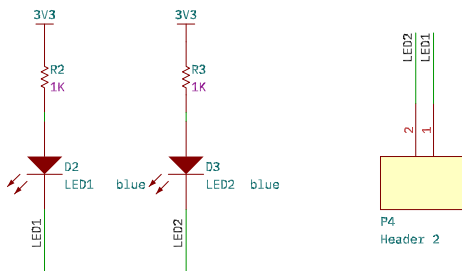


PIN

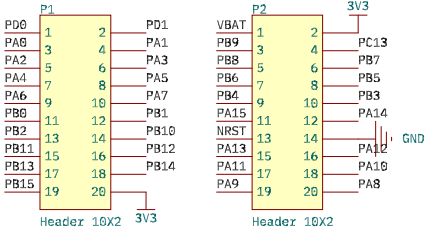


UART

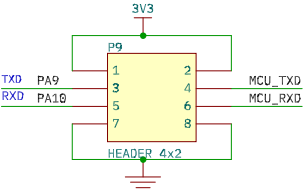

USB

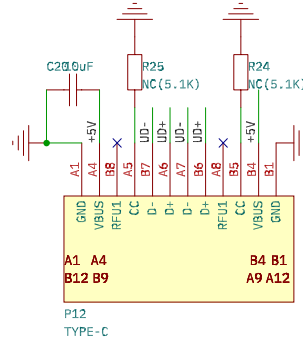

CH340X

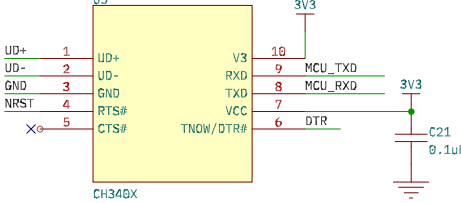

USB

