

Linked procedure demo



Task A123 Air Filter Removal

1. Clear area of loose items and debris.
2. Open the access port using [procedure B5678](#).
3. Remove four bolts and set aside.
4. Loosen the retaining ring.
5. Disassemble the bearing cage using [procedure A334455](#).
6. Remove the cotter pin and discard.
7. Discard the used air filter.
8. Procedure is complete.