

Linked procedure demo



Sub-task A334455 - Disassemble the bearing cage

1. Using a Phillips screwdriver, loosen four exterior screws, but do not remove.
2. With a bearing brush, thoroughly clean away dust, dirt, and other foreign matter from exterior housing.
3. Remove four exterior screws, and set aside.
4. Remove exterior bearing guard.
5. Being careful to avoid contamination, remove the bearing race.
6. Cover exposed machined surfaces with a clear shop cloth.
7. Procedure is complete.