

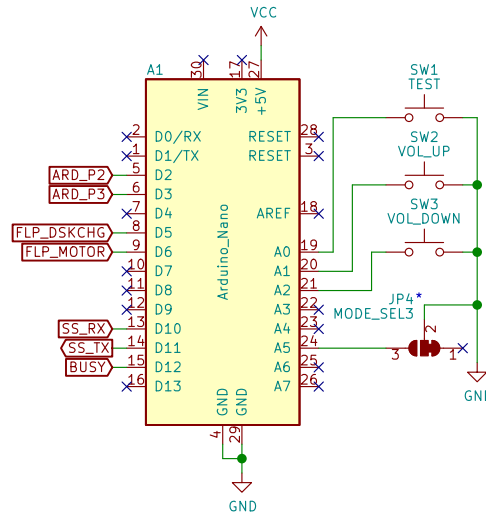
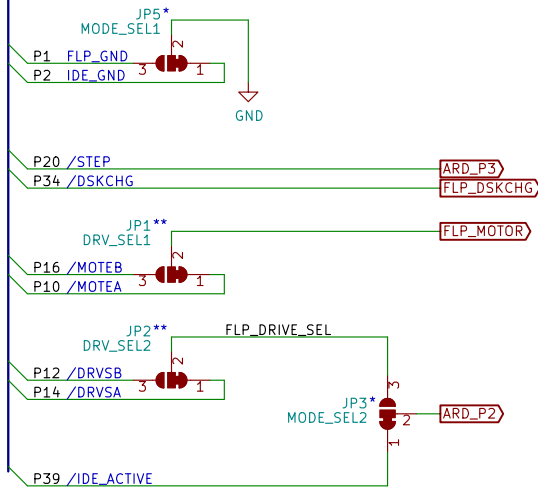


\* Pin 20 when used with IDE should be removed.

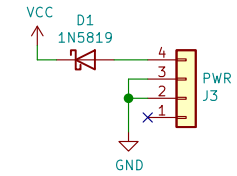

\*MODE\_SEL[1-3] pins 1-2 should be linked when built as IDE activity indicator. 2-3 when used in floppy mode.

\*\* With MODE\_SEL[1-3] pins 2-3, built as floppy mode, then DRV\_SEL[1-2] is used to select which drive to react to (1-2 for drive A, 2-3 for B).

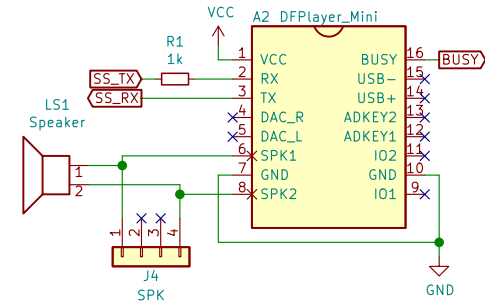

NoiseMaker module for use with 40-pin IDE, alternatively it can be built for use with 34-pin floppy alternatives.

Sheet: /  
File: NoiseMaker.sch

**Title: NoiseMaker**

Size: A4	Date:	Rev: B
KiCad E.D.A. kicad (5.1.8)-1		Id: 1/1