
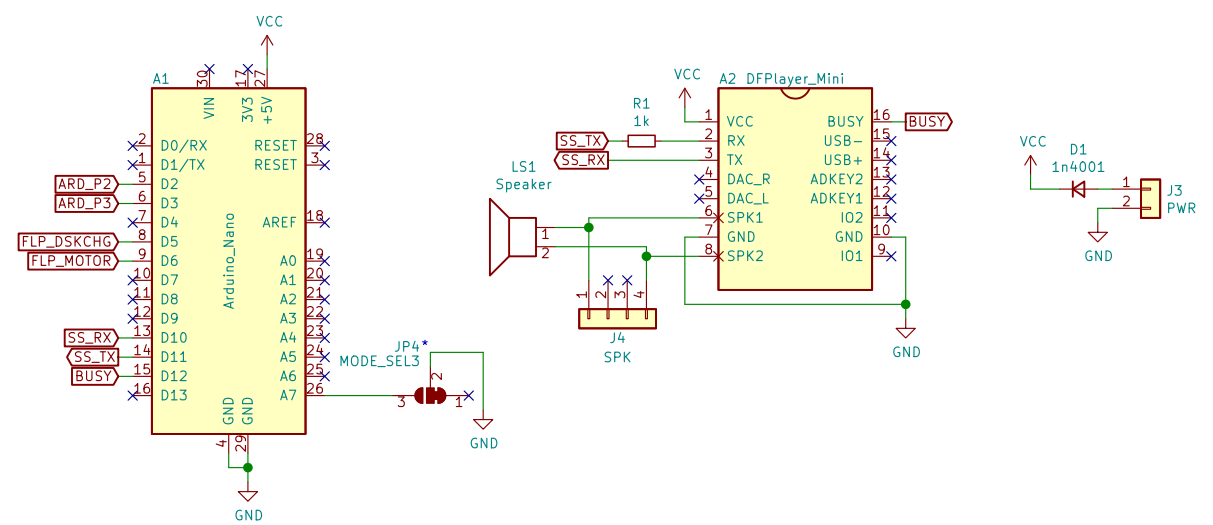


* Pin 20 when used with IDE should be removed.

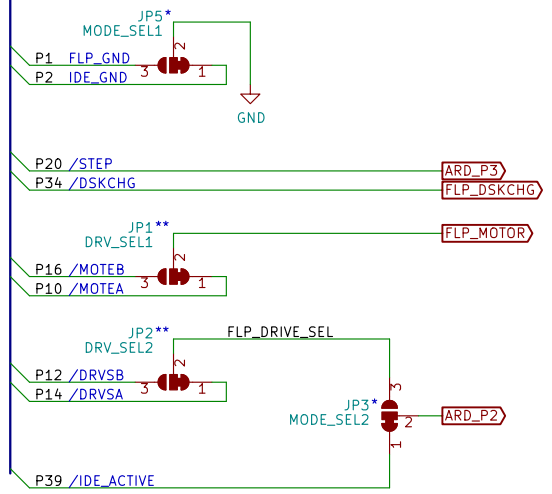

*MODE_SEL[1-3] pins 1-2 should be linked when built as IDE activity indicator. 2-3 when used in floppy mode.

** With MODE_SEL[1-3] pins 2-3, built as floppy mode, then DRV_SEL[1-2] is used to select which drive to react to (1-2 for drive A, 2-3 for B).

Use with IDE-based storage.		
Sheet: /		
File: NoiseMaker IDE.sch		
Title: NoiseMaker IDE		
Size: A4	Date:	Rev: A
KiCad E.D.A. kicad (5.1.8)-1		Id: 1/1