



# **Techmates with Electrokerala**

## **Automatic Hand Sanitizer Dispenser**

### **Mode Changing Guide**

To change the mode please follow the steps

#### **Step -1**

Place your hand in sensible area and then turn on Automatic Sanitizer Dispenser .

#### **Step -2**

##### **To select Mode 1 (2 ml sanitizer)**

Remove the hand when you hear **one beep** sound.

##### **To select Mode 2 (4 ml sanitizer)**

Remove the hand when you hear **two consecutive beep** sounds.

### **To select Mode 3 (6 ml sanitizer)**

Remove the hand when you hear **three consecutive beep** sounds.

### **To select Mode 4 (8 ml sanitizer)**

Remove the hand when you hear **four consecutive beep** sounds.

### **To select Mode 5 (10 ml sanitizer)**

Remove the hand when you hear **five consecutive beep** sounds.

If you selected a mode you can hear a long beep. And then you can hear three consecutive beep sounds. It means you selected a new mode which is different than previously selected.

### **To select Drain Mode (continuous open to drain the tank)**

Remove the hand when you hear **SIX consecutive beep** sounds.

You select a mode other than Drain mode it is selected permanently. Which means when you power off the selected mode is save on memory. Next time you power on the Automatic sanitizer dispenser the machine is in previously selected mode. But last time you selected Drain mode , the next power on will erase that mode.

*Enjoy the touchless world*

*All rights reserved to Techmates*

<https://techmatesproducts.github.io>