



megaTinyCore does not assert DTR.  
So the DTR remain HIGH during UPDI mode.  
When Serial Monitor is open, DTR is asserted  
and go from HIGH to LOW.

Henry Cheung  
Copyright – Tech Studio Design LLP, 2022  
[www.techstudio.design/support](http://www.techstudio.design/support)

**Tech Studio Design LLP**

Sheet: /  
File: SerialUPDI.sch

**Title: tinyUPID with UART**

Size: A4 Date: 2022-03-22

KiCad E.D.A. kicad (5.1.4-0)

**Rev: 1.1**

Id: 1/1