



Soft Start Circuit

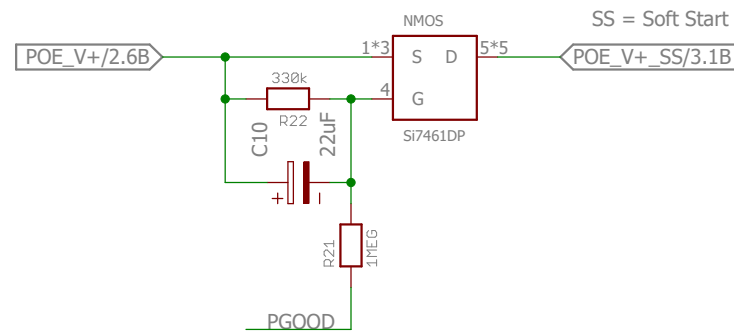

Input voltage selection 5V Flyback Converter

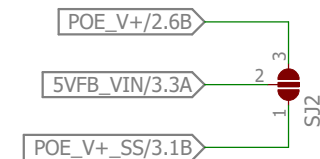

Default: Connect POE_V+_VIN_5VFB with POE_V+_SS