

DEAD POINT INDICATION LIGHT 0) The light of the deadlock indicator will turn on when the transmission is deadlocked.

LONG LIGHT INDICATION LIGHT AND) Long light indicator lights up when you co- the long light of the lighthouse.