

EQUIPMENT AND ADJUSTMENTS

FUEL DEPOSIT COVER To open the lid of the combustibl tank Remove the end of the ventilation tube from the open and turn the lid to the left. Paro cerr the fuel tank cap, turn the ta to the right and squeeze it tightly. Conect then the ventilation tube.