

To

ADJUSTING THE THROTTLE CABLE (1). Turn the lock nut (2. (2)
Adjust the cable set by turning the slider

(O) inward or outward to get the right gap, between 0.5 and 1.0 mm.

(8) After adjusting the set, tighten the control O nut),