

START “ENGINE” SWITCH ELECTRICITY Y)

The starter will start spinning when pre- use this switch,

31