

- (2) Turn the lock nut (O) and turn the regulator (O to get the right gear.
- (3) Minor adjustments can be made with the side regulator of the clutch
pollanca. Or.
- 14) Tighten the lock nut (O).