

MANILLAR RIGHT ENGINE STOP SWITCH) “RUN” position — The ignition circuit is ac “Ivedo and the engine can work.

“OFF” — The power circuit is disabled! and the engine can’t work,

LIGHTING SWITCH (2)

Position “OFF”

Position \*S" — small light and tail light on. “ON” position — headlight and tail light on.