

UB Put the drain nipple and gasket back on

Tighten it by squeezing the nipple with a key Flat.

8): Remove the bolts (O) that hold the cover of the Or give your place.

17) Change the oil ftro (Dpor atro neuveo.